
aıwa



DX-K9900M

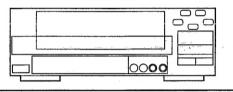



COMPACT DISC PLAYER

• BASIC CD MECHANISM: 6ZG-1 V1DFPNM

• TYPE : HE

SPECIFICATIONS

Disc

Scanning method

Laser

Rotation speed Error correction No. of channels D-A converter Signal-to-noise ratio Harmonic distortion Wow and flutter Low pass filter Input Output

Video signal Video data

Power requirements

Power consumption Dimensions (W \times H \times D) Weight of main unit

Compact disc

Non-contact optical scanner (semiconductor laser application)

Semiconductor laser $(\lambda = 750 - 800 \text{ nm})$

Approx. 500 rpm - 200 rpm (CLV) Cross Interleave, Reed Solomon code

2 channels 1 bit dual 88 dB (1 kHz, 0 dB)

0.03 % (1 kHz, 0 dB) Unmeasurable

8 times digital filter + 3 step analog filter

MIC 1.6 mV (20 k ohms) AUDIO OUT 2.0V (10 k ohms) VIDEO OUT 1V p-p (75 ohms) NTSC/PAL color format (selectable)

MPEG 1 MPEG 1, LAYER 2

110-120 V/220-240 V AC, switchable

50/60 Hz

20 W

360 x 147 x 371 mm

4.9kg

· Design and specifications are subject to change without notice.

• If requiring information about the CD mechanism, see Service Manual of 6ZG-1, S/M Code No. 09-975-198-0FP.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserståling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saataa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herin may result in hazardous radiation exposure.

ATTENTION

L'utillisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL

Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.


CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT

Precaution to replace Optical block

(KSS-213B)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use the clothes do not touch the diode.

 After the connection, remove solder shown in figure below.

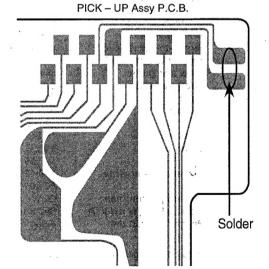

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO. KA	NRI DESCRIPTION D.		REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC	87-A20-373-010 86-VMB-608-010 87-070-083-010 87-020-903-010	IC,TA2011S IC,LC866440-5E27 IC,GP1U281X IC,NJM7805FA		SW263 SW264 SW265 SW266 SW267	87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080	SW, TACT SW, TACT SW, TACT SW, TACT	EVQ 214 04M EVQ 214 04M EVQ 214 04M EVQ 214 04M EVQ 214 04M
TRANSISTOF	R			SW268 VR101 VR102 X201	87-036-215-080 86-VMB-603-010 82-NK7-616-010 87-030-345-080	VR,RTRY VR,10KB	EVQ 214 04M 1KB RK11K1130 RK11K1130 5.760MHZ CST MGW
	87-026-233-080 89-327-125-080 87-026-608-080 89-213-702-010 89-111-625-080	C-TR,DTA114TK C-TR,2SC2712GR C-TR,DTC123JK TR,2SB1370E C-TR,2SA1162GR		PT C.B	88-906-341-110 87-010-196-080		E, 6P 1.25 340MM 0.1-25 Z F C2012
	89-213-302-080	TR,2SB1330Q		C303 C304 C305	87-010-196-080 87-010-178-080 87-010-178-080	C-CAP,S	0.1-25 Z F C2012 1000P-50 K B 1000P-50 K B
DIODE	87-020-465-080 87-A40-184-090 87-017-104-080 87-001-574-080	DIODE, 1SR139-200	•	C306 C308 C309 C315 C321	87-010-236-080 87-010-196-080 87-010-263-080 87-010-263-080 87-010-247-080	C-CAP,S ĈAP,E 1 CAP,E 1	000-10 M SME 0.1-25 Z F C2012 00-10 SME 00-10 SME 00-50 M SME
FRONT C.B	88-917-221-210	ZENER, HZS4C2 FF-CABLE, 17P 1.25 220MM		C322 C323 C324 C325 C326	87-010-178-080 87-010-247-080 87-010-263-080 87-010-405-080 87-010-405-080	CAP,E 1 CAP,E 1 CAP,E 1	1000P-50 K B 00-50 M SME 00-10 SME 0-50 M SME 0-50 M SME
C101 C102 C103	88-907-181-110 87-010-374-080 87-010-405-080 87-010-374-080	FF-CABLE, 7P 1.25 180MM CAP,E 47-10 M SME CAP,E 10-50 M SME CAP,E 47-10 M SME		PR301 PR302 PT301 SW301	87-A90-093-080 87-A90-247-080 86-VMB-605-010 87-036-317-010	PROTECTO PT,6VM-	OR,3A 491SERIES 6 OR,0.315A 60V 491 11H -2-3 SDKGA4-R
C104 C105 C111 C112 C121	87-010-401-080 87-010-196-080 87-010-178-080 87-010-178-080 87-010-805-080	CAP,E 1-50 M SME C-CAP,S 0.1-25 Z F C2012 C-CAP,S 1000P-50 K B C-CAP,S 1000P-50 K B C-CAP,S 1-16 Z F		⚠ T1 ⚠ T2	82-304-743-010 82-304-743-010		
C201 C202 C203 C204 C205	87-010-263-080 87-010-196-080 87-010-196-080 87-010-374-080 87-010-374-080	CAP,E 100-10 SME C-CAP,S 0.1-25 Z F C2012 C-CAP,S 0.1-25 Z F C2012 CAP,E 47-10 M SME CAP,E 47-10 M SME					
C206 C207 C221 C222 C301	87-010-197-080 87-012-140-080 87-010-401-080 87-010-403-080 87-010-878-090	C-CAP,S 0.01-25 K B C-CAP,S 470P-50 J CH CAP,E 1-50 M SME CAP,E 3.3-50 M SME CAP,E 6800-16 SME					
FL201 J101 J102 L201 LED251	86-VMB-601-010 87-099-389-010 87-099-389-010 87-003-102-080 87-A90-339-080	FL,25U48101TA JACK,3.5 BLK ST W/O SW JACK,3.5 BLK ST W/O SW COIL,10UH K LAL02 LED,SEL2510C TP1 PGRN					
LED252 LED253 LED254 LED255 LED256	87-A90-339-080 87-A90-339-080 87-A90-339-080 87-017-785-080 87-017-785-080	LED, SEL2510C TP1 PGRN LED, SEL2510C TP1 PGRN LED, SEL2510C TP1 PGRN LED, SEL4214S RED LED, SEL4214S RED					
LED257 LED258 LED259 SW251 SW252	87-017-785-080 87-017-785-080 87-017-785-080 87-036-215-080 87-036-215-080	LED, SEL4214S RED LED, SEL4214S RED LED, SEL4214S RED SW, TACT EVQ 214 04M SW, TACT EVQ 214 04M					
SW253 SW254 SW255 SW256 SW257	87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080	SW,TACT EVQ 214 04M SW,TACT EVQ 214 04M SW,TACT EVQ 214 04M SW,TACT EVQ 214 04M SW,TACT EVQ 214 04M					
SW258 SW259 SW260 SW261 SW262	87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080 87-036-215-080	SW, TACT EVQ 214 04M SW, TACT EVQ 214 04M SW, TACT EVQ 214 04M SW, TACT EVQ 214 04M SW, TACT EVQ 214 04M					


Oチップ抵抗部品コード/CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち Chip Resistor Part Coding 88----桁表示 A 抵抗部品コード Figure Resistor Code 抵抗值 Value of resistor

チップ抵抗 Chip resistor

C	mp resision								
Г	容量	種類	許容誤差	記号	寸法/Dim	ensions ((mm)		抵抗コード : A
	Wattage	Type	Tolerance	Symbol	外形/Form	L	W	t	Resistor Code : A
	1/16W	1608	± 5%	CJ	L-L-	1.6	0.8	0.45	108
	1/10W	2125	± 5%	CJ		2	1.25	0.45	118
	1/8W	3216	± 5%	CJ	T Y	3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

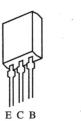

2SB1330Q








2SB1370




2SA1162 2SC2712 DTA114TK DTC123JK

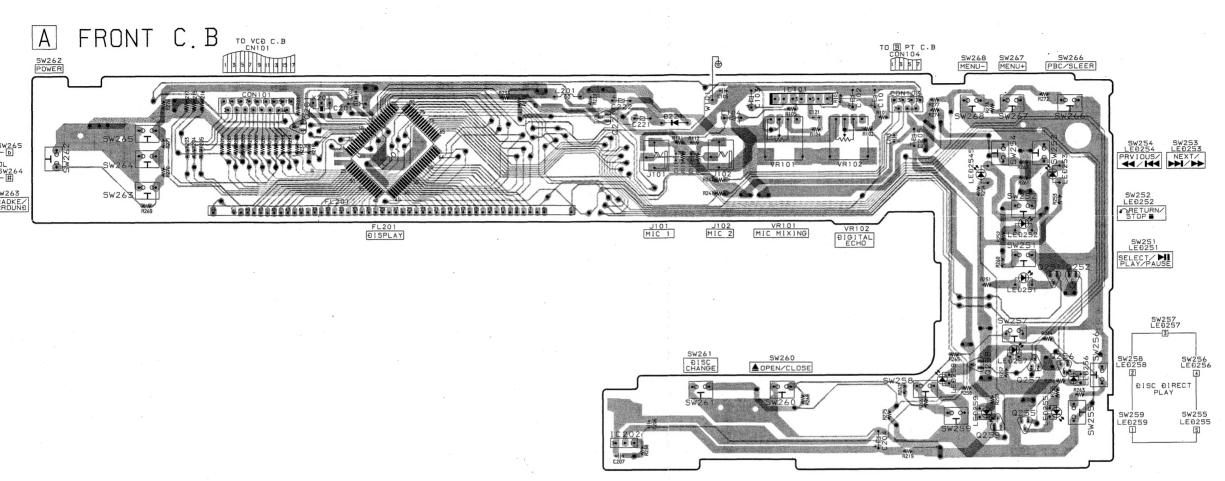

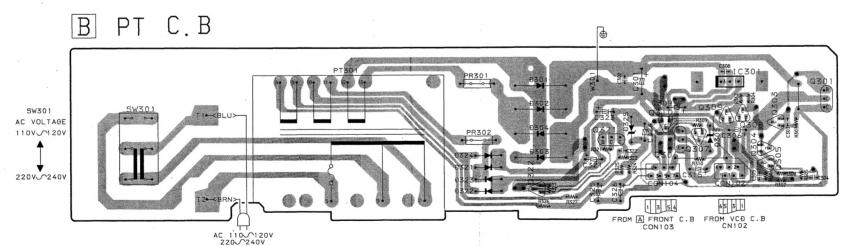


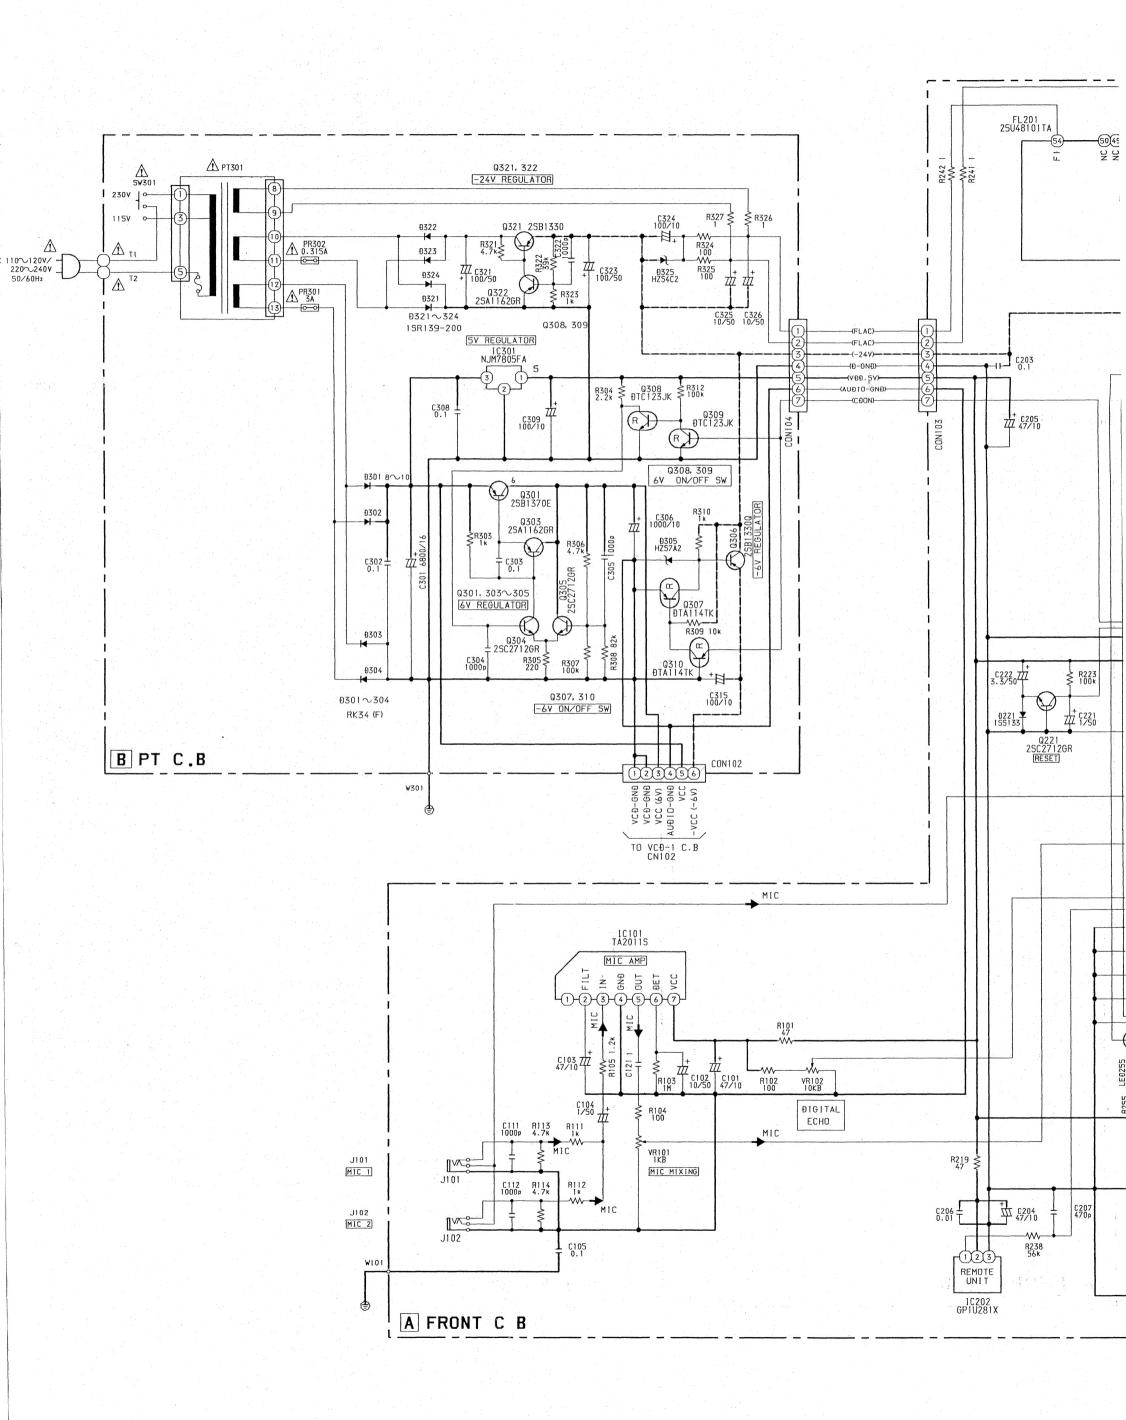

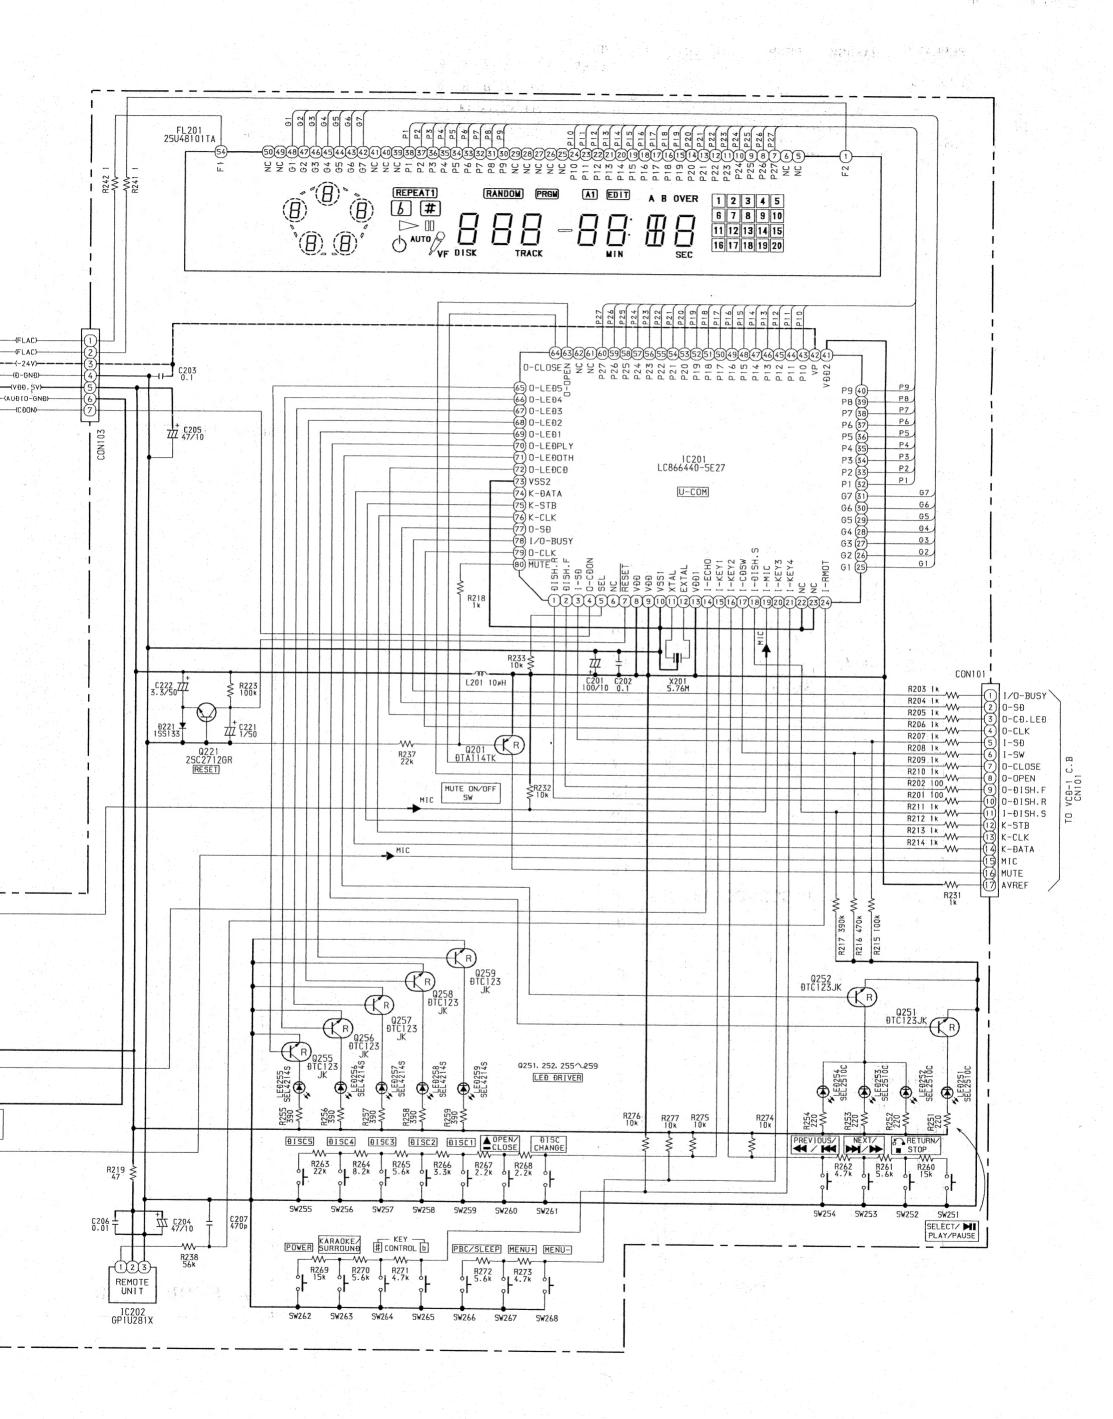

TO THE MOTE PROPERTY OF THE PROPERTY CONTRACTOR


FL GRID ASSIGNMENT & ANODE CONNECTION

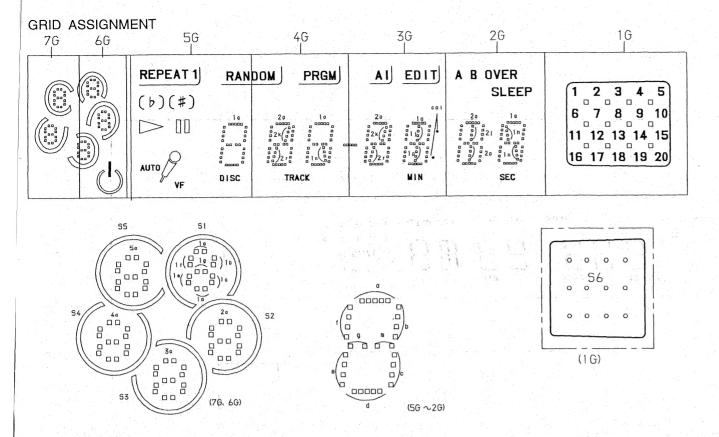


ANODE CONNECTION

	7G.	6G	5G	4G	3G	2G	1 G
PI		(h	-	2 d	2 d	20	20
P2	S	3	۷F	2 e	2 e	2 e	19
P3	30	. 3d	8	2 r	2 r	2p	18
P4	3e		OTUA	2 c	2 c	2 c	17
P5	3	C	\triangleright	29	2 g	29	16
Р6	3	g		2 m	2 m	2 m	15
P7	3 f		Ь#	21	2 f	21	14
Р8	3	b	(b)	2k	2k	21	13
P9	54		(#)	2ь	2 b	2b	12
P10	52	2	- - 1	20	2 a	2 a	11
P11	4a, 4d	2a, 2d			100		10
P12	40	20	DISC	TRACK	MIN	SEC	9
P13	4 c	2 ₪	1 d	1 d	1 d	1 d	8
P14	4 g	29	1 e	1 e	1 e	1 e	7
P15	41	21		1 n	1 p	1 n	6
P16	4 b	2b	1 c	1 c	1 c	1 c	5
P17	5	5	1 g	1 g	1 g	1 g	4
P18	5	1	1 m	1 m	1 m	1 m	3
P19	5a, 5d	1 a, 1 d	1 f	11	11	11	2
P20	5⊕	1 e	-		11	1 h	1
P21	5c	1 c	16	16	1 b	16	56
P22	50	10	1 a	1 a	1 a	1 a	
P23	5 f	1 f	(RAN	(мов	(A I)	A	-
P24	5 b	1 b	RAN	DOM	Al	В	-
P25	-	- <u> </u>	REPEATI		COI	SLEEP	
P26	-		REPEAT	(PRGM)	ŒĐIT)	OVER	
P27		-	1	PRGM	EDIT		

BLOCK DIAGRAM (FRONT/PT)

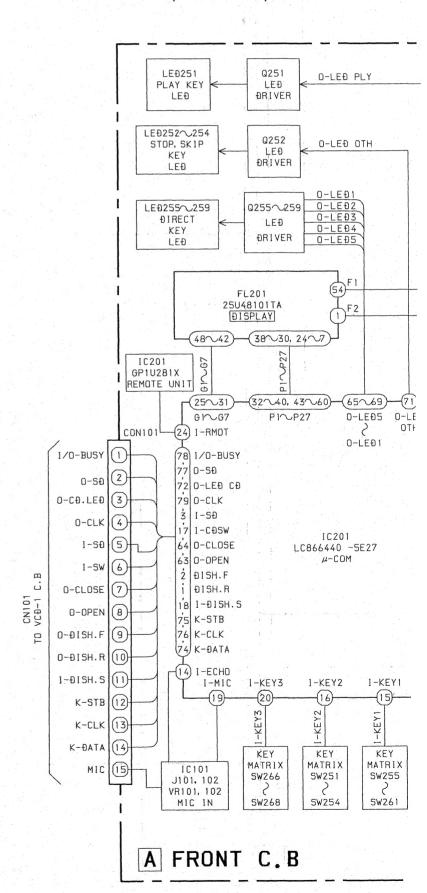


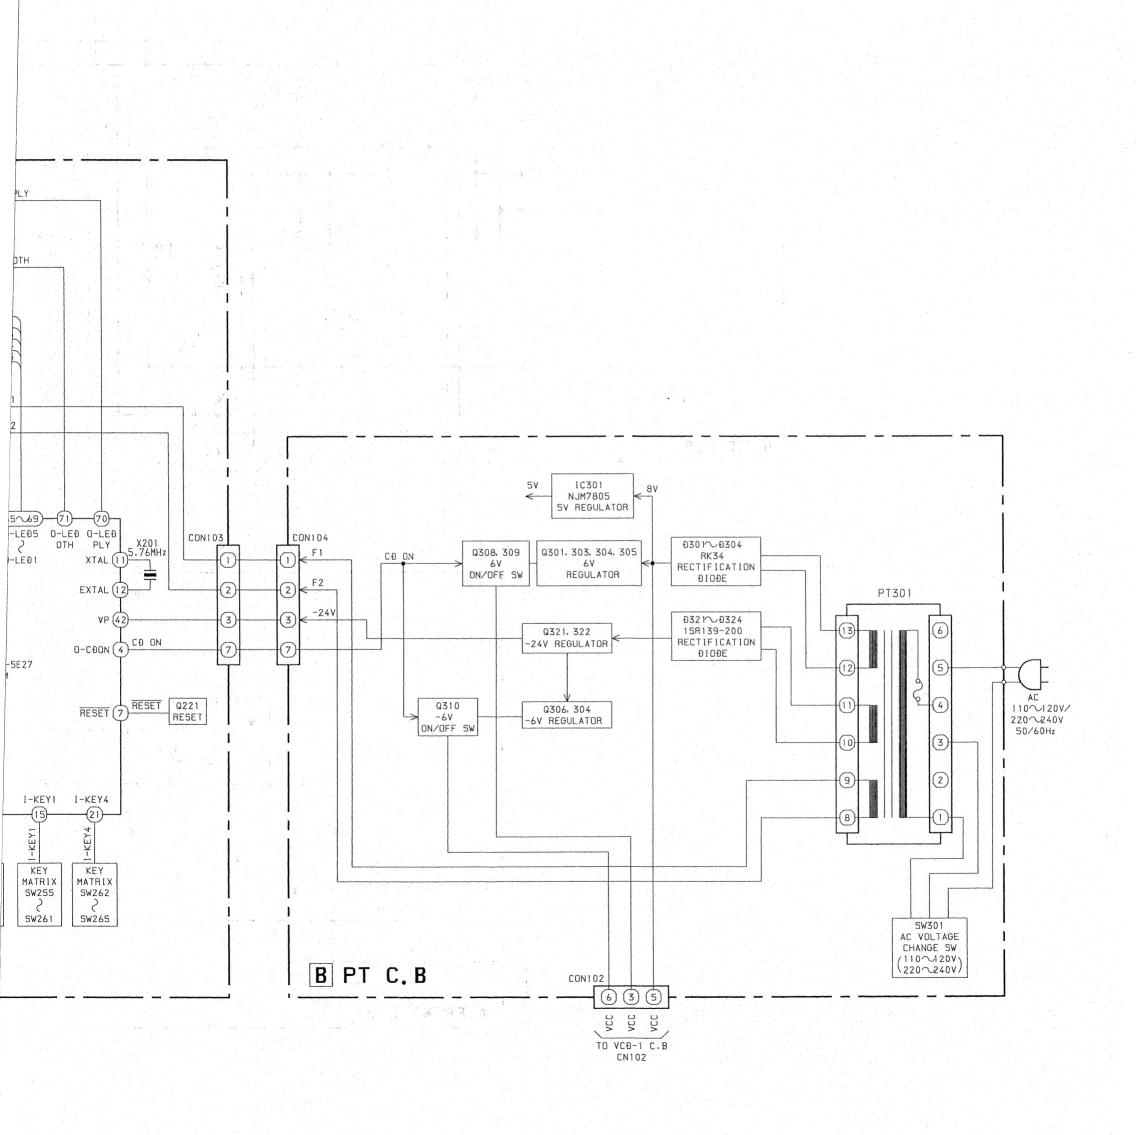

IC DESCRIPTION

IC, LC866440-5E27

Pin No.	Pin Name	I/O	Description
1	DISH.R	0	CD turntable reverse control.
2	DISH.F	0	CD turntable forward control.
3	I-SD	I	Serial data from MPEG u com.
4	O-CDON	0	CD system ON/OFF switch.
5	SEL	I	Audio out level. "H": 30% down." L": 0dB.
6	NC	-	Not used.
7	RESET	I	Reset input.
8,9	VDD	_	5V power supply.
10	VSS 1	-	GND.
11	XTAL	_	5.76MHz oscillator circuit.
12	EXTAL	_	5.70191112 Oscillator circuit.
13	VDD 1	-	5V power supply.
14	I-ECHO	I	A/D numerical echo volume input.
15	I-KEY1	I	Key matrix input.
16	I-KEY2	I	key manx input.
17	I-CDSW	I	CD switch signal input.
18	I-DISH.S	I	CD turntable sensor signal input.
19	I-MIC	I	A/D numerical mic volume input.
20	I-KEY3	I	Y
21	I-KEY4	· I	Key matrix input.
22,23	NC	-	Not used.
24	I-RMOT	I	Remote control signal input.
25~31	G1~G7	0	FL GRID output G1~G7.
32~40	P1~P9	0	FL SEGMENT output P1~P9.
41	VDD 2	-	5V power supply input.
42	VP	-	Power supply input for FL display.
43~60	P10~P27	0	FL SEGMENT output P10~P27.
61,62	NC	_	Not used.
63	O-OPEN	0	CD tray open control output.
64	O-CLOSE	0	CD tray close control output.
65~69	O-LED5~O-LED1	0	Direct key signal output.
70	O-LED PLY	0	PLAY key signal output.
71	O-LED OTH	0	STOP/SKIP key signal output.
72	O-LED CD	0	CD key signal output.
73	VSS 2	-	GND
74	K-DATA	0	Serial data signal for KARAOKE IC (IC,TC9409).
75	K-STB	0	Serial strobe signal for KARAOKE IC (IC,TC9409).
76	K-CLK	0	Serial clock signal for KARAOKE IC (IC,TC9409).
77	O-SD	0	Serial data signal to MPEG u com.
78	I/O-BUSY	I/O	Communication busy signal between system control u com and MPEG u com.
79 .	O-CLK	0	Serial clock signal to MPEG u com.
80	MUTE	0	Audio mute control output.

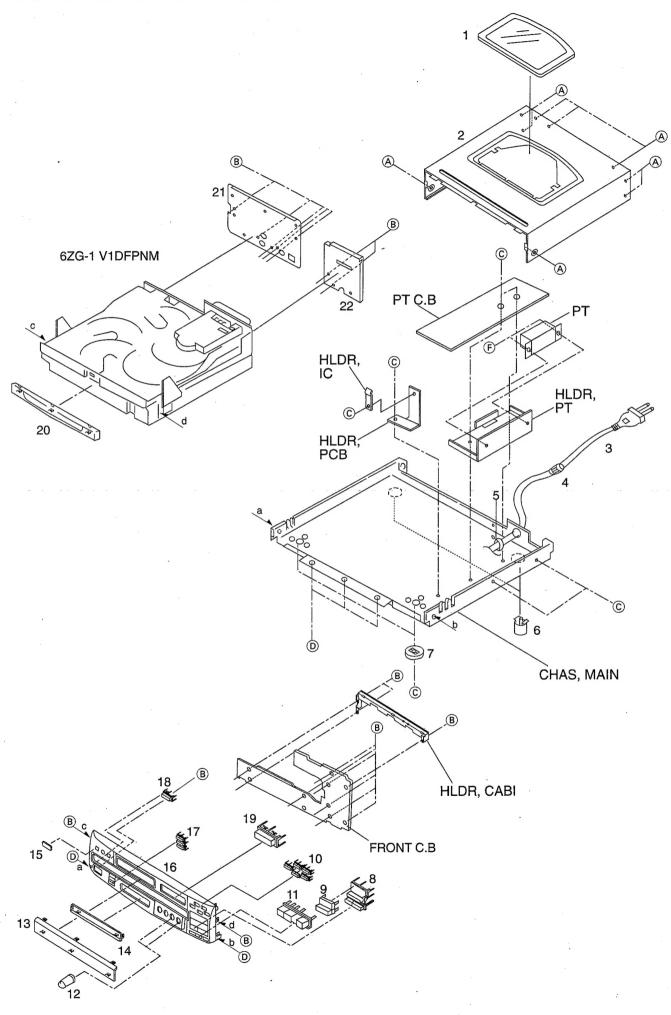

MECHANICAL PARTS LIST 1/1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF.	NO.	PART NO.	KANRI I	DESCRIPTION
* * * * * * * * * * * * * * * * * * * *	3 4	86-MA3-042-010 86-VMB-002-010 87-050-079-010 87-085-185-010 87-A90-333-010	AC CORD A	
1	7 8 9	87-085-214-010 81-DS2-018-110 86-VMB-015-010 86-VMB-014-010 86-VMB-013-010	FOOT KEY, STOP KEY, PLAY	
1 1 1	L2 L3 L4	86-VMB-010-010 83-NF6-020-010 86-VMB-008-010 86-VMB-004-010 82-NE8-032-010	KNOB, MIC WINDOW, DI PANEL, TRA	C ISP
1 1 1	L7 L8 L9	86-VMB-001-010 86-VMB-012-010 86-VMB-009-010 86-VMB-011-010 86-VMB-007-010	KEY, KARAC KEY, POWER KEY, OPEN	OKE R
2	22 A B	86-VMB-018-010 86-VMB-019-010 87-067-641-010 87-067-703-010 87-067-584-010	PANEL, REF UTT2+3-8 BVT2+3-1(W/O SLOT BLK W/O SLOT
		87-591 - 09 4-41 0 87-067 - 585-010	QIT+3-6 BVTT+4-6	

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

•	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
_	1 2 3 4 5	86-VMB-901-010 86-NM1-701-010 87-A90-312-010 87-050-103-010 87-034-786-010	PLUG, CON CORD, PIN	6AS15 VERSION WTN-1557R1

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION

REFERENCE NAME

ANT C-CAP C-CAP TN C-COIL

ANTENNAS

CAP, CHIP CAP, CHIP TANTALUM COIL, CHIP

DIODE, CHIP DIODE, CHIP FET, CHIP C-DI C-DIODE C-FET C-FOTR FILTER, CHIP JACK, CHIP C-JACK

C-LED C-RES C-SLIDE SW

LED, CHIP RES, CHIP SFR, CHIP SLIDE SWITCH, CHIP SWITCH, CHIP

C-TR C-VR C-ZENER CAP, CER CAP. E

C-SW

TRANSISTOR, CHIP VOLUME, CHIP ZENER, CHIP CAP, CERA-SOL CAP, ELECT

CAP, M/F CAP, TC CAP, TC-U CAP, TN CERA FIL

CAP, FILM CAP, CERA-SOL CAP, CERA-SOL SS CAP, TANTALUM FILTER, CERAMIC

CF ĎĹ E/CAP FILT FLTR

FILTER, CERAMIC DELAY LINE CAP, ELECT FILTER FILTER

FUSE RES MOT P-DIODE P-SNSR-P-TR

RES, FUSE MOTOR PHOTO DIODE PHOTO SENSER PHOTO TRANSISTOR

POLY VARI PPCAP PT PTR, RES RC

VARIABLE CAPACITOR CAP, PP POWER TRANSFORMER REMOTE CONTROLLER

RES NF RESO SHLD SOL

RES, NON-FLAMMABLE RESONATOR

SHIELD SOLENOID SPKR SPEAKER

SW, LVR SW, RTRY SW, SL TC CAP THMS

SWITCH, LEVER SWITCH, ROTARY SWITCH, SLIDE CAP, CERA-SOL THERMISTOR

TRIMER TUN-CAP VIB, CER VIB, XTAL

TRANSISTOR CAP, TRIMMER VARIABLE CAPACITOR RESONATOR, CERAMIC RESONATOR, CRYSTAL

VR ZENER

VOLUME DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION

REFERENCE NAME

ADHESHIVE A7 BAR-ANT BAT BATT

SHEET ADHESHIVE AZIMUTH BAR-ANTENNA BATTERY

BRG BTN CAB CHAS

BEARING BUTTON CABINET CASSETTE CHASSIS

CONT CRSR CUSH

COLLAR CONTROL CURSOR CUSHION CUSHION

DIR DUBB FLY-WHL DIRECTION DUBBING FRONT LOADING FLYWHEEL FRONT

FUN G-CU HDL HIMERON HINGE, BAT **FUNCTION** G-CUSHION HANDOL CLOTH HINGE, BATTERY

HLDR HT-SINK IB IDLE IND, L-R

HOLDER HEAT SINK INSTRUCTION BOOKLET IDLER INDICATOR, L-R

KEY, CONT KEY, PRGM KNOB, SL LBL LID, BATT

KEY, CONTROL KEY, PROGRAM KNOB, SLIDE LABEL LID, BATTERY

LID, CASS LVR P-SP PANEL, CONT PANEL, FR LID, CASSETTE LEVER P-SPRING PANEL, CONTROL PANEL, FRONT

PULLY, LOAD MO RBN ŠEG

PROGRAM PULLY, LOAD MOTOR RIBBON SPECIAL SEGMENT

SHLD-SH SL SP-SCREW SHEET SHIELD-SHEET SLIDE SPRING

SPACER, BAT SPR SPR-P

SPECIAL-SCREW

SPR-PC-PUSH

SPACER, BATTERY SPRING P-SPRING P-SPRING, C-PUSH T-SPRING

TERM TRIG TUN VOL

TERMINAL TRIGGER TUNING VOLUME WASHER

WHL WORM-WHL WHEEL WORM-WHEEL

サービス	ス技術ニュース
サービス技術ニュース 番号 連絡内容 G G G G G G G G-	
G	
G	
G	

アイワ株式会社 AIWA CO.,LTD.


9620450,750038

alwa







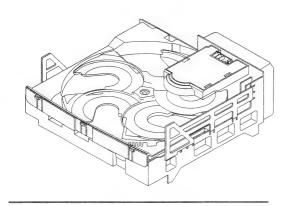

6ZG-1 6ZG-1S 6ZG-1S1 6ZG-1VZ

CD MECHANISM

BASIC CD MECHANISM: 3ZG-2 C4N/C6N

TYPE: English, Japanese

BASIC NA	ME	DERIVATION NAME					
	*1	D	F		Managari Am		-
6ZG-1	*2	D	F	G		V1	V2
	*3	D	F	sinenditie	Р	V1	_
6ZG-1S		D	F	OVCHARA.		*******	
6ZG-1S1		D	F	delibelle	- MARTINGO	organisms.	_
6ZG-1VZ		D	F	_		All plants	-

- This mechanism has various derivation. Derivation name is indicated by the Service Manual for eath model.
- 本体マニュアルはBASIC CD MECHANISMのサフィックがDERIVA-TION NAMEです。組み合わせて使用して下さい。

TABLE OF CONTENTS

安全に修理 (補修) をするために/光学ブロック交換時の注意PROTECTION OF EYES FROM LASER BEAM DURING SERVICING/	
Precaution to replace Optical block	4
SUFFIX NOTE	5, 6
TRANSISTOR ILLUSTRATION	
DISASSEMBLY INSTRUCTIONS	8-13
How to Adjust Rotating Phase of the Gear, Main Cam/ギヤ、メインカムの位相の合わせ方	10, 13
6ZG-1 (D, F)	
ELECTRICAL MAIN PARTS LIST	14 15
WAVE FORM	
BLOCK DIAGRAM	
WIRING	
SCHEMATIC DIAGRAM	
IC BLOCK DIAGRAM	
IC DESCRIPTION	
TEST MODE	
ELECTRICAL ADJUSTMENT	
MECHANICAL EXPLODED VIEW 1/1	
MECHANICAL PARTS LIST 1/1	41
CD MECHANISM EXPLODED VIEW/LIST (3ZG-2 C4N)	42
6ZG-1 (D, F, G, V1, V2)	40 44
ELECTRICAL MAIN PARTS LISTBLOCK DIAGRAM	
WIRING	45, 40
SCHEMATIC DIAGRAM-1	49 50
WAVE FORM	
SCHEMATIC DIAGRAM-2	53. 54
IC BLOCK DIAGRAM	55
IC DESCRIPTION	56-76
ELECTRICAL ADJUSTMENT	77-82
CD MECHANISM EXPLODED VIEW/LIST (3ZG-2 C6N)	83
· · · · · · · · · · · · · · · · · · ·	
670 4 (D. F. D.)/4)	
6ZG-1 (D, F, P, V1)	04.05
ELECTRICAL MAIN PARTS LIST	84, 85
ELECTRICAL MAIN PARTS LIST	86
PLECTRICAL MAIN PARTS LIST	86 87, 88
ELECTRICAL MAIN PARTS LIST	
ELECTRICAL MAIN PARTS LIST NOTE	
ELECTRICAL MAIN PARTS LIST NOTE	
ELECTRICAL MAIN PARTS LIST	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F)	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 100-105 106, 107 108 109, 110 111, 112 113, 114
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 100-105 106, 107 108 109, 110 111, 112 113, 114
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F)	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 100-105 106, 107 108 111, 112 113, 114 115-122 123, 124
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 100-105 106, 107 108 109, 110 111, 112 113, 114 115-122 123, 124
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK DIAGRAM	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 100-105 106, 107 108 109, 110 111, 112 113, 114 115-122 123, 124
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRIČAL MAIN PARTS LIST BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRIČAL MAIN PARTS LIST BLOCK DIAGRAM WIRING	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRIĈAL MAIN PARTS LIST BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRIĈAL MAIN PARTS LIST BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM WIRING	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM WAVE FORM	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC BLOCK DIAGRAM-2 IC BLOCK DIAGRAM	
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK_DIAGRAM WIRING SCHEMATIC DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC BLOCK DIAGRAM-2 IC BLOCK DIAGRAM IC DESCRIPTION	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105 106, 107 108 111, 112 113, 114 115-122 123, 124 125, 126 127, 128 129, 130 131, 132 133, 134 135, 136 137 138-159
ELECTRICAL MAIN PARTS LIST NOTE BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC DESCRIPTION TEST MODE ELECTRICAL ADJUSTMENT 6ZG-1S/S1 (D, F) ELECTRICAL MAIN PARTS LIST WAVE FORM BLOCK DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM IC DESCRIPTION TEST MODE 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST BLOCK-DIAGRAM WIRING SCHEMATIC DIAGRAM WIRING SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-1 WAVE FORM SCHEMATIC DIAGRAM-2 IC BLOCK DIAGRAM-2 IC BLOCK DIAGRAM	86 87, 88 89, 90 91, 92 93, 94 95, 96 97, 98 99 100-105 106, 107 108 111, 112 113, 114 115-122 123, 124 125, 126 127, 128 129, 130 131, 132 133, 134 135, 136 137 138-159 160, 161

製品を安全に修理(補修)するために

修理の前に「製品を安全に修理(補修)するために」をよくお読みの上、正しく修理を行ってください。 このサービスマニュアルでは、お客様が製品を安全に正しくお使いいただき、お客様や他の人々への危 害や財産への損害を未然に防止するために、修理する場合必ず下記の項目をお守りください。



この表示を無視して、誤った取り扱いをすると、人が傷害を負ったり物的損害が発 生する可能性があります。

- 1.注意事項を守ること。
- サービスの時、特に注意を要する箇所については、 キャビネット、シャーシ、部品などにラベルや捺印で 注意事項を表示しています。これらの注意書きおよび 取扱説明書等の注意事項を必ずお守りください。
- 2.スペック銘板・注意ラベル・ヒューズラベル等の表示文字を汚して読みにくくしないこと。
- 3.基板パターンの裏付け部品の修理等を行う場合、パターンや部品にボンド(KE-3490)を塗布してプリント基板にしっかり固定すること。

4.サービス後は安全点検すること。

- サービスのために取り外したネジ、部品、配線がもと どおりになっているか、サービスした個所の周辺で劣 化させてしまったところがないかなどを点検してく ださい。(ワイヤー半田付け、引き回し、束線、種類、空 間距離)
- 5.修理(補修)時に、レーザー出力部に接近しないこと。 やむなく接近する場合は、目を閉じてください。レー ザービームに接近することが必要になった場合、光学 ピックアップブロックの対物レンズの表面から30cm 以上離れていることを確認してください。

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserståling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

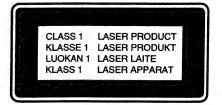


光学ブロック (KSS-213B) 交換時の注意

光学系ブロック内のレーザーダイオードは、衣服や人体に帯電した静電荷等で電位差を生じることにより、 静電破壊することがあります。人体アース、作業台の アースをとり、衣服が触れぬよう注意して下さい。

1) コネクターを接続後、右図に示すハンダ付けを取り除いて下さい。

PICK-UP Assy P.C.B

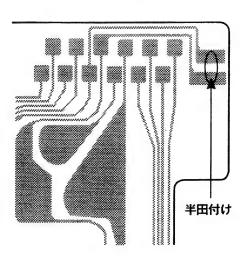


Precaution to replace Optical block (KSS-213B)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the right figure.

PICK-UP Assy P.C.B

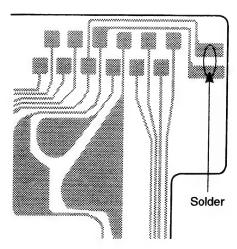

本体のマニュアルのBASIC CD MECHANISMのサフィックスが DERIVATION NAMEです。本サービスマニュアルは、DERIVATION NAMEを組み合わせて使用して下さい。

BASIC CD MECHANISM: 6ZG-1 DF SUFFIX (DERIVATION NAME)

BASIC NAME: 6ZG-1 (ORIGINAL MODEL)

6ZG-1S (SONY IC HIGH END MODEL) 6ZG-1S1 (SONY IC LOW END MODEL)

6ZG-1VZ (SANYO IC MODEL)

BASIC NA	ME	DERIVATION NAME						
	*1	D	F	_	_	_	_	
6ZG-1	*2	D	F	G	_	V1	V2	
	*3	D	F		Р	V1	_	
6ZG-1S		D	F	_	_		_	
6ZG-1S1		D	F	_	_		_	
6ZG-1VZ		D	F	_	_	_	_	

NOTE: ・*1、*2、*3は、BASIC NAMEは同じですが、基板構成が異なります。

BOAR BASIC NAME	D NAME	CD MAIN	LED C.B	T-T C.B C.B	CD MOTOR C.B	VCD MAIN C.B	VIDEO SW C.B
	*1	0	0 .	0	0	_	_
6ZG-1	*2	_	0	0	0	0	0
	*3		0	0	0	0	_
6ZG-1S/S1		O .	0	0	0	_	_
6ZG-1VZ			0	0	0	0	0 .

NOTE: ・*2と*3は、使用している基板が異なります。本マニュアルでは*2を「V1」「V2」、*3を「V1P」と表記します。

DERIVATION NAME

G: Supporting the CD graphic feature

D: Digital output function

F: CD WINDOW Flash function (LED: AMBER/GREEN)

P: Audio out pin jack type

V1: Supporting the video CD functionV2: Supporting the video CD function

This is the SERVICE MANUAL for the BASIC CD MECHANISM of BASIC NAME: 6ZG-1. This BASIC NAME includes the following models as shown under the SUFFIX name: DERIVATION NAME. Please use this manual with the separate SERVICE MANUAL for DERIVATION NAME.

BASIC CD MECHANISM: 6ZG-1 DF,
SUFFIX
(DERIVATION NAME)

BASIC NAME: 6ZG-1 (ORIGINAL MODEL)

6ZG-1S (SONY IC HIGH END MODEL) 6ZG-1S1 (SONY IC LOW END MODEL) 6ZG-1VZ (SANYO IC MODEL)

BASIC NA		D	ERIVATI	ON NAM	IE		
	*1	D	F		_	_	_
6ZG-1	*2	D	F	G	_	V1	V2
	*3	D	F	_	Р	V1	_
6ZG-1S		D	F	_		_	
6ZG-1S1		D	F	_	_		
6ZG-1VZ		D	F	_	_	_	_

NOTE: • *1 and *2, *3 have the same BASIC NAME but the board structures are different.

BOARD	NAME	CD MAIN	LED C.B	T-T C.B	CD MOTOR	VCD MAIN	VIDEO SW
BASIC NAME		OD IIIAII	C.D	C.B	C.B	C.B	C.B
	*1	0	0	0	0	-	_
6ZG-1	*2		0	0	0	0	0
	*3	annea.	0	0	0	0	_
6ZG-1S/S1		0	0	0	0	_	_
6ZG-1VZ			0	0	0	0	0

NOTE: • The boards having the asterisk mark *2 and *3 use the different boards.

These circuit boards are identified the *2 boards as "V1", "V2" while the *3 board as "V1P" in this manual.

DERIVATION NAME

G: Supporting the CD graphic feature

D: Digital output function


F: CD WINDOW Flash function (LED: AMBER/GREEN)

P: Audio out pin jack type

V1: Supporting the video CD function

V2: Supporting the video CD function

TRANSISTOR ILLUSTRATION

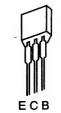

2SA933S



ECE

2SA1015

2SC1815

2SC2001

2SD2172

2SD655

CSD655




2SA1037 S 2SA1162

2SA1362


2SC2712

2SC3326


DTA114TK DTA123JK DTA144EK DTC114EK DTC114TK DTC124XK DTC143TK

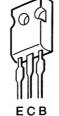

2SA1357

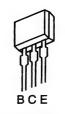


2SB1329

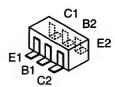

HN1A01F HN1C01F HN1C03FB


DISASSEMBLY INSTRUCTIONS


- 1. ピックアップの交換方法
 - TRAYをオープンさせる。 stopperを矢印の方向へ押し、SHAFT SLED半分だけ抜く。
 - 2) GEAR MAIN CAMを反時計方向 ("a"の方向) に回し、Fig-1のようにCDメカを持ち上げる。
 - 3) SHAFT SLEDを抜く。
 - 4) CDメカを下げてPICK UPを交換する。
 - 5) CDメカをFig-1のように上げて、SHAFT SLEDを取り付ける。

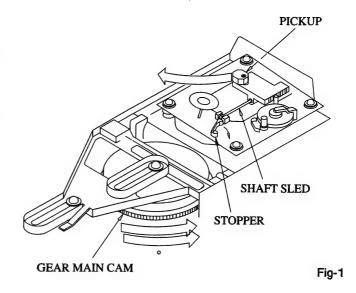

2. 5巻チェンジャーブロックの外し方 (Fig-2)

- 1) CD基板のFFC2本を外し、ビス5本を外す。
- 2) 5巻チェンジャーブロックを後から持ち上げて外 す。(PANEL TRAYを外さなくても、5チェン ジャーブロックを後から外すことができる。)

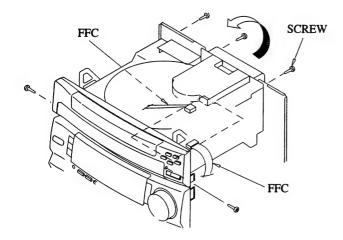


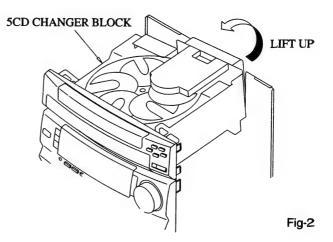


3. TRAYの分解 組立て方法

3-1. 分解方法

- 1) CHAS MECHA (部のPLATE GEARのボスを外側 (矢 印"b"方向) に強く押す。(Fig-3) (TRAYが少しせり出すのを確認する)
- 2) TRAYをオープン位置まで引き出す。
- 3) FFC を抜き、両サイドのCHAS MECHツメ (2ケ所) を押してTRAYを外す。(Fig-4)

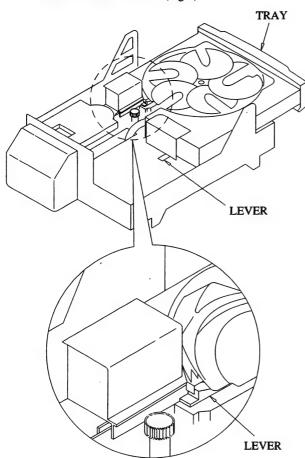

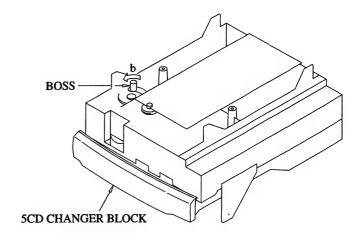



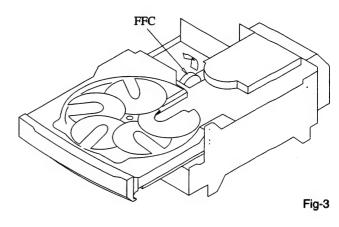


Fig-4

3-2. 組立て方法

- 1) LEVER TRAYがFig-5の位置で、CDメカが下がっていることを確認する。
- 2) TRAY をCHAS MECHAのレールに沿って 組み込む。
- 3) 半分までTRAYを組み込んだらFFCを差し、TRAY を最後まで押し入れる。(Fig-6)

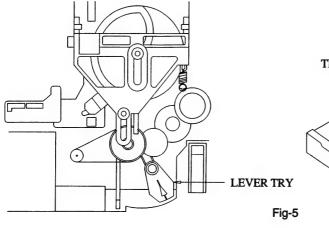


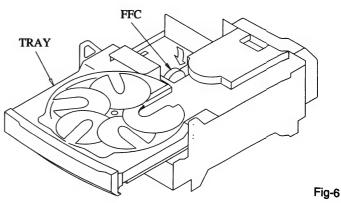


9

4. ターンテーブルの組立方法 (Fig-7)

- 1) LEVER TTを "C"の方向に押しながら、TURN TABLE 5CDを組み込む。(Fig-7) この時、TRAY 5CDとTURN TABLE 5CDの切り欠きが 同じ方向になるようにする。(Fig-8)
- * 組み込む際のTURN TABLE 5CDのCD番号 (1~5) は任意で構いません。(Fig-7)

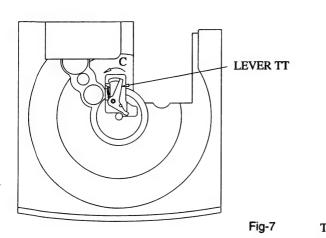


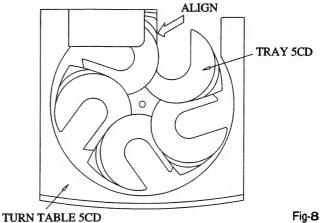

ギヤ、メインカムの位相の合わせ方


- 1) CHAS, MECHのツメを下側に押し、TRAYを外す。
- 2) 下図の様にGEAR, MAIN CAMの矢印とCHAS, MECHA の点印を合わせる。
- 3) SLIDE, MECH CAMが右側の位置にある事を確認し、TRAYをゆっくり挿し込んで下さい。

注意: GEAR, MAIN CAMの位相がズレている場合、 チャッキング及びトレーが誤動作を起こしま す。

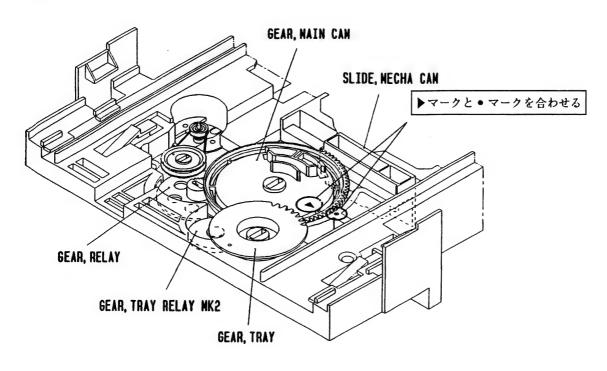


DISASSEMBLY INSTRUCTIONS


- 1. How to replace PICK UP.
 - Open the TRAY.
 Push the stopper to arrow direction and release half of the SHAFT SLED.
 - Turn GEAR MAIN CAM to the counterclockwise (arrow "a") direction, and lift up CD mechanism. (Fig-1)
 - 3) Remove SHAFT SLED.
 - 4) CD mechanism in down position, replace PICK UP.
 - Lift up CD mechanism (Fig-1), and Reassemble the SHAFT SLED.

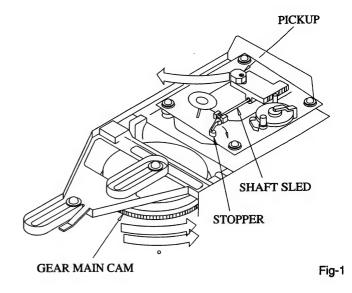

2. How to remove the 5CD CHANGER BLOCK (Fig-2)

- 1) Remove the two FFC of the CD circuit board, and remove the five SCREWS.
- Lift 5 CD CHANGER BLOCK from behind, and remove it. (5CD CHANGER BLOCK can be removed even if PANEL TRAY is not removed.)

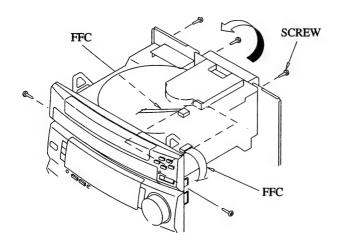


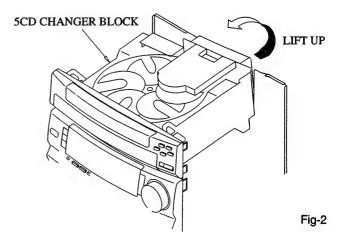


3. The disassemble and reassemble the TRAY

3-1. Disassembling procedure.

- Push the PLATE GEAR'S Boss at the bottom part of CHAS MECHA strongly to the outside (arrow "b" direction). (Fig-3)
 - (Confirm that TRAY appears a little in the front.)
- 2) Draw TRAY to the open position.
- 3) Remove FFC, and push the two LEVERS at both side of the CHAS MECH to remove TRAY. (Fig-4)

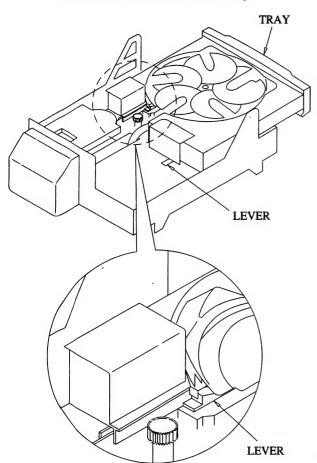

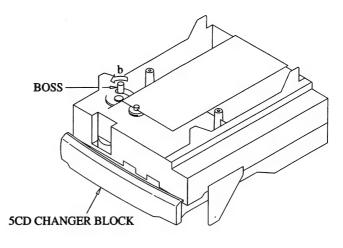



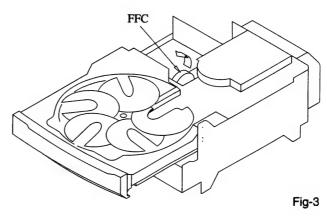


Fig-4

3-2. Reassembling procedure.


- Confirm that LEVER TRAY is at the most right position and check for the CD Mechanism to be in the down position. (Fig-5)
- 2) Push in the TRAY along the rail of the CHAS MECHA.
- 3) After TRAY is half closed and FFC is put in, it can enter by force until the end of TRAY closed. (Fig-6)

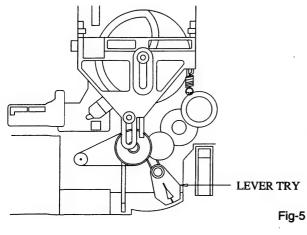


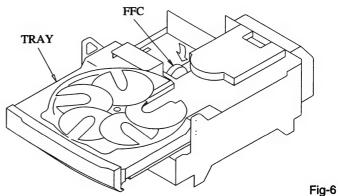

4. How to reassemble the TURN TABLE. (Fig-7)

- Push LEVER TT in the direction of "C", and put in the TURN TABLE 5CD. (Fig-7)
 After reassembly, one of the TURN TABLE DISC
 TRAY (can be either one of the five disc trays) must be aligned with TURN TABLE 5CD. (Fig-8)
 That is, having no gap difference between the TURN TABLE 5CD and the TRAY 5CD.
- * When reassembling the TURN TABLE 5CD, it is acceptable facing any CD number (1-5).

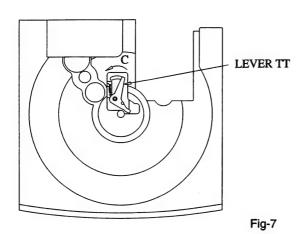


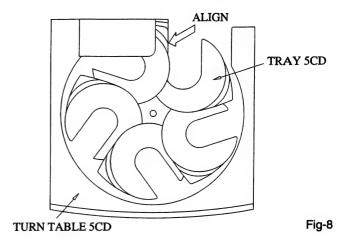

How to Adjust the Rotating Phase of the Gear, Main Cam

- Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
- Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS, MECHA as shown below.
- 3) Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

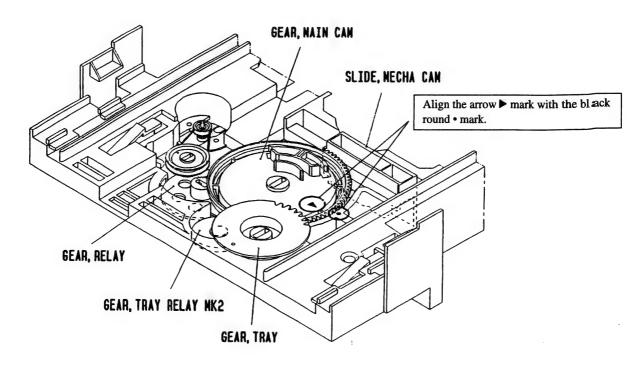

MODEL NO. 6ZG-1 (D, F) ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC				C114			-CAP,S 0.01-25 B
	87-017-745-0	110 28 TC CY	1782BO	C115 C116			-CAP,S 47P-50 CH -CAP,S 47P-50 CH
	87-070-294-0			C117			-CAP,S 0.01-25 B
	87-017-888-0	80 1A IC,NJ	M4558MD	C122	87-010-186-0	020 OE C-	-CAP,S 4700P-50 B
	87-070-305-0			0100	07 010 202 (140 OE G	N TO 22 OF CHATE
	87-001-982-0	JIO IC IC, TA	72915	C123 C201			AP,E 22-25 SME -CAP,S 47P-50 CH
				C202			-CAP,S 47P-50 CH
TRANSISTO)R	•		C203			-CAP,S 82P-50 CH
	00 006 463 6		30220 (0.2%)	C204	87-010-321-0	020 OE C-	-CAP,S 82P-50 CH
	87-026-463-0 87-026-233-0			C205	87-010-321-0	020 OE C-	-CAP,S 82P-50 CH
	87-026-211-0			C206			-CAP,S 82P-50 CH
			A1162 (0.15W)	C207			-CAP,S 120P-50 CH
	87-026-239-0	080 OE TR,DT	C114TK (0.2W)	C208 C209			-CAP,S 120P-50 CH -CAP,S 120P-50 CH
	87-A30-047-0	80 OE TR.CS	D655E	C203	07 012 155 (720 OL C	CAI, 5 1201 30 CII
	89-421-722-3	80 OE TR, 2S	D2172V/W	C210			-CAP,S 120P-50 CH
			C2001 (15W)	C211			AP,E 3.3-50 SME
	87-026-223-0		C143TK A1015(0.4W)	C212 C213			AP, ELECT 3.3-50V -CAP,S 4700P-50 B
	09-110-133-0	700 UE IN, 25.	HIOIS (U. 4H)	C214			-CAP,S 4700P-50 B
			DTC 123 JK <f></f>				
	89-327-125-0	080 OE CHIP	TR,2SC2712GR <d></d>	C231 C232			AP,E 220-16 SMG AP, ELECT 100-10V
				C301			-CAP,S 0.1-25 F
DIODE				C302	87-010-260-0	080 OE CA	AP, ELECT 47-25V
				C401	87-010-403-0	080 OE CA	AP, ELECT 3.3-50V
	87-020-465-0	80 OE DIODE	,1SS133 (110MA)	C402	87-010-403-0	040 OE CZ	AP,E 3.3-50 SME
				C501			AP,E 470-10 SMG
CD MAIN C	B			C502			-CAP,S 0.01-25 B
011	07 010 100 (20 00 0 00	,S 2200P-50 B	C503 C504	87-010-263-0		AP,E 100-10 -CAP,S 0.1-25 F
C11 C12	87-016-081-0	020 OE C-CAP	,S 0.1-16 RK	C204	07 010 150 0	720 UL C	CAL, 5 0.1 25 1
C13			,S 0.1-16 RK	C505			-CAP,S 0.1-25 F
C14			,S 0.1-16 RK	C506			-CAP,S 0.1-25 F
C15	87-015-698-0	040 0E CAP,E	4.7-50 7L	C507 C508			-CAP,S 0.1-25 F AP,E 470-10 SMG
C16	87-012-393-0	20 OE C-CAP	,S 0.22-16,R,K	C509			-CAP,S 0.1-25 F
C17	87-010-197-0	20 OE C-CAP	,S 0.01-25 B	-510			~~~ ~ ~ ~ ~ ~ ~ ~ ~
C18	87-010-402-0			C510 C601			-CAP,S 0.1-25 F -CAP,S 0.1-25 F
C19 C20	87-010-382-0 87-010-213-0		,S 0.015-25 B	C602			AP,E 220-16 SMG
Car	0, 010 115 (,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	C603	87-010-196-0	20 OE C-	-CAP,S 0.1-25 F
C21			,S 0.01-25 B	C701	87-010-322-0)20 OE C-	-CAP,S 100P-50 CH
C22 C23	87-010-263-0			C702	87-010-318-0	20 OE C-	-CAP,S 47P-50 CH
C24	87-016-369-0	20 0E C-CAP	,S 0.01-25 B ,S 0.033-25 B K ,S 0.01-25 B	C703			-CAP,S 47P-50 CH
C25	87-010-197-0	20 0E C-CAP	,S 0.01-25 B	C705			-CAP,S 1000P-50 B
C26	07 016 360 (120 OE C CND	,S 0.033-25 B K	C706 C901			HIP CAP 1000P AP,E 47-25 SME <d></d>
C26			,S 0.01-25 B	C501	07-010-200-0	740 01 01	11,5 47 23 5115 52
C28	87-010-146-0	20 OE C-CAP	,S 2P-50 CH	C902			-CAP,S 0.1-25 F <d></d>
C29			,S 10P-50 CH	CN3 FC1	86-ZG1-609-0 86-ZG1-605-0		•
C30	87-010-263-0	140 UE CAP, E	100-10	FC2	86-ZG1-608-0		
C31	87-010-178-0	20 0E C-CAP	,S 1000P-50 B	L11	87-003-102-0	080 OE CC	OIL, 10UH
C32			,S 0.022-25 B	* PD001	07 340 100 0	10 00 11	ED.SLZ-8128A-01-B <d></d>
C33 C34	87-016-081-0 87-010-197-0		,S 0.1-16 RK	LED901 M601			DTOR, RF-500TB DC-5V (2MA)
C35	87-010-263-0			R36			RES,S 100K-1/10W F
				R37			-RES,S 68K-1/10W F
C36	87-015-677-0			R38	87-022-363-0	020 OE C-	-RES,S 68K-1/10W F
C37 C38	87-010-197-0 87-010-260-0		,S 0.01-25 B ELECT 47-25V	R39	87-022-363-0	20 OE C-	RES,S 68K-1/10W F
C39	87-010-196-0	•		R40			RES,S 68K-1/10W F
C91	87-010-263-0	040 OE CAP,E	100-10	R41 SFR11			RES,S 100K-1/10W F
C101	87-010-596-0)20 OF C-CAD	,S 0.047-16 RK	SFR11 SFR12			EMI-FIXED RESISTOR, 47K
C101			,S 6800P-50 B				
C103	87-018-133-0	080 OE CAPAC	ITOR, CER 4700P-16V	SFR13			EMI-FIXED RESISTOR, 100K
C104			,S 220P-50 CH	SW601 SW602	87-036-109-0 87-036-109-0		
C105	87-010-404-0	JAU UE CAP,E	4./-30 SME	SW603	87-036-109-0		
C106	87-010-263-0			X101			IB, XTAL 16.9344 MHZ
C107	87-010-197-0						
C108 C109	87-016-526-0 87-010-197-0		,S 0.47-16 3K .S 0.01-25 B	LED C.B <f< td=""><td>?></td><td></td><td></td></f<>	?>		
C103			,S 47P-50 CH <d></d>				
				LED701			ED, SEL1250SM <f></f>
C113	0 / -010-263-0	JOU UE CAP,	ELECT 100-10V	LED702	01-011-330-0	,00 OE DE	ED, SEL1550CM <f></f>

REF. NO PART NO. KANRI NO.


LED703 87-017-733-080 0E LED, SEL1250SM<F>

T-T C.B

C411 87-018-214-080 0E CAP TC U 0.1-50F
LED411 87-070-288-010 0E LED, GL380
M401 87-A90-036-010 1D MOT ASSY, RF-300CA-11
PS401 87-A90-156-010 1B SNSR, SG-240
Q411 87-A30-031-010 1A P-TR, PT380F

S401 87-036-109-010 1A PUSH SWITCH

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

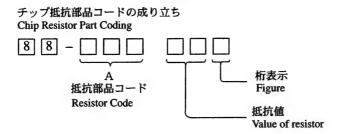

チップ抵抗 Chip resistor

容量	種類	許容誤差	記号	寸法 / Diamen	sions (mm)		抵抗コード : A
Wattage	Type	Tolerance	Symbol	外形 / Form	L	W	t	Resistor Code: A
1/16W	1608	5%	CJ	<u> </u>	1.6	0.8	0.45	108
1/10W	2125	5%	CJ	↑ T	2	1.25	0.45	118
1/8W	3216	5%	CJ	W	3.2	1.6	0.55	128


WAVE FORM


SYSTEM CLOCK f=16.9344MHz

VOLT/DIV: 2V TIME/DIV: 0.1µS 4 TRACKING

(5)

TIME/DIV: 1mS

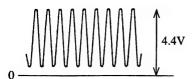

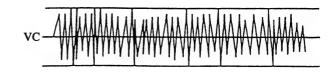


2 RF

VOLT/DIV: 500mV TIME/DIV: 0.5µS




FOCUS SEARCH

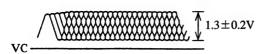



3 FOCUS

VOLT/DIV: 200mV TIME/DIV: 2mS



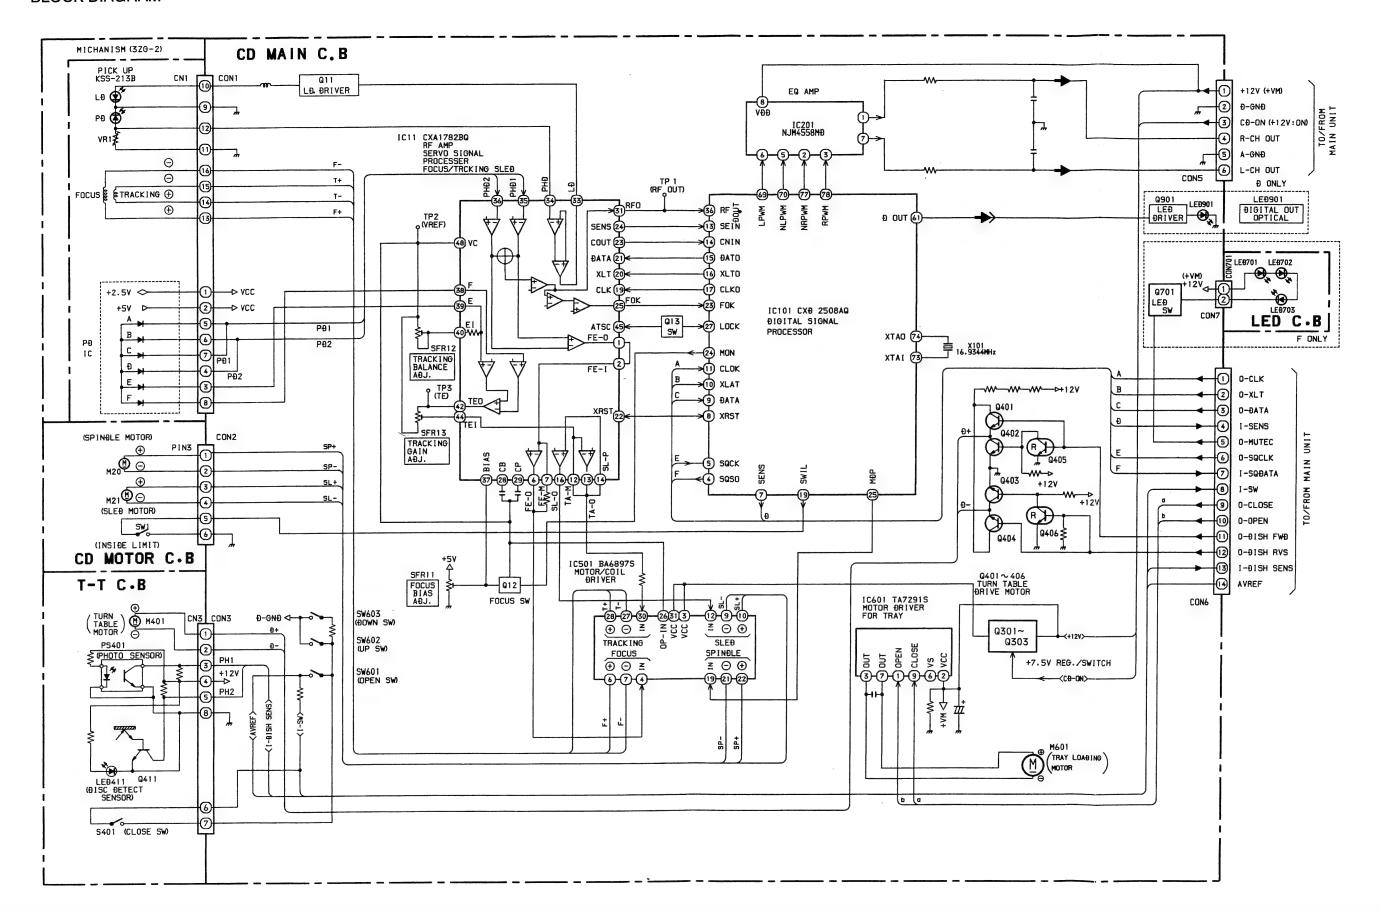


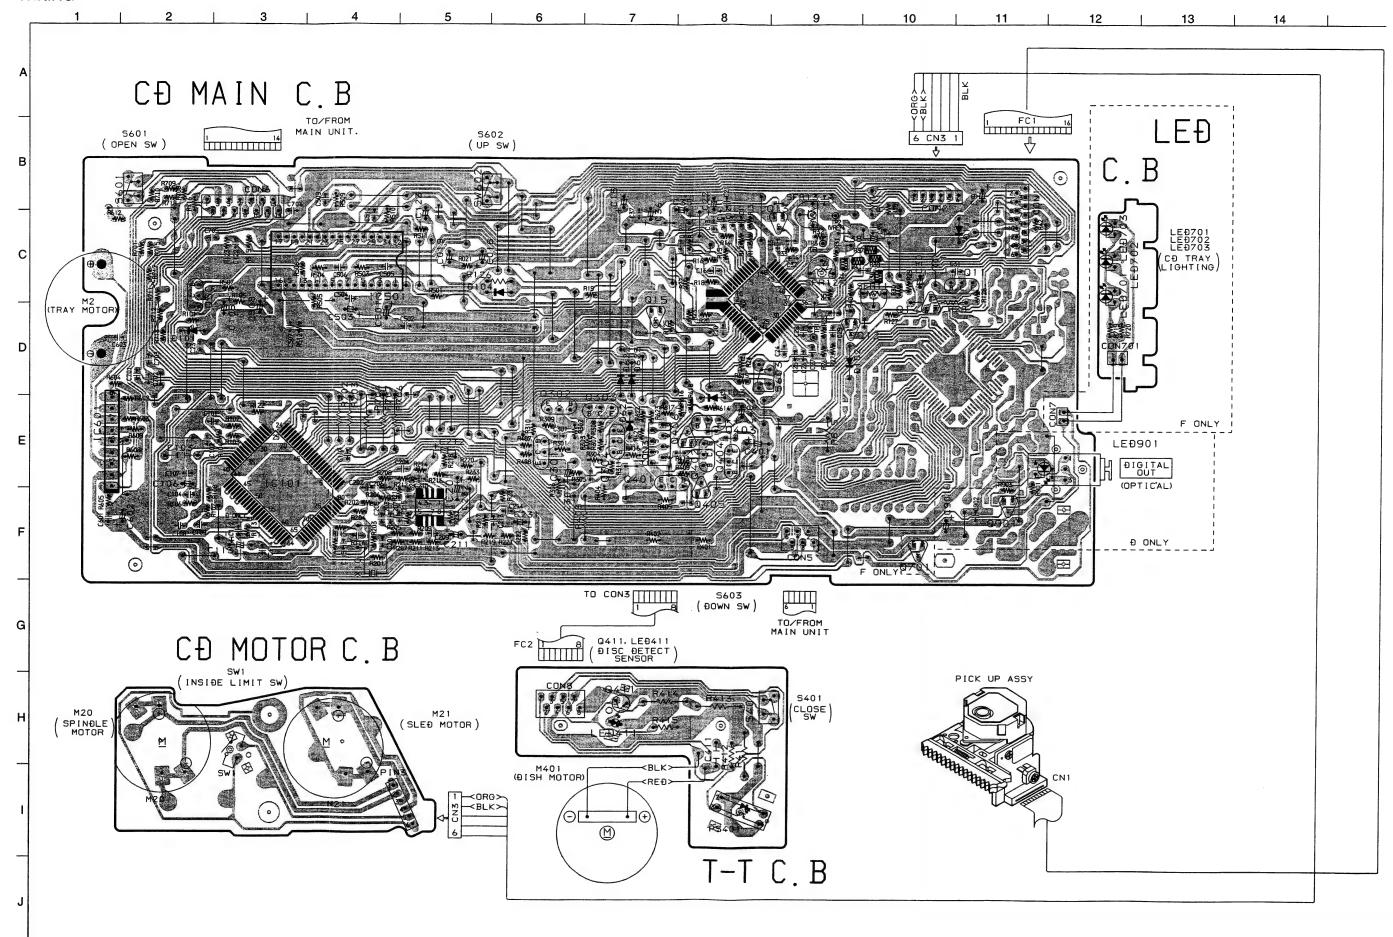

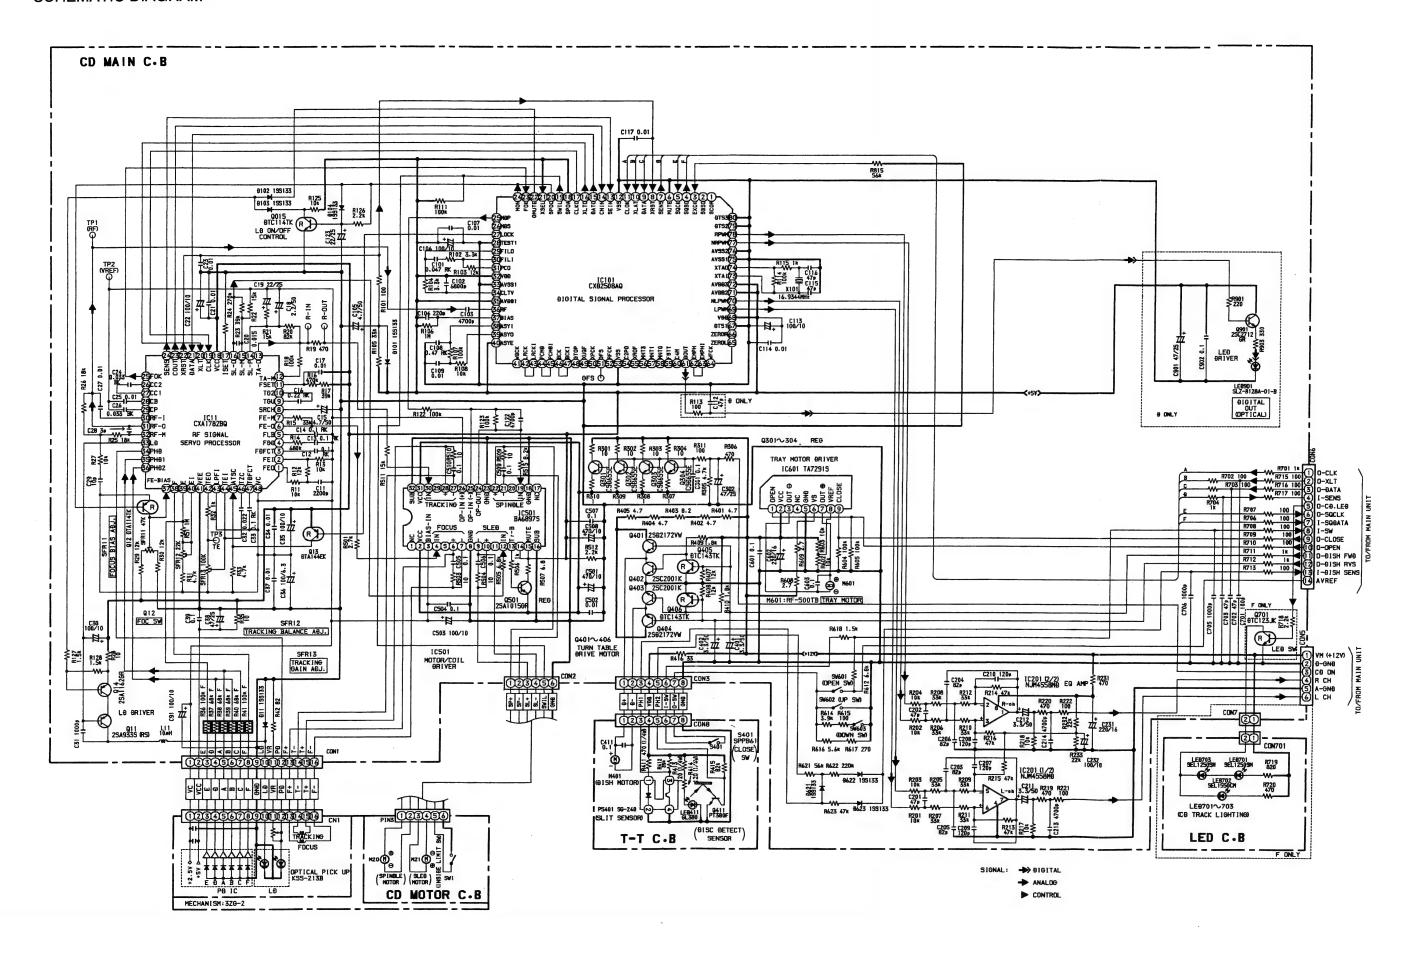


21

IC BLOCK DIAGRAM IC, BA6897S

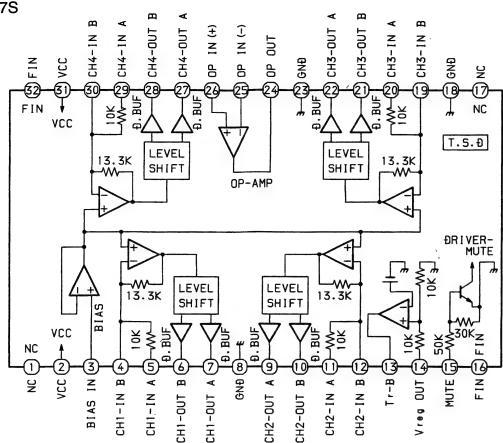

IC, TA7291S

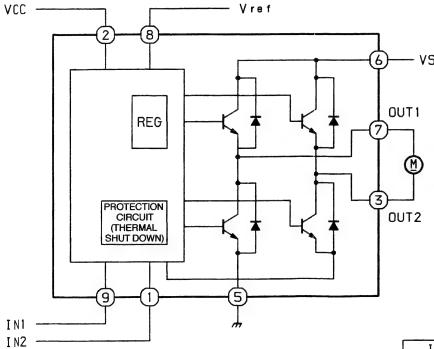

 INPUT
 OUTPUT

 IN1
 IN2
 OUT1
 OUT2

 0
 0
 ∞
 ∞
 STOP

 1
 0
 H
 L
 CW/CCW

 0
 1
 L
 H
 CCW/CW

 1
 1
 L
 L
 BRAKE

∞ : High impedanceNote: Input is active "H".

IC DESCRIPTION

IC, CXA1782BQ

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	FEO FEI FDFCT FGD FLB FEO FEM SRCH TGU TG2 FSET TAM TAO SLP	O I I I I I I I I I I I I I I I I I I I	フォーカス・エラーアンプの出力端子です。 内部でFZCコンパレータ入力に接続されています。 フォーカス・エラーの入力端子です。 ディフェクト時の時定数用コンデンサ接続端子です。 フォーカス・サーボの高域ゲインを落とす場合、この端子をコンデンサで接地します。 フォーカス・サーボの低域持ち上げ用時定数外付け端子です。 フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波疝を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	FEI FDFCT FGD FLB FEO FEM SRCH TGU TG2 FSET TAM TAO	I I I I I I I I I I I I I I I I I I I	フォーカス・エラーの入力端子です。 ディフェクト時の時定数用コンデンサ接続端子です。 フォーカス・サーボの高域ゲインを落とす場合、この端子をコンデンサで接地します。 フォーカス・サーボの低域持ち上げ用時定数外付け端子です。 フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	FDFCT FGD FLB FEO FEM SRCH TGU TG2 FSET TAM TAO	I I O I I I I I I I I I I I I I I I I I	ディフェクト時の時定数用コンデンサ接続端子です。 フォーカス・サーボの高域ゲインを落とす場合、この端子をコンデンサで接地します。 フォーカス・サーボの低域持ち上げ用時定数外付け端子です。 フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	FGD FLB FEO FEM SRCH TGU TG2 FSET TAM TAO	I	フォーカス・サーボの高域ゲインを落とす場合、この端子をコンデンサで接地します。 フォーカス・サーボの低域持ち上げ用時定数外付け端子です。 フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
5 6 7 8 9 10 11 12 13 14 15 16 17	FLB FEO FEM SRCH TGU TG2 FSET TAM TAO	I O I I I I I I I I I I I I I I I I I I	します。 フォーカス・サーボの低域持ち上げ用時定数外付け端子です。 フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
6 7 8 9 10 11 12 13 14 15 16 17 18 19	FEO FEM SRCH TGU TG2 FSET TAM TAO	O I I I I I I I I I I I I I I I I I I I	フォーカス・ドライブ出力です。 フォーカス・アンプの反転入力端子です。 フォーカス・サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
7 8 9 10 11 12 13 14 15 16 17 18 19	FEM SRCH TGU TG2 FSET TAM TAO	I I I I	フォーカス·アンプの反転入力端子です。 フォーカス·サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
8 9 10 11 12 13 14 15 16 17 18 19	SRCH TGU TG2 FSET TAM TAO	I I I	フォーカス·サーチ波菰を作るための時定数外付け端子です。 トラッキング高域ゲイン切り換え用時定数外付け端子です。
9 10 11 12 13 14 15 16 17 18 19	TGU TG2 FSET TAM TAO	I I I	トラッキング高域ゲイン切り換え用時定数外付け端子です。
10 11 12 13 14 15 16 17 18 19	TG2 FSET TAM TAO	I	
11 12 13 14 15 16 17 18 19	FSET TAM TAO	I	トラッキング高域ゲイン切り換え用時定数外付け端子です。
12 13 14 15 16 17 18 19	TAM TAO		
13 14 15 16 17 18 19	TAO	-	フォーカス・トラッキングの位相補償のピーク設定用端子です。
14 15 16 17 18 19		I	トラッキング・アンプの反転入力端子です。
15 16 17 18 19	SLP	0	トラッキングドライブ出力。
16 17 18 19		I	スレッド・アンプの非反転入力端子です。
17 18 19	SLM	I	スレッド・アンプの反転入力端子です。
18	SLO	0	スレッドドライブ出力。
19	ISET	I	フォーカスサーチ、トラックジャンプ、スレッドキックの高さを決める電流を 流します。
	VCC	_	+5V電源供給端子。
20	CLK	I	シリアルデータ転送クロック入力です。
	XLT	I	ラッチ入力です。
21	DATA	I	シリアルデータ入力です。
22	XRST	I	リセット入力端子 "L" でリセットします。
23	COUT	0	トラック数カウント用信号出力です。
24	SENS	. О	コマンドにより、FZC、DFCT、TZC、Gain、BAL、などを出力します。
25	FOK	0	フォーカスOKコンパレータの出力端子です。
26	CC2	0	DEFECTボトム·ホールド出力が容量結合されて入力される入力端子です。
27	CC1	I	DEFECTボトム・ホールド出力端子です。
28	СВ	I	DEFECTボトム・ホールドコンデンサ接続端子です。
29	СР	I	MIRRホールド・コンデンサの接続端子です。かつ、MIRRコンパレータの非反転 入力端子です。
30	RFI	I	RFサミングアンプの出力が容量結合されて入力される入力端子です。
31	RFO	О	RFサミングアンプの出力端子です。(EYEパターンのチェックポイント)
			RFサミングアンプの反転入力端子です。
32	RFM	I	この端子とRFO端子間に接続された抵抗でRFアンプのゲインが決まります。
33	LD	0	APCアンプの出力端子です。
34	PHD	I	APCアンプの入力端子です。
35~36		I	RFI-Vアンプの反転入力端子です。光学ピックアップのA+C、B+D端子に接続して電流入力で受けます。

CD MAIN C.B (PATTERN SIDE) TP2 (VREF) TP3 SFR11 SFR12 TP1 (RF) SFR13 31 IC11

- How to Activate CD Test Mode
 Insert the AC plug while pressing the function CD button.
 All FL display tubes will light up, and the test mode will be activated.
- How to Cancel CD Test Mode Either one of the following operations will cancel the CD test mode.
 - Press the function button.
 Press the power switch button.
 (except CD function button)
 Disconnect the AC plug

3. CD Test Mode Functions


When test mode is activated, the following mode functions from No.1 to No.5 can be used by pressing the operation keys.

Mode/No.	Operation	FL display	Operation	Contents
Start mode	Activation	All lamps light	Test mode is activated. Laser diode turns always ON. (CD block power is ON.)	 FL display check (All displays light.) APC circuit check Laser current measurement (Laser current control. Across a resistor connected between emitter and GND.)
Search mode	■ key		Continual focus search	FOCUS SERVO
		<u> </u>	(The pickup lens repeats the full- swing up-down motion.) * Avoid continual searches that last for	 Check focus search waveform Check focus error waveform (FOK/FZC are not monitored in the
No.2			more than 10 minutes. * NOTE 1	search mode)
Play mode No.3	◄ ▶ key		Normal playback Focus search is continued if TOC cannot be read. * NOTE 1	FOCUS SERVO/TRACKING SERVO CLV SERVO/SLED SERVO Check FOK/FZC
Traverse mode No.4	II key	ΕΕΙΙ	During normal disc playback Press once; tracking servo OFF Press twice; tracking servo ON * NOTE 2*	TRACKING SERVO ON/OFF Tracking balance (traverse) adjustment
Sled mode	₩ key ₩	All lamps light	Pickup moves to the outermost track Pickup moves to the innermost track * NOTE 3 (During playback, machine operates)	SLED SERVO Check SLED mechanism operation
No.5			normally.)	

- * NOTE 1: There are cases when the tracking servo cannot be locked owing to the protection circuit being operated when heat builds up in the driver IC if the focus search is operated continually for more than 10 minutes. In these cases the power supply should be switched off for 10 minutes until heat has been reduced and then re-started.
- * NOTE 2: Do not press the M or M keys when the machine is in the status is active. If they are pressed, playback will not be possible after the status has been canceled. If the M or M keys are pressed in the status, press the key and return to the start mode (No.1).
- * NOTE 3: When pressing the M or M keys, take care to avoid damage to the gears. Because the sled motor is activated when the M or M keys are pressed, even when the pick-up is at the outermost or innermost track.

4. Operation Outline

The operation of each mode is carried out in the direction of the arrows from the start mode as indicated in the following illustration.

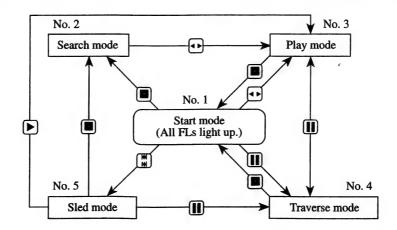

If the DISC DIRECT PLAY button is pressed, the machine performs the same operation as the PLAY button is pressed & shown. If the tray is opened by pressing OPEN/CLOSE button during Play mode or Traverse mode, the machine returns to the Stat Innode.

TEST MODE


- CDテストモードの起動方法 ファンクション CD の釦を押しながら、AC プラグを挿 入する。 上記により FL 表示管が全て点灯し、テストモードが起動します。
- 2. CDテストモードの解除方法
 下記のいずれか1つの操作で解除します。
 ・ファンクション釦を押す ・パワー SW 釦を押す。
 (CDファンクション釦以外)・ACプラグを抜く。
- 3. CD テストモードの機能説明 テストモード起動後、各操作釦を押す事により次の No1 ~ No5 の各モード機能が使用できます。

Mode/No.	操作	FL 表示	動作	内容
スタートモード	起動	全灯表示	・TEST MODE 起動 ・LASER DIODE 常時発光 (CD ブロック電源 ON)	・FL表示確認 (全灯)・APC 回路確認・レーザー電流測定(レーザー電流コントロール、トラ
No.1				ンジスタのエミッター GND 間の 抵抗の両端。)
サーチモード	1	1	・連続フォーカスサーチ	FOCUS SERVO
		,,	(PU レンズがフルスイングを繰り	・フォーカスラッチ波形確認
			返す)	・フォーカスエラー波形確認
		<i>''</i>	* 10分以上の連続フォーカスは避け	(サーチモードでは FOK/FZC は監
No.2			て下さい。 *注1	視せず。)
プレイモード	▼▶ 釦	,, ,	・通常再生	FOCUS SERVO/TRACKING SERVO
			・TOC READ 出来ない場合	CLV SERVO/SLED SERVO
No.3		<u></u> ' '	フォーカスサーチを続行 *注1	FOK/FZC 確認
トラバース	4 釦		・ DISC 通常再生中	TRACKING SERVO ON/OFF
モード		$\Gamma\Gamma$	1回押す トラッキングサーボ OFF	トラッキングバランス(トラバース)
			2回押す トラッキングサーボ ON	調整
No.4	1 1		*注2	
スレッドモード	₩釦	全灯表示	・ピックアップ外周へ移動	SLED SERVO
	₩		・ピックアップ内周へ移動	SLED メカ動作確認
			*注3	
No.5			(再生中は通常動作致します)	

- *注1 フォーカスサーチを連続して10分以上動作し続けるとドライバーICが発熱し保護回路が働く為、トラッキングサーボがかからない状態となる場合が有ります。この様な場合には、電源を切り約10分間放熱後、再スタートして下さい。
- *注2 「**」状態で、「M」または「M」釦を押さない事。「**」状態解除後、再生出来なくなります。「**」状態で、「M」または「M」 釦を押した場合には「■」釦を押しスタートモード (No.1) に戻して下さい。
- *注3 ピックアップが最内周、最外周の位置でも「MJ または「MJ 釦を押している間はスレッドモータが回転する為、ギャ 破損に注意して下さい。

4. 操作概要

下図の様にスタートモードから、矢印方向の流れで各モードの操作が行えます。モード変更は、下図の流れに従い行って下さい。

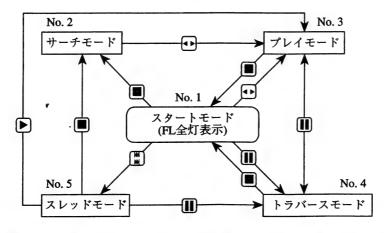

尚、DISC DIRECT PLAY 釦を押した場合には、上図の PLAY 釦を押した時と同様の動作となります。またプレイモード / トラバースモード時に open/close 釦により、トレイを open させた場合には、スタートモードに戻ります。

Pin No.	Pin Name	I/O	Description	
43	LRCKI	I	LR clock input to DAC. (48-bit slot)	
44	PCMD	0	D/A interface, serial data. (2's complement, MSB first)	
45	PCMDI	I	Audio data input to DAC. (48-bit slot)	
46	BCK	0	D/A interface, bit clock.	
47	BCKI	I	Bit clock input to DAC. (48-bit slot)	
48	GTOP	0	GTOP output.	
49	XUGF	0	XUFG output.	
50	XPCK	0	XPLCK output.	
51	GFS	0	GFS output.	
52	RFCK	0	RFCK output.	
53	VSS	_	GND.	
54	C2PO	0	C2PO output.	
55	XROF	0	XRAOF output.	
56	MNT3	О	MNT3 output.	
57	MNT1	0	MNT1 output.	
58	MNT0	0	MNTO output.	
59	FSTT	0	Pins-73 and -74 divided-by 2/3 output.	
60	C4M	0	4.2336MHz output.	
61	DOUT	0	Digital Out connector output signal.	
62	ЕМРН	0	H when the playback disc has emphasis. L when it does not.	
63	ЕМРНІ	I	DAC emphasis ON/OFF. H when ON. L when OFF	
64	WFCK	0	WFCK (WRITE FRAME CLOCK) output.	
65	ZEROL	0	No sound data detection output. H (L-ch) when no sound data is detected.	
66	ZEROR	0	No sound data detection output. H (R-ch) when no sound data is detected	
67	DTSI	I	TEST for DAC. (Normally "L")	
68	VDD	_	Power supply input. (+5V)	
69	NLPWM	0	L-ch PWM output. (reversed polarity)	
70	LPWM	0	L-ch PWM output. (normal polarity)	
71	AVDD2	_	Power supply input to L-ch PWM driver. (Connected to +5V)	
72	AVDD3	_	Power supply input to X'tal. (Connected to +5V)	
73	XTAI	I	X'tal input to 33.8688MHz oscillator circuit.	
74	XTAO	0	33.8688MHz X'tal oscillator circuit output.	
75	AVSS1	_	GND input to X'tal. (Connected GND)	
76	AVSS2	_	GND input to PWM driver. (Connected to GND)	
77	NRPWM	0	R-ch PWM output. (reversed phase)	
78	RPWM	0	R-ch PWM output. (normal phase)	
79	DTS2	I	TEST-2 for DAC. (Normally "L")	
80	DTS3	I	TEST-3 for DAC. (Normally "L")	

IC, CXD2508AQ

Pin No.	Pin Name	I/O	Description
1	SCOR	0	H when the subcode sync S0 or S1 is detected.
2	SBSO	0	SUBP-W serial output.
3	EXCK	I	Clock input for SBSO read out.
4	SQSO	0	SUBQ 80-bit serial output.
5	SQCK	·I	Clock input for SQSO read out.
6	MUTE	I	H to mute. L to cancel.
7	SENS	0	SENS signal output to CPU.
8	XRST	I	System reset. L to reset.
9	DATA	I	Serial data input from CPU.
10	XLAT	I ·	Latch input from CPU. Latching serial data at fall down.
11	CLOK	I	Clock input from CPU to transfer serial data.
12	VSS	_	GND.
13	SEIN	I	SENS input from SSP.
14	CNIN	I	Numbers of track jump are counted and input.
15	DATO	0	Serial data output to SSP.
16	XLTO	0	Serial data latched output to SSP. Latched at fall down edge.
17	CLKO	0	Clock input from SSP to transfer serial data.
18, 20	SPOA, C	I	Microprocessor expansion interface.
19	XTSL	I	X'tal selection input terminal. "L" at 16.9344MHz X'tal. "H" at 33.86888MHz.
22	XLON	0	Microprocessor expansion interface.
23	FOK	I	Focus OK input pin. Used for SENS output and servo auto sequencer.
24	MON	0	Spindle motor ON/OFF control output.
25	MDP	0	Spindle motor servo control output.
26	MDS	0	Spindle motor servo control output.
27	LOCK	0	GFS is sampled by 460Hz. H output when GFS is H. L output when GFS is L for 8 consecutive times.
28	TEST1	I	TEST. (Connected to GND)
29	FILO	0	Filter output to master PLL. (slave=digital PLL)
30	FILI	I	Filter input to master PLL.
31	PCO	0	Charge-pump output to master PLL.
32	VDD	_	Power supply input. (+5V)
33	AVSS1	_	GND.
34	CLTV	I	VCO control voltage input to master PLL.
35	AVDD1	_	Power supply input. (+5V)
36	RF	I	EFM signal input.
37	BIAS	I	Constant current input to asymmetry correction circuit.
38	ASYI	I	Comparate voltage input to asymmetry correction circuit.
39	ASYO	0	EFM full swing output. (L=VSS, H=VDD)
40	ASYE	I	L: asymmetry correction OFF. H: asymmetry correction ON
41	WDCK	0	D/A interface, word clock (2Fs) for 48-bit slot.
42	LRCK	0	D/A interface, LR clock (Fs) for 48-bit slot.

Pin No.	Pin Name	I/O	Description
33	LD	0	APC amplifier output pin.
34	PHD	I	APC amplifier input pin.
35-36	PHD1-2	I	RF I-V amplifier inverted input pin.
33-30	11101-2	1	These pins are connected to the A+C and B+D pins of the optical pickup.
37	FE BIAS	I	Bias adjustment pin of the focus error amplifier.
38-39	F-E	I	F and E IV amplifier non-inverted input pins.
36-39	36-39 F-E	1	These pins are connected to the F and E of the optical pickup.
40	EI	_	Gain adjustment pin of the I-V amplifier E.
41	VEE		GND connection pin
42	TEO	0	Tracking error amplifier output pin. E-F signal is output.
43	LPFI	I	BAL adjustment comparator input pin.
44	TEI	I	Tracking error input pin.
45	ATSC	I	Window comparator input pin for detecting ATSC.
46	TZC	I	Tracking zero-cross comparator input pin.
47	TDFCT	I	Capacitor connection pin for the time constant used when there is defect.
48	VC	0	DC voltage output pin of VREF. (VDD/2)

IC, CXA1782BQ

Pin No.	Pin Name	I/O	Description
1	FEO	0	Focus error amplifier output pin. This pin is connected to the FZC comparator input internally.
2	FEI	I	Focus error input pin.
3	FDFCT	I	Capacitor connection pin for time constant used when there is defect.
4	FGD	I	This pin is connected to GND via capacitor when high frequency gain of the focus servo is attenuated.
5	FLB	I	This is a pin where the time constant is externally connected to raise the low frequency gain of the focus servo.
6	FEO	0	Focus drive output.
7	FEM	I	Focus amplifier inverted input pin.
8	SRCH	I	This is a pin where the time constant is externally connected to generate the focus search waveform.
9	TGU	I	This is a pin where the selection time constant is externally connected to set the tracking servo the high frequency gain.
10	TG2	I	This is a pin where the selection time constant is externally connected to set the tracking high frequency gain.
11	FSET	I	Pin for setting peak of the phase compensator of the focus tracking.
12	TAM	I	Tracking amplifier inverted input pin.
13 .	TAO	0	Tracking drive output.
14	SLP	I	Sled amplifier non-inverted input pin.
15	SLM	I	Sled amplifier inverted input pin.
16	SLO	0	Sled drive output.
17	ISET	I	The current which determines height of the focus search, track jump and sled kick is input.
18	VCC	_	+ 5 V power supply pin.
19	CLK	I	Serial data transfer clock input from CPU.
20	XLT	I	Latch input from CPU.
21	DATA	I	Serial data input from CPU.
22	XRST	I	Reset input pin. Reset at L.
23	COUT	0	Signal output to count the number of tracks.
24	SENS	0	FZC, DFCT, TZC, Gain or BAL is output depending on the command from CPU.
25	FOK	0	Output pin of the focus OK comparator.
26	CC2	0	Input pin where the DEFECT bottom hold output is capacitance coupled.
27	CC1	I	DEFECT bottom hold output pin.
28	СВ	I	This is a pin where the DEFECT bottom hold capacitor is connected.
29	СР	I	This is a pin where the MIRR hold capacitor is connected and MIRR comparator non-inverted signal is input.
30	RFI	I	Input pin where the RF summing amplifier output is capacitance coupled.
31	RFO	0	RF summing amplifier output pin. (Eye pattern check point)
32	RFM	I	RF summing amplifier inverted input pin. Gain of RF amplifier is determined by the resistor connected between RFO and this pin.

端子番号	端子名称	I/O	機能説明			
44	PCMD	0	D/Aインターフェイス、シリアルデータ。(2' COMP, MSBファースト)			
45	PCMDI	I	DACへのオーディオデータ入力。(48bitスロット)			
46	BCK	0	D/Aインターフェイス、ビットクロック。			
47	BCKI	I	DACへのビットクロック入力。(48bitスロット)			
48	GTOP	0	GTOP出力。			
49	XUGF	0	XUGF出力。			
50	XPCK	0	XPLCK出力。			
51	GFS	0	GFS出力。			
52	RFCK	0	RFCK出力。			
53	VSS	-	GND端子。			
54	C2PO	0	C2PO出力。			
55	XROF	0	XRAOF出力。			
56	MNT3	0	MNT3出力。			
57	MNT1	0	MNT1出力。			
58	MNT0	0	MNT0出力。			
59	FSTT	0	73,74端子の2/3分周出力。			
60	C4M	0	4.2336MHz出力。			
61	DOUT	0	Digital Out出力端子。			
62	ЕМРН	0	再生ディスクがエンファシス有りの時H、無しの時L。			
63	ЕМРНІ	I	DACのディエンファシスON/OFF、HでON、LでOFF。			
64	WFCK	0	WFCK(WRITE FRAME CLOCK)出力。			
65	ZEROL	0	無音データ検出出力、無音データ検出時 "H" (Lch)。			
66	ZEROR	0	無音データ検出出力、無音データ検出時 "H" (Rch)。			
67	DTSI	I	DAC用テスト端子。(通常L)			
68	VDD	_	電源端子。(+5V)			
69	NLPWM	0	Lch PWM出力。(正相)			
70	LPWM	0	Lch PWM出力。(逆相)			
71	AVDD2		Lch PWMドライバー用電源。(+5Vへ接続)			
72	AVDD3		Xtal用電源。(+5V个接続)			
73	XTAI	I	33.8688MHzのXtal発振回路入力。			
74	XTAO	0	33.8688MHzのXtal発振回路出力。			
75	AVSS1	_	XtalへのGND入力。(GNDへ接続)			
76	'AVSS2	_	PWMドライバへのGND入力。(GNDへ接続)			
77	NRPWM	0	Rch PWM出力。(逆相)			
78	RPWM	0	Rch PWM出力。(正相)			
79	DTS2	I	DAC用テスト端子2。(通常L)			
80	DTS3	I	DAC用テスト端子3。(通常L)			


IC, CXD2508AQ

端子番号	端子名称	I/O	機 能 説 明			
1	SCOR	0	サブコードシンクSOかS1どちらか検出された時H。			
2	SBSO	0	SUBP~Wのシリアル出力。			
3	EXCK	I	SBSOリード・アウト用クロック入力。			
4	SQSO	0	SUBQ 80BITのシリアル出力。			
5	SQCK	I	SQSOリード・アウト用クロック入力。			
6	MUTE	I	Hでミュート、Lで解除。			
7	SENS	0	SENS出力、CPUへ出力。			
8	XRST	I	システムリセット、Lでリセット。			
9	DATA	I	CPUよりシリアルデータ入力。			
10	XLAT	I	CPUよりラッチ入力、立ち下がりでシリアルデータをラッチ。			
11	CLOK	I	CPUよりシリアルデータ転送クロック入力。			
12	VSS	-	GND端子。			
13	SEIN	I	SSPよりセンス入力。			
14	CNIN	I	トラックジャンプ数カウント信号入力。			
15	DATO	0	SSPへのシリアルデータ出力。			
16	XLTO	0	SSPへのシリアルデータラッチ出力、立ち下がりでラッチ。			
17	CLKO	0	SSPへのシリアルデータ転送クロック出力。			
18、20	SPOA, C	I	マイコン拡張インターフェース。			
19	XTSL	I	Xtal選択入力端子。Xtalが16.9344MHzの時L、33.8688MHzの時Hにする。			
22	XLON	0	マイコン拡張インターフェース。			
23	FOK	I	フォーカスOK入力端子、SENS出力とサーボ・オートシーケンサに用いる。			
24	MON	0	スピンドルモータのON/OFFコントロール出力。			
25	MDP	0	スピンドルモータのサーボ制御。			
26	MDS	0	スピンドルモータのサーボ制御。			
27	LOCK	0	GFSを460Hzでサンプリングし、GFSがHの時H出力、8回連続Lの時L出力。			
28	TEST1	I	TEST用端子。(GND个接続)			
29	FILO	0	マスターPLL用(スレーブ=デジタルPLL)フィルター出力。			
30	FILI	I	マスターPLL用フィルター入力。			
31	PCO	0	マスターPLL用チャージポンプ出力。			
32	VDD	_	電源端子。(+5V)			
33	AVSS1	_	GND端子。			
34	CLTV	I	マスターPLL用VCOコントロール電圧入力。			
35	AVDD1		電源端子。(+5V)			
36	RF	I	EFM信号入力。			
37	BIAS	I	アシンメトリ補正回路定電流入力。			
38	ASYI	I	アシンメトリ補正回路コンパレート電圧入力。			
39	ASYO	0	EFMフルスイング出力。(L=VSS、H=VDD)			
40	ASYE	I	L:アシンメトリ補正OFF、H:アシンメトリ補正ON。			
41	WDCK	0	48bitスロット用D/Aインターフェイス、ワードクロック(2Fs)。			
42	LRCK	0	48bitスロット用D/Aインターフェイス、LRクロック(Fs)。			
43	LRCKI	I	DACへのLRクロック入力。(48bitスロット)			


端子番号	端子名称	I/O	機能説明			
37	FE BIAS	I	フォーカス・エラーアンプのバイアス調整用端子です。			
38~39	F∼E	I	F、EのI-Vアンプの反転入力端子です。光学ピックアップのF、Eに接続して電流 入力で受けます。			
40	EI	_	I-VアンプEのゲイン調整用端子です。			
41	VEE	_	GND接続端子。			
42	TEO	0	トラッキング·エラーアンプの出力端子です。E-F信号が出力されます。			
43	LPFI	I	BAL調整用コンパレータ入力端子です。			
44	TEI	I	トラッキング・エラーの入力端子です。			
45	ATSC	I	ATSC検出用ウインドウコンパレータ入力端子です。			
46	TZC	I	トラッキング・ゼロクロスコンパレータの入力端子です。			
47	TDFCT	I	ディフェクト時の時定数用コンデンサ接続端子。			
48	VC	0	VREFの直流電圧出力端子です。(VDD/2)			

注意: ・ (10:1)のプローブを接続して、調整して下さい。

- ・各調整には、オシロスコープの⊖側をTP2 (VREF)に接続して下さい。
- 1. フォーカスバイアス調整 この調整は、光学系ブロックを交換修理した場合に調 整すること。

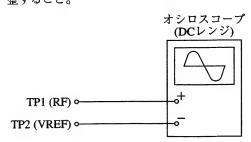

- 1) テストポイントTP1 (RF)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR11を調整する。

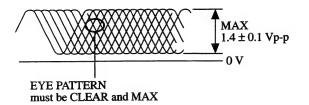


VOLT/DIV: 50mVTIME/DIV: 0.5μ S

注意: レーザー電流の確認はR28 (10Ωの両端電圧) で行えます。レーザーピックアップの裏側のラベルの電流値に対して±6.0mAに入っていること。




レーザー電流Iop = R28の両端電圧

2. トラッキング・バランス調整

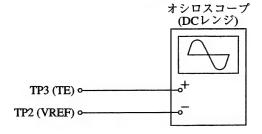

- 1) テストポイントTP3 (TE)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) SFR13を回しトラッキングゲインを絞る。
- 5) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR12を調整する。
- 6) 調整後、各端子のアースリード線をはずす。

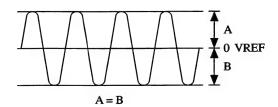

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

出ます。

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に調整してあります。

- ゲインを上げると2軸デバイス動作時の雑音が増加する。
- ゲインを下げると機械的ショックに弱くなり音飛びを 起こしやすくなる。そしてゲインの調整がずれていると次頁の様な症状が


ゲイン		
症状	(フォーカス)	トラッキング
● STOP → ▶ PLAY 時,又		
は自動選曲時 (₩,) ボ		低い
タンを押したとき) に	低い	又は
演奏が 始まるまでの時	臣, V.	20.5
間が長くなる。(通常は		高い
2 秒位です。)		
● STOP → ▶ PLAY 時,又		
は自動選曲時 (米,)) ボ		
タンを押したとき) に		低い
演奏が 始まらないで		压, 🗸
ディスクが回転を続け		
る。		
● STOP→▶PLAY時,し		
ばらくすると回転が止	低い又は高い	
まる。		
● 演奏中に音がとぎれ		
る。又,タイムカウン		紅山
ターの表示が進まなく		低い
なる。		
● 2 軸ディバイス動作時	高い	高い
のノイズが多くなる。	间Ⅴ,	间Ⅴ,

なお、簡易調整として下記の方法があります。

--- 簡易調整 ---

注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい。

調整方法:

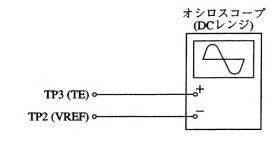


- 1. セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響 を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TE)、TP2 (VREF) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR13を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS

● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)

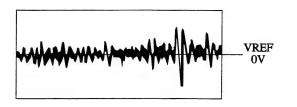


VOLT/DIV: 50mV TIME/DIV: 1m8

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)



VOLT/DIV: 50nV TIME/DIV: 1m/

CD MAIN C.B (PATTERN SIDE)

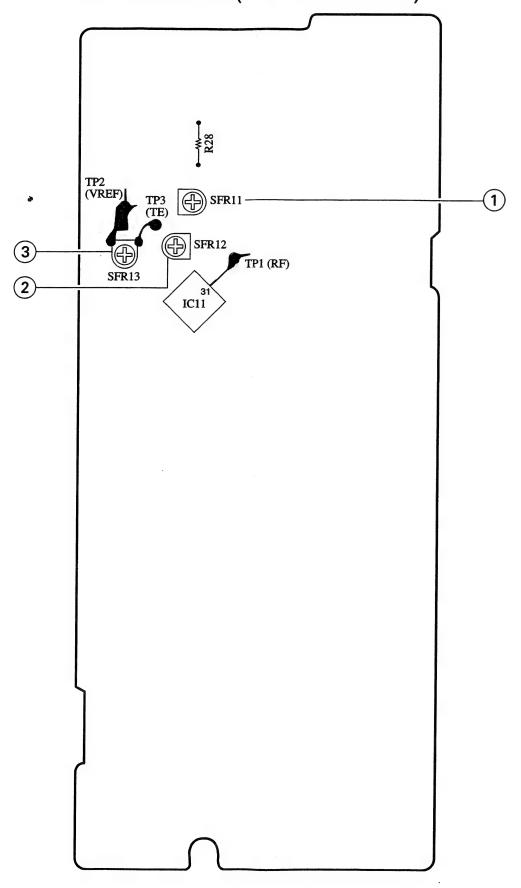


Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.


 During adjustment, connect (⊖) pin of an oscilloscope to TP2 (VREF).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

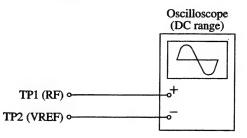


- 1) Connect an oscilloscope to test points TP1 (RF) and TP2 (VREF).
- 2) Turn on the power switch.
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- Adjust SFR11 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.

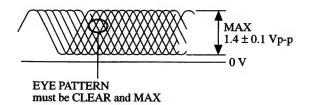


VOLT/DIV: 50mV TIME/DIV: 0.5µS


Note: The current of the laser signal can be checked with the voltages on both sides of R28 (10Ω). The difference for the specified value shown on the lavel must be within±6.0mA.

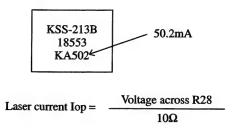

2. Tracking Balance Adjustment

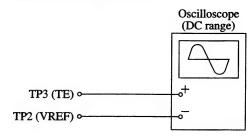

- Connect an oscilloscope to test points TP3 (TE) and TP2 (VREF).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 (YEDS-18) and press the PLAY button.
- 4) Adjust SFR13 to decrease the tracking gain..
- 5) Adjust SFR12 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.
- 6) After the adjustment is completed, remove the connected lead wires from the terminals.

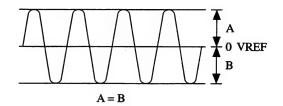

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

appear.

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise increases when the 2-axis device operates.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain adjustment is off, the symptoms below


Gain Symptoms	(Focus)	Tracking
 The time until music starts becomes longer for STOP → PLAY or automatic selection (M, M) buttons pressed.) (Normally takes about 2 seconds.) 	low	low or high
 Music does not start and disc continues to rotate for STOP → PLAY or automatic selection (M, M) buttons pressed.) 		low
 Disc stops to rotate shortly after STOP →►PLAY. 	low or high	
 Sound is interrupted during PLAY. Or time counter display stops. 		low
 More noises during the 2-axis device operation. 	high	high

The following is simple adjustment method.

- Simple adjustment -

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

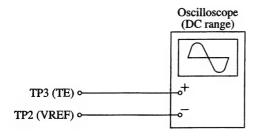

- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TE), TP2 (VREF).
- 4) Adjust SFR13 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example

Low tracking gain


(The fundamental wave appears as compared with the waveform adjusted.)




VOLT/DIV: 50mV TIME/DIV: 1mS

High tracking gain

(The frequency of the fundamental wave is higher than that in low gain.)

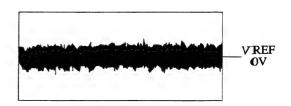

VOLT/DIV: 50mV TIME/DIV: 1mS

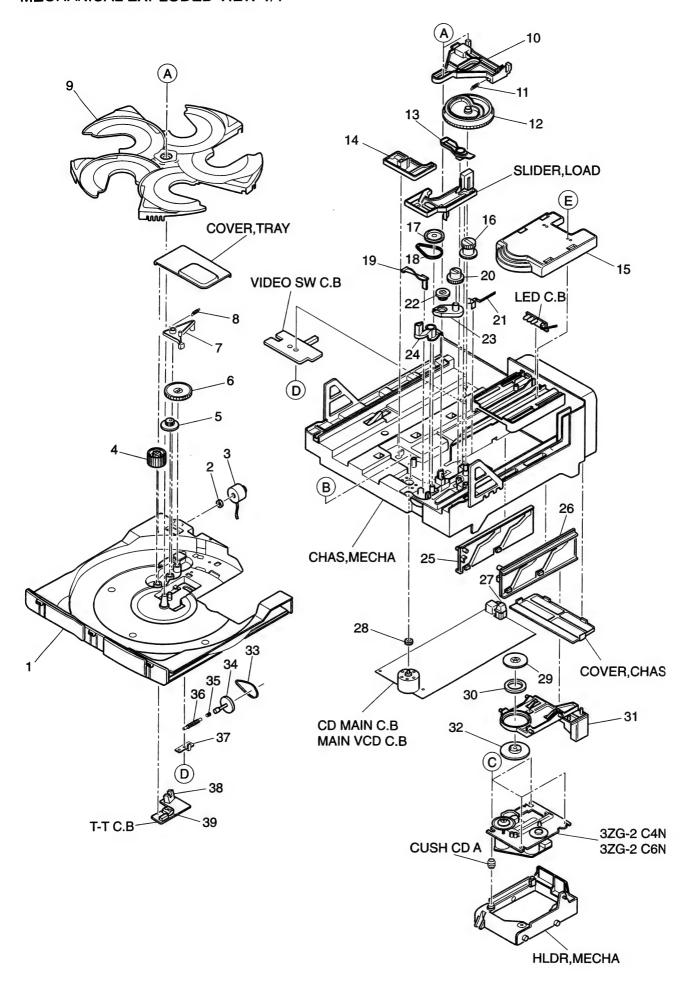


MECHANICAL PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANF NO.	
1	86-ZG1-001-31	0 2M TRAY.5CT)	26	86-ZG1-210-1	10 1B	SLIDER, CAM R(*)
	81-ZG1-212-01			27	84-ZG1-244-2	10 1A	CABI, OPTICAL <d></d>
	87-A90-036-01			28	84-ZG2-228-0	10 OE	PULLEY, MOT
	86-ZG1-228-11			29	83-ZG3-211-0	10 OE	PLATE, DISC
5	86-ZG1-227-11			30	83-ZG3-602-0	10 1A	RING, MAG
6	86-ZG1-223-11				86-ZG1-215-0		
7	86-ZG1-224-11	O OE LEVER,TT	ŗ				CAP, DISC <except s=""></except>
8	86-ZG1-226-01	O OE SPR-E,LE	EVER TT				HLDR, MAGNET 6ZG <s></s>
9	86-ZG1-002-21	0 2A TURN TAI	BLE,5CD				BELT, SQ1.2-32.9
10	86-ZG1-211-21	0 1B JOINT,CA	M	34	86-ZG1-221-0	10 1A	PULLEY, TT
11	86-ZG1-216-01	0 OE SPR-E,JT	r		86-ZG1-231-0		
	86-ZG1-203-11				84-ZG1-256-0		
	86-ZG1-213-11				86-ZG1-232-0		
14	86-ZG1-214-11	O OE LEVER, PR	ROTECT		86-ZG1-229-0		
15	86-ZG1-004-01	0 1B REFLECTO	OR, CD	39	86-ZG1-230-0	10 OE	HLDR, DISC SENSOR
	86-ZG1-205-11						VFT2+3-12(F10) BLK
	84-ZG1-207-01				87-251-072-4		
	84-ZG1-209-01						S-SCREW, MECH HLDR
19	86-ZG1-217-01	O OE LEVER, SV	Ÿ				TAPPING SCREW, BVT2+3-8
20	86-ZG1-206-11	0 OE GEAR, REI	LAY B	Е	87-067-703-0	10 OE	TAPPING SCREW, BVT2+3-10
	86-ZG1-220-11						
	86-ZG1-204-11						
	86-ZG1-218-11						
	86-ZG1-208-01						
25	86-ZG1-209-11	0 1B SLIDER,	CAM L(*)				

CD MECHANISM EXPLODED VIEW 1/1 (3ZG-2 C4N)

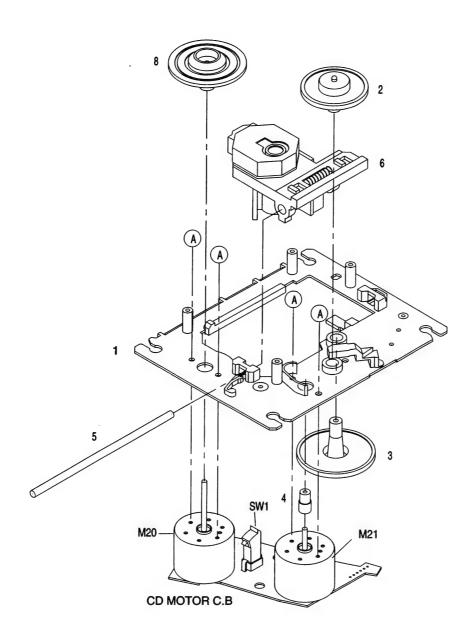

CD MECHANISM PARTS LIST 1/1 (3ZG-2 C4N)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
. 1	83-ZG2-232-111	K O-SERT S	ASSY,S5
. 2	83-ZG2-204-419	9 OE GEAR,A	
3	83-ZG2-205-219	9 OE GEAR, B	
4	83-ZG2-220-011	k oe gear mot	OR 2
5	83-ZG2-207-115	9 1A SHAFT, SI	IDE
6	87-070-445-010		
8	83-ZG2-227-011		
A	87-261-032-219	9 OE SCREW V+	2-3

MODEL NO. 6ZG-1 (D, F, G, V1, V2) ELECTRICAL MAIN PARTS LIST


DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

If can't	understand	for Descrip	tion please kindly refer to	REFERENC	LE NAME LIS	1 •	
REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	Kanri No.	DESCRIPTION
IC				C210	87-010-197-080	OE C-CAP, S	0.01-25 K B
				C211	87-010-197-080		
		10 2Y IC,CXD2		C301			7-6.3 M 5L SRE
		10 1C IC, PQ05		C302			7-6.3 M 5L SRE
		10 1E IC,GP1F 10 2M C-IC,MB		C303	87-010-178-080	UE C-CAP,S	1000F-30 K B
		BO 1A IC, PST6		C304	87-010-197-080	OE C-CAP,S	0.01-25 K B
	07 017 545 00	30 111 10,1010	002	C305	87-010-197-080		
		40 1B C-IC, SN		C306	87-010-197-080		
		40 1H C-IC, BR			87-010-197-080		
		40 OE C-IC,SN 40 OE C-IC,SN		C308	87-010-197-080	UE C-CAP,S	0.01-25 K B
		10 0E C-IC,SN 10 0E C-IC,SN		C309	87-010-197-080	OE C-CAP,S	0.01-25 K B
	0. 1100 001 0	,		C310	87-010-197-080	OE C-CAP, S	0.01-25 K B
		LO 3M C-IC,CL		C311	87-010-197-080		
			514260CJ7/CLJ7	C312	87-010-197-080		
		40 1H C-IC,LH 40 1C C-IC,PQ		C313	87-010-318-080	UE C-CAP,S	4/P-50 J CH
		10 1C C-IC, PQ 10 2P C-IC, BU		C314	87-010-196-080	OE C-CAP.S	0.1-25 Z F C2012
	07 1120 217 0	10 11 0 10,20	a	C315			0.1-25 Z F C2012
	87-A20-248-04	40 1H C-IC,BU	2173F	C316	87-010-549-040		
		10 1H C-IC, SM		C320			0.1-25 Z F C2012
		10 1C IC, TA72		C321	87-010-549-040	OE CAP,E 4	7-6.3 M 5L SRE
		10 2A C-IC,CX 10 1H C-IC,BA		C322	87-010-197-080	OF C-CAP S	0 01-25 K B
	67-A20-257-04	to in C-IC, ba	0/31FF	C323	87-010-137-060		
				C324	87-010-197-080		
TRANSISTO	R			C402	87-010-550-040		
				C403	87-010-197-080	OE C-CAP,S	0.01-25 K B
		30 OE C-TR,2S 30 OE C-TR,2S		C404	87-012-140-080	OF C-CAP S	470P-50 J CV
		30 OE C-TR, DT		C405	87-010-322-080		
		30 OE C-TR, 2S		C406	87-012-140-080		
	87-026-470-08	30 1A C-TR, HN	1C03FB	C407	87-010-371-080		
			1102 ***	C408	87-010-196-080	OE C-CAP,S	0.1-25 Z F (2012
		30 OE C-TR,DT. 30 OE C-TR,2S		C409	87-010-197-080	OF C-CAP S	0 01-25 K B
		10 1A TR,2SA1		C410	87-010-197-080		
		30 OE TR, 2SC1		C412	87-010-550-040		
	87-026-223-08			C413	87-010-314-080		
				C414	87-010-316-080	OE C-CAP,S	33P-50 J CH
	89-421-722-38 89-320-011-08			C415	87-010-499-040	OF CAP F 2	2_6 3 M 51. CDD
	69-320-011-06	00 UE 1K,23C2	OUIR	C416	87-010-197-080		
				C418			0.01-25 K B <v1></v1>
DIODE				C420	87-010-197-080		
	87-020-027-08	O OF C DIODE	100104	C421	87-012-140-080	OE C-CAP,S	470P-50 J CH
	87-A40-180-04			C422	87-010-184-080	OE C-CAP.S	3300P-50 K B
	87-A40-196-08			C423	87-010-175-080		
				C424	87-010-317-080		
				C425	87-012-140-080		
MAIN VCD (С.В			C426	87-010-197-080	UE C-CAP,S	0.01-25 K B
C101	87-010-197-08	0 OE C-CAP,S	0.01-25 K B <d></d>	C488	87-010-197-080	OE C-CAP,S	0.01-25 K B
C102			00-6.3 5L SRE <d></d>	C501	87-010-550-040		
C103			47P-50 J CH <d></d>	C502			0.1-25 Z F ©012
C104	87-010-197-08			C505	87-010-313-080		
C105	87-010-318-08	O UE C-CAP,S	4/1-20 0 Cil	C506	87-010-313-080	VE C-CAP, S	101-20 0 CU
C106	87-010-549-04	0 0E CAP,E 4	7-6.3 M 5L SRE	C507	87-010-197-080	OE C-CAP, S	0.01-25 K B
C107			220P-50 J CH GRM	C508	87-010-178-080		
C108	87-010-184-08			C509	87-010-178-080		
C109 C111	87-010-194-08 87-010-197-08			C510 C511	87-010-178-080 87-010-178-080		
CIII	0, 010 13, 00	o on c car, b	0.01 25 K D	6311	0, 010 1,0 000	on c an, b	10001 30 K 1
C112	87-012-358-08			C512	87-010-498-040		
C113			0.1-25 Z F C2012	C513	87-010-498-040		
C114	87-010-550-04			C514	87-010-318-080	•	
C115 C119			0.1-25 Z F C2012 0.1-25 Z F C2012	C515 C516	87-010-318-080 87-010-197-080		
C121			0.1-25 Z F C2012	C601	87-010-060-040		
C130	87-010-178-08			C602	87-010-432-040		
C201 C203			2-6.3 M 5L SRE 0.1-25 Z F C2012	C603 C604			0.1-25 Z F Q012 0.1-25 Z F Q012
C204	87-010-196-08			C605	87-A10-222-040		
	87-010-316-08			C606			0.1-25 Z F CO12
	87-010-499-04 87-010-197-08		2-6.3 M 5L SRE	C607 C616	87-012-140-080 87-010-552-040		
	87-010-197-08			C651	87-010-332-040		
	87-010-197-08			C652	87-010-496-040		

R	EF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANI NO.	
C	553	87-010-496-04	O OE CAP.E 3	.3-50 M 5L SRE 18P-50 J CH 0.033-25 2 F C2012 0.056-25 K B MK212 0.056-25 K B MK212	1,303	87-005-204-08	OE	COIL,47UH K EL0606
	701	87-010-313-08	O OE C-CAP.S	18P-50 J CH	1.304	87-005-204-08	U UE	COIL, 47UH K EL0606
	702	87-010-193-08	O OE C-CAP.S	0.033-25 % F C2012	T.401			COIL, 10UH K EL0606KSI
	703	87-010-993-08	O OE C-CAP S	0.055-25 K B MK212	1.402			C-COIL, 47UH FLC32C
	704	87-010-993-086	O OE C CAL,S	0.050-25 K B MK212	1402			
٠.	04	07 010-333-000	O OE C-CAF,5	0.030-23 K B MK212	D404	07-003-130-080	30 6	COIL,3.3UH K EL0606
C7	705	87-016-463-086	O OE C-CAP.S	0.33-16 B	L405 L601 L602 M601	87-005-189-080	017	COIL, 2.7UH K EL0606
	707	87-010-197-080	O OF C-CAP S	0 01-25 K B	L601			COIL, 4.7UH J FLR50
	708	87-010-805-080	O OF C-CAP.S	0.33-16 B 0.01-25 K B 1-16 Z F	1.602			COIL, 68UH RCR875D
	709	87-010-322-080	O OE C-CAP.S	100P-50 J CH 0.1-16 K R	M601			MOTOR, RF-500TB DC-5V (2MA)
	710	87-016-081-080	O OE C-CAP.S	0 1_16 P P	D740			C-RES,S 82K-1/10W F
٠.		0, 010 001 00	0 02 0 0111,0	0.1 10 K K	11/40	07-022-304-000	, OE	C-RES, 5 02R-1/10W F
C7	11	87-010-549-040	0 0E CAP, E 47	7-6.3 M 5L SRE 470P-50 J CH 0.1-25 Z F C2012 0.01-25 K B	R741	87-022-361-080	0E	C-RES,S 47K-1/10W F
C7	12	87-012-140-080	O OE C-CAP,S	470P-50 J CH	R742			C-RES,S 47K-1/10W F
C7	13	87-010-196-080	O DE C-CAP.S	0.1-25 Z F C2012	R743			C-RES, S 47K-1/10W F
C7	14	87-010-197-080	O DE C-CAP.S	0.01-25 K B	R744			C-RES,S 47K-1/10W F
C7	15	87-012-141-080	OE C-CAP.S	0.22-16 Z F	R745			C-RES,S 82K-1/10W F
			·			0, 022 304 000	. 05	C MB/5 02K-1/10W P
C7	16	87-010-186-020	OE C-CAP,S	4700F-50 B 0.22-16 Z F 0.1-25 Z F C2012	S101	87-036-109-010	1A	SW,MICRO SPPB61
C7	17	87-012-141-080	OE C-CAP,S	0.22-16 Z F	S102			SW,MICRO SPPB61
C7	18	87-010-196-080	OE C-CAP,S	0.1-25 Z F C2012	S103			SW,MICRO SPPB61
C7	19	87-010-196-080	OE C-CAP.S	0.1-25 Z F C2012	SFR101			SFR,47K H RH0638C
C7	20	87-010-549-040) OE CAP, E 47	7-6.3 M 5L SRE	S102 S103 SFR101 SFR102			SFR,100K H RH0638C
								•
	21	87-010-549-040) OE CAP,E 47	7-6.3 M 5L SRE 7-35 5L SRE 8-6.3 M 5L SRE 10-6.3 5L SRE	SFR103	87-024-175-080	0E	SFR,47K H RH0638C
	22	87-010-497-040) OE CAP,E 4.	7-35 5L SRE	X202	87-A70-027-080	1C	VIB,XTAL 8.0MHZ-100PPM
	23	87-010-549-040) OE CAP,E 47	7-6.3 M 5L SRE	X401			VIB,XTAL 13.5MHZ-50PPM
	43	01-010-220-040	OF CAP'E IO	00-6.3 5L SRE	X501	87-030-270-080	1C	VIB,XTAL 16.9344MHZ HC-49/U03
C7	26	87-010-197-080	OE C-CAP,S	0.01-25 K B				
C7	27	87-010-549-040	OF CAP.E 47	-6.3 M 5L SRE	LED C.B <f< td=""><td>'></td><td></td><td></td></f<>	'>		
				-6.3 M 5L SRE	LLD C.D			
	20	07 010 100 000	0 0 0 0 0	00000 50 77 0	I.RD701	87-017-733-080	OR.	LED, SEL1250SM <f></f>
	31	87-010-196-080	OE C-CAP.S	2200P-50 K B 0.1-25 Z F C2012 0.1-25 Z F C2012	LED701 LED702			LED, SEL1550CM <f></f>
	33	87-010-196-080	OE C-CAP.S	0.1-25 Z F C2012	LED703			LED, SEL1250SM <f></f>
					222703	0. 01. 155 000	011	DDD, DDD1250DM\[>
		87-010-196-080	OE C-CAP,S	0.1-25 Z F C2012				
C7.	35	87-010-196-080	OE C-CAP,S	0.1-25 Z F C2012	T-T C.B			
C7.		87-010-197-080						
C7.	37	87-010-805-080	OE C-CAP, S	1-16 Z F 1000P-50 K B	C411	87-018-214-080	0E (CAP TC U 0.1-50F
C7.	38	87-010-178-080	OE C-CAP, S	1000P-50 K B	LED411	87-070-288-010		
			•		M401			MOT ASSY, RF-300CA-11
C7	51	87-016-081-080	OE C-CAP.S	0 1-16 K R	DCA01	87-A90-156-010		
				K2125HM601 <v2></v2>	Q411	87-A30-031-010		
				K2125HM601 <v2></v2>	¥	07 1150 051 010	441	1 1K,113001
FC		86-ZG1-605-010			S401	87-036-109-010	1A 1	PIISH SWITCH
FC:		86-ZG1-608-010				3. 030 103 010	441	
			·					
J4					VIDEO SW (C.B		
L1		87-005-204-080						
L20		87-005-204-080			SW801	87-A90-238-010	1A S	SW,SL 1-1-3 9L
L30		87-005-204-080						
L30	02	87-005-204-080	UE COIL, 47U	H K EL0606				


○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち Chip Resistor Part Coding

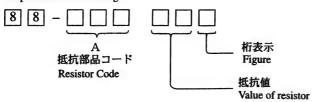


チップ抵抗 Chip resistor


容量	種類	許容誤差	記号	寸法 / Diamer	sions (mm)		抵抗コード : A
Wattage	Type	Tolerance	Symbol	外形 / Form	L	W	t	Resistor Code: A
1/16W	1608	5%	CJ	<u>k—L</u> →↓	1.6	0.8	0.45	108
1/10W	2125	5%	CJ	T	: 2	1.25	.0.45	118
1/8W	3216	5%	CJ	W	3.2	1.6	0.55	128

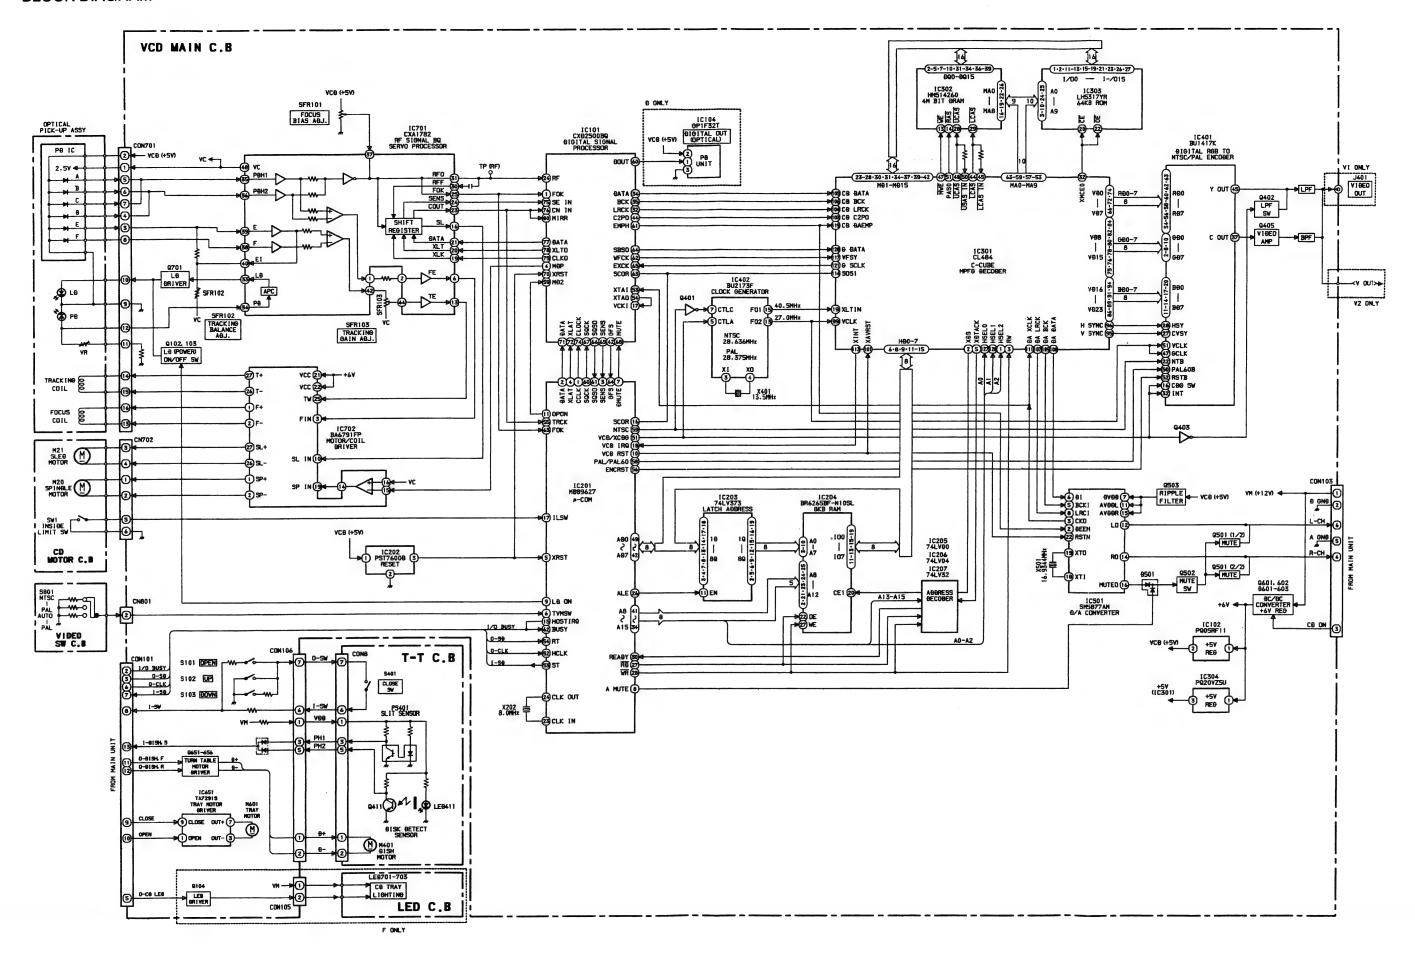

46

45

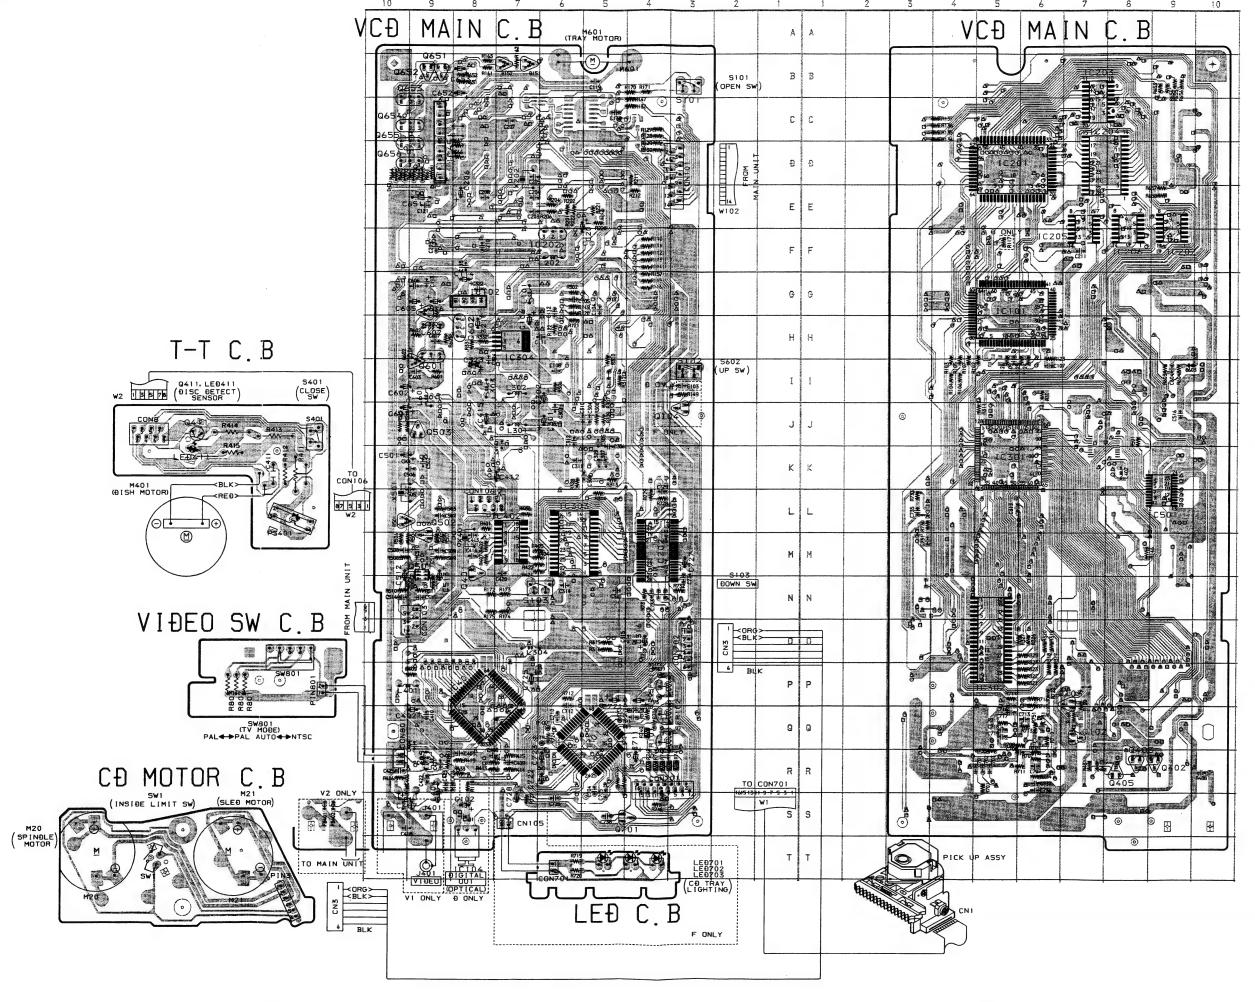

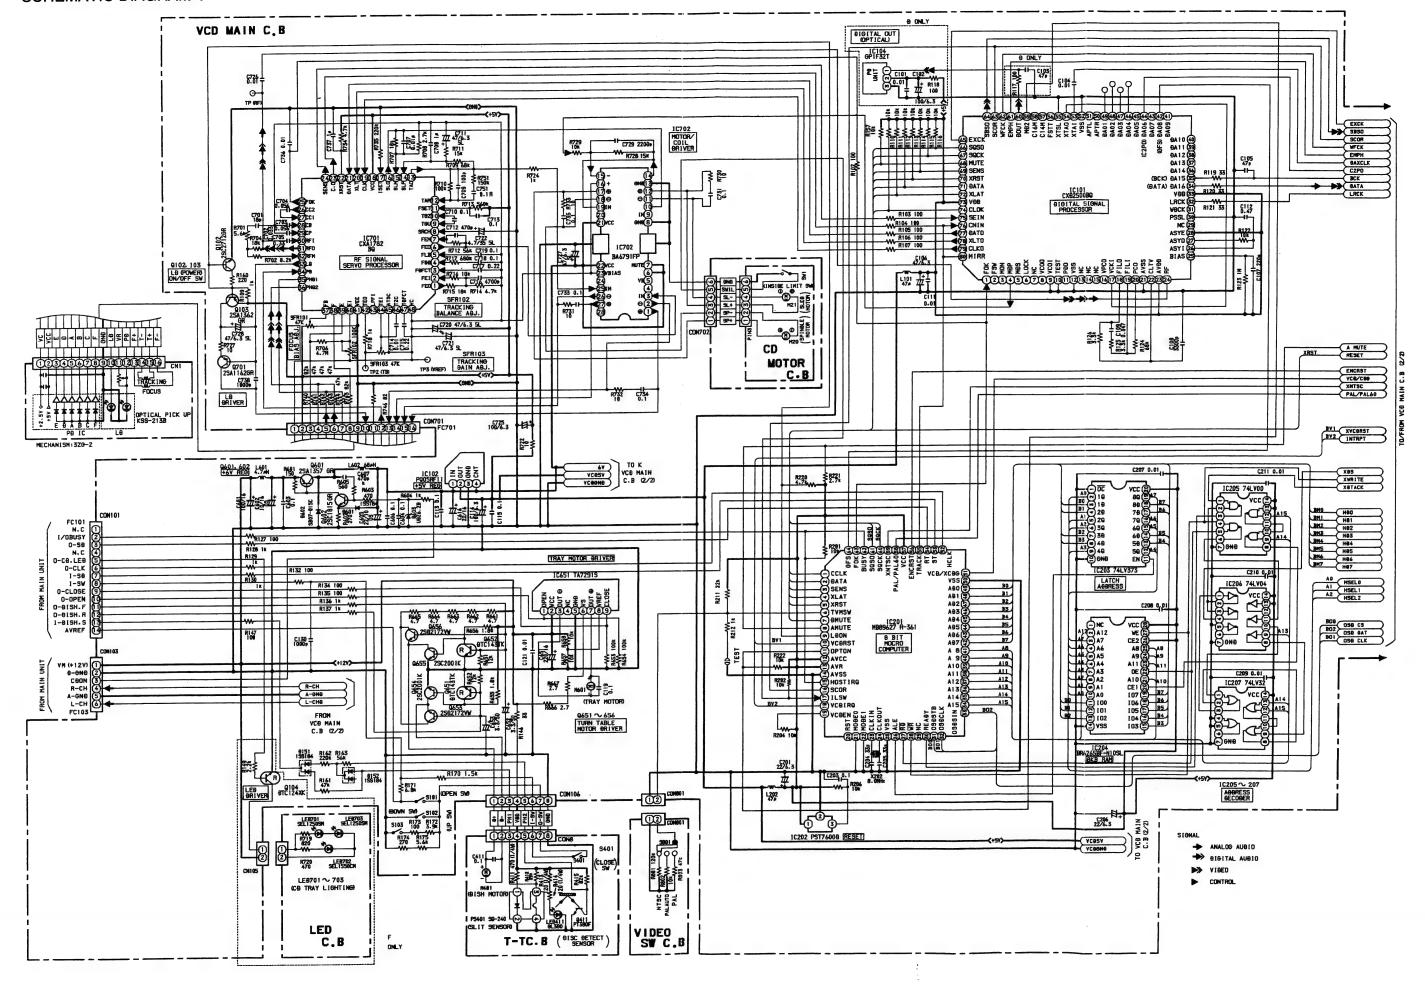

49


WAVE FORM

IC301 Pin (9) (XTLIN) 40.5MHz VCD PLAY

VOLT/DIV: 1V TIME/DIV: 10nS

TV MODE • NTSC

• PAL

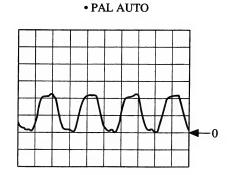

IC301 Pin (99) (VCLK) 27MHz±1350Hz VCD PLAY


VOLT/DIV: 1V TIME/DIV: 10nS

VOLT/DIV: 1V


TIME/DIV: 10nS

TV MODE • NTSC

• PAL • PAL AUTO

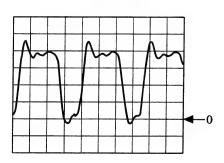


28.375MHz CDG PLAY TV MODE • PAL

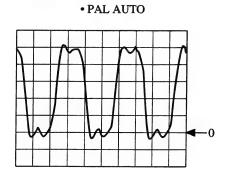


28.6363MHz CDG PLAY TV MODE • NTSC


VOLT/DIV: 1V TIME/DIV: 10nS

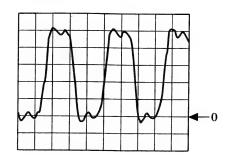


IC301 Pin 95 (V SYNC) VCD, CDG PLAY TV MODE: • NTSC • PAL AUTO

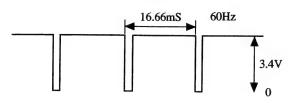


VCD, CDG PLAY TV MODE: • PAL

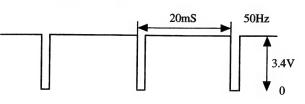


IC301 Pin (H SYNC) VCD, CDG PLAY TV MODE: • NTSC PAL AUTO

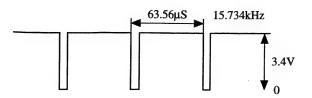


VCD, CDG PLAY TV MODE: • PAL

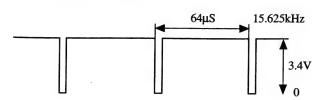



VIDEO OUT VOLT/DIV: 200mV C407 ⊖ side TIME/DIV: 10µS CDG PLAY: CD-T03 TRACK2 TV MODE: • NTSC

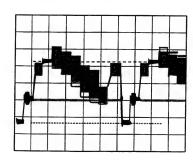

VCD PLAY: CD-T05 TRACK4 VOLT/DIV: 200mV TV MODE: • NTSC TIME/DIV: 10µS

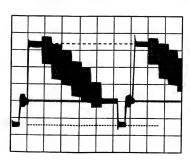

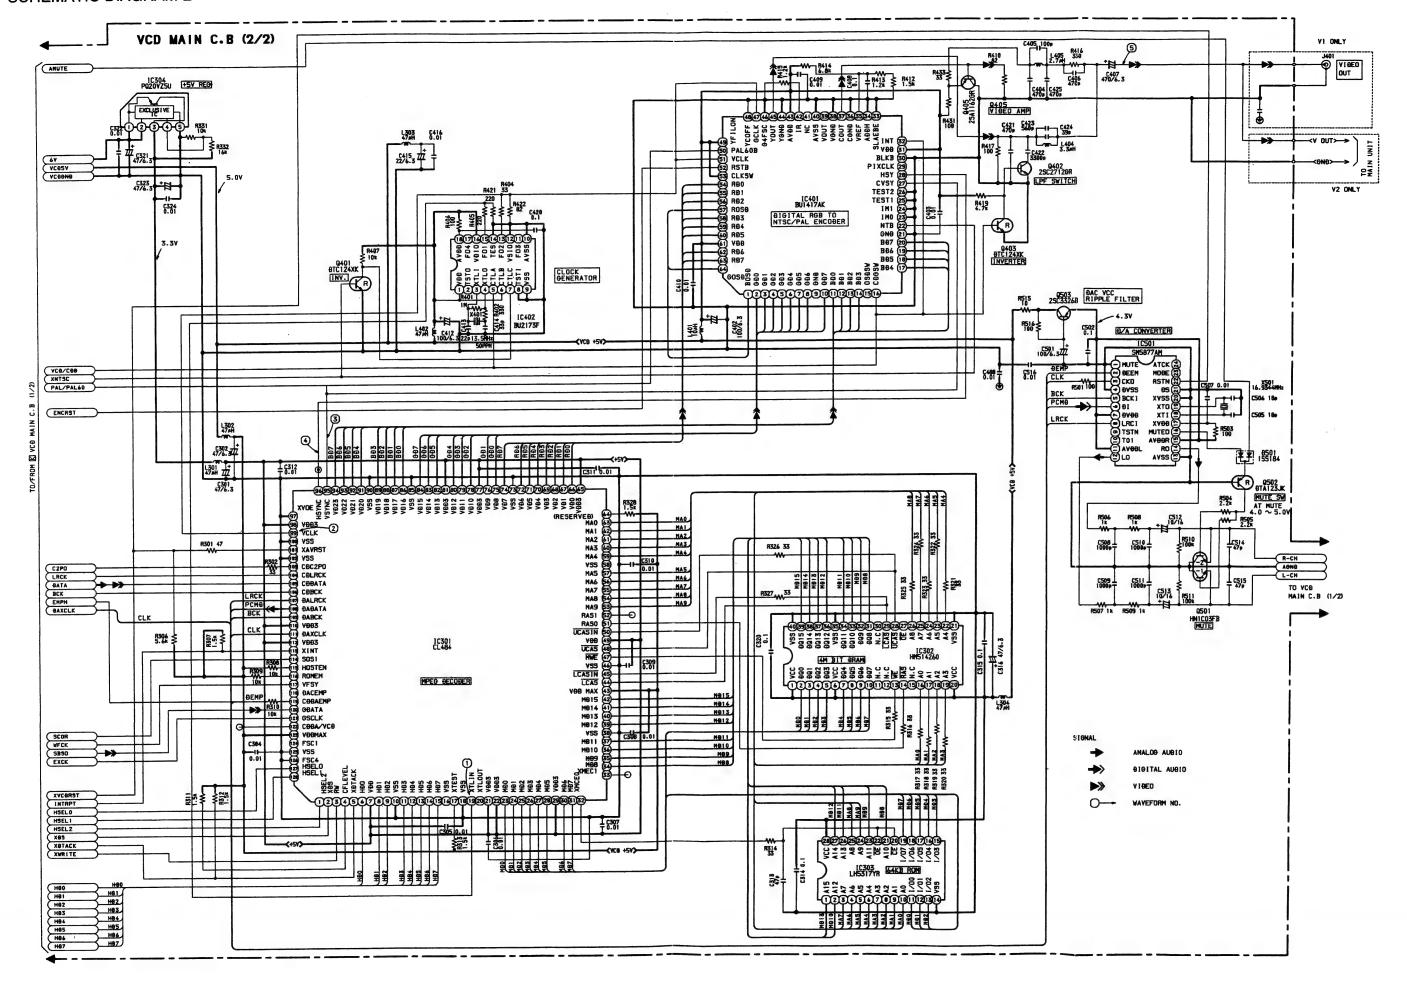

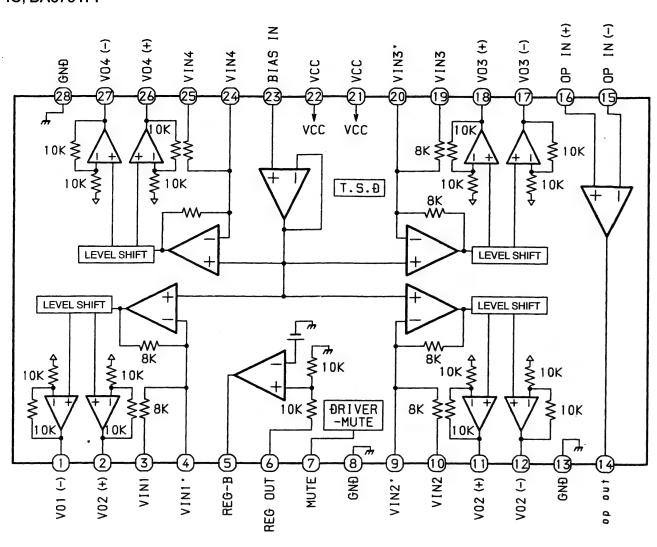

共通部分は、下記のページを参照して下さい。 Refer to the following pages for the common section.

■ IC DESCRIPTION

IC BLOCK DIAGRAM

■ MECHANICAL EXPLODED VIEW/PARTS LIST

40ページ参照 See page 40

IC DESCRIPTION IC, CXD2500BQ

端子番号	端子名称	I/O	機 能 説 明
1 .	FOK	I	フォーカスOK入力端子。SENS出力と、サーボ・オートシーケンサに用いる。
2	FSW	0	スピンドルモータの出力フィルタ切り換え出力。
3	MON	0	スピンドルモータのON-OFFコントロール出力。
4	MDP	O.	スピンドルモータのサーボ制御。
5	MDS	O.	スピンドルモータのサーボ制御。
6	LOCK	0	「GFSを、460Hzでサンプリングし、GFSが "H" の時H出力。8回連続 "L" の場合 "L" 出力。
7	NC	_	未使用。
8	VCOO	0	アナログEFM PLL用発振回路出力。
9	VCOI	I	アナログEFM PLL用発振回路入力。fLOCK=8.6436MHz
10	TEST	I	TEST用端子通常GND。
11	PDO	0	アナログEFM PLL用チャージポンプ出力。
12	VSS	_	GND
13	NC	_	未使用。
14	NC	 	未使用。
15	NC	-	未使用。
16	VPCO	0	バリピッチ用PLLチャージポンプ出力。
17	VCKI	I	バリピッチ用外付VCOからの、クロック入力。fc center=16.9344MHz
18	FILO	0	マスターPLL用 (スレーブ=デジタルPLL) フィルター出力。
19	FILI	I	マスターPLL用フィルター入力。
20	PCO	0	マスターPLL用チャージポンプ出力。
21	AVSS	_	アナログGND。
22	CLTV	I	マスター用VCOコントロール電圧入力。
23	AVDD	 	アナログ電源。(+3.5V)
24	RF	I	EFM信号入力。
25	BIAS	I	アシンメトリー回路定電流入力。
26	ASYI	I	アシンメトリーコンパレート電圧入力。
27	ASYO	0	EFMフルスイング出力 (L=VSS, H=VDD)
28	ASYE	I	L: アシンメトリー回路OFF H: アシンメトリー回路ON。
29	NC	_	未使用。
30	PSSL	I	オーディオデータ出力モード切換入力。"L"でシリアル出力"H"でパラレル 出力。
31	WDCK	0	48ビットスロット用D/Aインターフェース。ワードクロック f=2Fs
32	LRCK	0	48ビットスロット用D/Aインターフェース。LRクロック f=Fs
33	VDD		電源 (+3.5V)。
34	S DATA	0	PSSL= "H" の時DA16 (MSB) 出力。PSSL= "L" の時48ビットスロットのシリアルデータ。(2s' COMP, MSBファースト)
35	BCLK	О	PSSL= "H"の時DA15出力。PSSL= "L"の時48ビットスロットのビットクロック。
36	NC	0	PSSL= "H" の時DA14出力。PSSL= "L" の時64ビットスロットのシリアルデータ。(2s' COMP, MSBファースト)

端子番号	端子名称	I/O	機能説明		
27	NG		PSSL= "H"の時DA13出力。PSSL= "L"の時64ビットスロットのビットクロッ		
37	NC	0	ク。		
38	NC	0	PSSL= "H" の時DA12出力。PSSL= "L" の時64ビットスロットのLRクロック。		
39	GTOP	0	PSSL= "H"の時DA11出力。PSSL= "L"の時GTOP出力。		
40	XUGF	0	PSSL= "H"の時DA10出力。PSSL= "L"の時XUGF出力。		
41	XPLCK	0	PSSL= "H"の時DA09出力。PSSL= "L"の時XPLCK出力。		
42	GFS	0	PSSL= "H"の時DA08出力。PSSL= "L"の時GFS出力。		
43	RFCK	0	PSSL= "H"の時DA07出力。PSSL= "L"の時RFCK出力。		
44	C2PO	0	PSSL= "H"の時DA06出力。PSSL= "L"の時C2P0出力。		
45	XRAOF	0	PSSL= "H"の時DA05出力。PSSL= "L"の時XRAOF出力。		
46	MNT3	0	PSSL= "H"の時DA04出力。PSSL= "L"の時MNT3出力。		
47	MNT2	0	PSSL= "H"の時DA03出力。PSSL= "L"の時MNT2出力。		
48	MNT1	0	PSSL= "H"の時DA02出力。PSSL= "L"の時MNT1出力。		
49	MNT0	0	PSSL= "H"の時DA01出力。PSSL= "L"の時MNT0出力。		
50	APTR	0	アパーチャー補正用コントロール出力。Rchの時"H"。		
51	APTL	0	アパーチャー補正用コントロール出力。Lchの時 "H"。		
52	VSS	_	GND		
53	XTAI	I	16.9344MHzのXtal発振回路入力。又は33.8688MHz入力。		
54	XTAO	0	16.9344MHzのXtal発振回路出力。		
55	XTSL	I	Xtal選択入力端子。Xtalが、16.9344MHzの時"L"。33.8688MHzの時"H"にする。		
56	FSTT	0	53, 54端子の、2/3分周出力。バリピッチで変化しない。		
57	C4M	0	4.2336MHz出力。バリピッチされた時、同時に変化する。		
58	C16M	0	16.2336MHz出力。バリピッチされた時、同時に変化する。		
59	MD2	I	Digital-Out ON/OFFコントロール、"H"でON、"L"でOFFする。		
60	DOUT	0	Digital-Out出力端子。		
61	ЕМРН	0	再生Discがエンファシス有りの時 "H" 出力。無しの時 "L" 出力。		
62	WFCK	0	WFCK (Write Frame Clock) 出力。		
63	SCOR	0	サブコードシンクSOかS1どちらか検出された時 "H" 出力。		
64	SBSO	0	SubP~Wのシリアル出力。		
65	EXCK	I	SBSOリード・アウト用、クロック入力。		
66	SQSO	0	SubQ 8bit及びPCMピーク、レベルデータ16bit出力。		
67	SQCK	I	SQSOリード・アウト用、クロック入力。		
68	MUTE	I	"H" でミュート。"L" で解除。		
69	SENS	0	SENS出力。CPUへ出力。		
70	XRST	I	システムリセット。"L" でリセット。		
71	DATA	I	CPUより、シリアルデータ入力。		
72	XLAT	I	CPUより、ラッチ入力。立下がりで、シリアルデータをラッチ。		
73	VDD		電源 (+3.5V)		
74	CLOK	I	CPUより、シリアルデータ転送クロック入力。		
75	SEIN	I	SSPより、センサ入力。		

端子番号	端子名称	I/O	機能説明
76	CNIN	I	トラックジャンプ数カウント信号入力。
77	DATO	0	SSPへシリアルデータ出力。
78	XLTO	0	SSPへシリアルデータラッチ出力。立下がりでラッチ。
79	CLKO	0	SSPへシリアルデータ転送クロック出力。
80	MIRR	I	ミラー信号入力。オートシーケンサで、128トラック以上のジャンプに使う。

IC, SM5877AM

端子番号	端子名称	I/O	機能説明	
1	MITTE	I	MODE=H: ソフトミュートON/OFF端子。(Hでミュート)	
1	MUTE	1	MODE=L: アッテネータレベルDOWN/UP端子。(HでDOWN)	
2	DEEM	I	ディエンファシスON/OFF端子。(HでディエンファシスON)	
3	СКО	0	発振部クロック出力。(16.9344MHz)	
4	DVSS	_	ディジタルVSS端子。	
5	BCKI	I	ビットクロック入力端子。	
6	DI	I	シリアルデータ入力端子。	
7	DVDD	_	ディジタルVDD端子。	
8	LRCI	I	サンプルレートクロック (fs) 入力端子。(H=Lch/L=Rch)	
9	TSTN	I	LSIのテスト用入力。(Lでテスト)	
10	TO1	0	テスト用出力1。(通常時Lowレベル出力)	
11	AVDDL	_	アナログVDD端子。(L-ch用)	
12	LO	0	L-chアナログ出力端子。	
13	AVSS	_	アナログVSS端子。	
14	RO	0	R-chアナログ出力端子。	
15	AVDDR	_	アナログVDD端子。(R-ch用)	
16	MUTEO	0	インフィニティ・ゼロ検出出力。	
17	XVDD	_	X'tal系VDD端子。	
18	хті	I	X'tal発振端子。(又は、外部クロック入力端子16.9344MHz)	
19	хто	0	X'tal発振端子。	
20	XVSS	_	X'tal系VSS端子。	
21	DS	I	倍速/ノーマル再生モード選択。(Hで倍速再生)	
22	RSTN	I	リセット端子。(Lでリセット)	
23	MODE	I	ソフトミュート/アッテネータモード選択。(Hでソフトミュートモード)	
24	ATCK	I	アッテネータレベル設定クロック。(MODE=Hの時は、無視)	

IC, MB89627

端子番号	端子名称	I/O	機 能 説 明		
1	CCLK	0	SSP、DSPコントロールクロック。		
2	DATA	0	SSP、DSPコントロールクデータ。		
3	SENS	I	SSP、DSPステータス。		
4	XLAT	0	SSP、DSPコマンドラッチ。		
5	XRST	0	SSP、DSPリセット。		
6	TVMSW	0	OFF/NTSC/PAL/PAL60 AUTO/AUTO/TEST。*注参照。		
7	DMUTE	0	ディジタルミュート。		
8	AMUTE	0	アナログミュート。		
9	LDON	0	サーボ基板電源ON。		
10	VCDRST	0	ビデオCDリセット。		
11	OPTON	0	光学ディジタル出力ON。		
12	VCC	1-	A/DコンバータVcc。		
13	VCC	-	A/DコンバータVref。		
14	VSS	1-	A/DコンバータVsso		
15	HOSTIRQ	I	ホストCPUインタラプトリクエスト。		
16	SCOR	I	サブコードシンク0 (サブコードIRQ)。		
17	ILSW	I	内側リミットスイッチ。		
18	VCDIRQ	I	ビデオCDデコーダインタラプトリクエスト。		
19	N. C.	_	未使用。		
20	RST	I	CPUリセット。		
21	MODE0	I	CPUモード(プルダウン)。		
22	MODE1	I	CPUモード(プルダウン)。		
23	CLKIN	0	8 MHz システムクロック。		
24	CLKOUT	I	8 MHz システムクロック。		
25	VSS	-	GND _o		
26	ALE	0	アドレスラッチストローブ。		
27	RD	0	データリードストローブ。		
28	WR	0	データライトストローブ。		
29	CLK	0	クロック出力。		
30	READY	I	ビデオCDデコーダレディ。		
31	OSDCS	0	OSDCイネーブル。		
32	OSDCLK	0	OSDCデータクロック。		
33	OSDSIN	0	OSDCデータ。		
34~41	A8~A15	0	アドレスバス8~15。		
42~49	AD0~AD7	I/O	アドレスバス0~7。		
50	VSS	_	GND _o		
51	VCD/CDG	0	ビデオCD/CDGスイッチ。		
52	HCLK	I	ホストCPUコントロールクロック。		
53	ST	0	ホストCPU送信データ。		
54	RT	I	ホストCPU受信データ。		
55	TRACK	I	トラバースカウンタ。		

端子番号	端子名称	I/O	機能説明
56	ENCRST	0	ビデオエンコーダリセット。
57	DVCC	_	DVCC _o
58	PAL/PAL60	0	PAL/PAL60スイッチ。
59	XNTSC	0	PAL/NTSCスイッチ。
60	SQCK	0	サブコードQリードクロック。
61	SQSO	I	サブコードQシリアルデータ。
62	BUSY	I/O	ホストCPUインターフェースビジー信号。
63	FOK	I	フォーカスサーボOK検出。
64	GFS	I	フレームシンク検出

NOTE:

- ・マイコンのアナログ入力 (TVMSW:6ピン) を下記の通り7分割しコントロールします。
- : 出力は、PAL/PAL60 (58ピン)、XNTSC (59ピン) の2つのポートとIC301 (CL484) に対してのコマンド設定 (Set Video Format) です。

TVMSV	W(6 ピン)	DISC のエン	_	PAL/PAL60	XNTSC	
電圧(V)	モード	コード方式	TV 出力モード	(58 ピン)	(59 ピン)	Set Video Format
5.00	OFF	_	未使用(NTSC出)	カモード)		
4.58	NTSC		NTSC	Н	L	NTSC
3.75	PAL		PAL	Н	Н	PAL
2.92	PAL60		PAL60	L	Н	NTSC
2.08	PAL AUTO	NTSC	PAL60	L	Н	NTSC
1.05	PAL AUTO	PAL	PAL	Н	Н	PAL
1.25	AUTO	NTSC	NTSC	Н	L	NTS C
0.42	AUIO	PAL	PAL	Н	Н	PAL
0.42	TEST —		サーボ回路調整用(NTSC 出力モード)			
0.00				-		

- *1 DISCのエンコード方式の判別は、MPEGデータのV_SIZE (1A1h/Word) から判断する。
- *2 サーボ回路調整用とは、調整時 (可変抵抗を操作中) にサーボが外れすぎるとエマージェンシー処理に入ってしまうので、その処理に入らないようにしている。
- *3 上記の他、ENCRST (56ピン) は、TV Encoderに対するリセット信号でIC401 (BU1417AK) のCDGSW、NTB、CVSY、HSY、PIXCLK、GCLK、PAL60B、VCLKの各入力ポートが変化したときにアクテイブ "L" のパルスを出力する。
 - ① CD部の基板に電源が入ったとき
 - ② TOCを読み始めるとき
 - ③ 上記のようなモード変化時
 - ・TVMSW切り替え
 - · Video CD Discの取り替えによるエンコード方式の切り替え
 - ・Video CD DiscとCD-DAまたはCD-Gとの取り替え

IC, BU1417AK

端子番号	端子名称	I/O	機能説明
1	BOSD	I	OSDブルーデータ入力。
2	GD0	I	グリーンデータビット0 (LSB)。
3~8	GD1∼GD6	I	グリーンデータビット1~6。
9	GND	_	ディジタルGND。
10	GD7	I	グリーンデータビット7 (MSB)。
11	BD0	I	ブルーデータビット0 (LSB)。
12~14	BD1~BD3	I	ブルーデータビット1~3。
15	OSDSW	I	OSD入力イネーブル。
16	CDGSWB	I	Video-C/CD-G選択。
17~19	BD4~BD6	I	ブルーデータビット4~6。
20	BD7	I	ブルーデータビット7 (MSB)。
21	GND		ディジタルGND。
22	NTB	I	Video-NTSC/PAL選択。
23、24	IMO、IM1	I	入力モードセットビット0、1。
25、26	TEST1、TEST2	I	通常GNDへプルダウン。
27	CVSY	I	C-SYNC又はV-SYNC入力。
28	HSY	I	H-SYNC入力。
29	PIXCLK	0	内部クロックの1/2周波数。
30	BLKB	I	データブランキング入力イネーブル。
31	VDD	_	ディジタルVDD。
32	INT	I	インターレース/ノンインターレース。
33	SLABEB	I	マスター/スレーブモードセット。
34	ADDH	I	ノンインターレース時1ライン追加。
35	VREF	I	基準電圧 (1.29 V)。
36	CGND	_	クロマ出力GND。
37	COUT	0	クロマ出力。
38	VGND	_	コンポジット出力GND。
39	VOUT	0	コンポジット出力。
40	AVSS		アナログ (DAC、VREF) GND。
41	NC	_	未使用。
42	IR	I	基準抵抗 (1.2 K)。
43	AVDD	_	アナログ (DAC、VREF) VDD。
44	YGND	_	ルミナンス出力GND。
45	YOUT	0	ルミナンス出力。
46	G4FSC	I	GNDへプルダウン。
47	GCLK	I	CD-Gへのビデオクロック入力。
48	YCOFF	I	DAC (YOUT、COUT) OFF。
49	YFILON	I	GNDへプルダウン。
50	PAL60B	I	NTB = HIGH時PAL60 ON.
51	VCLK	I	VCDへのビデオクロック入力。
52	RSTB	I	ロジック部イニシアルリセット。

端子番号	端子名称	I/O	機能説明
53	CLKSW	I	入力クロックイネーブル分割。
54	RD0	I	レッドデータビット0 (LSB)。
55、56	RD1、RD2	I	レッドデータビット1、2。
57	ROSD	I	OSDレッドデータ入力。
58~60	RD3~RD5	I	レッドデータビット3~5。
61	VDD	_	ディジタルGND。
62	RD6、RD7	I	レッドデータビット6。
63	GOSD	I	レッドデータビット7。

IC, CL484

	_				
端子番号	端子名称	I/O	機 能 説 明		
1	HSEL2	I	ホスト・アドレス・バス。		
2	-DS	I	データ・ストローブ。		
3	R/-W	I	リード/ライト。		
4	CFLEVEL	0	符合化データFIFOレベルステータス。オープンドレイン。		
5	-DACK	0	ホスト・データ・アクノリッジ。オープンドレイン。		
6	HD0	I/O	ホスト・データ・バス。		
7	VDD3		電源。3.3Vで使用。		
8、9	HD1、HD2	I/O	ホスト・データ・バス。		
10	VSS	-	グランド。		
11~15	HD3~HD7	I/O	ホスト・データ・バス。。		
16	VSS	-	グランド。		
17	-TEST	I	テスト端子。通常はHighに固定。		
18	VSS	-	グランド。		
19	XTL IN	I	グローバルロック 40.5MHz。		
20	XTL OUT	0	グローバルロック 40.5MHz。		
21, 22	VDD3	_	電源。3.3Vで使用。		
23~28	MD0~MD5	I/O	メモリ・データ・バス。		
29	VDD3	_	電源。3.3Vで使用。		
30、31	MD6、MD7	I/O	メモリ・データ・バス。		
32、33	-MCE0、-MCE1	0	チップ・イネーブル。		
34~37	MD8~MD11	I/O	メモリ・データ・バス。		
38	VSS	_	グランド。 -		
39~42	MD12~MD15	I/O	メモリ・データ・バス。		
43	VDDMAX		電源。5.0Vで使用。		
44	-LCAS	0	下位カラム・アドレス・ストローブ。		
45	-LCASIN	I	下位データ・ラッチ・イネーブル。		
46	VSS	_	グランド。		
47	-MWE	0	ライト・イネーブル。		
48	-UCAS	0	上位カラム・アドレス・ストローブ。		
49	VDD3	_	電源。3.3Vで使用。		
50	-UCASIN	I	上位データ・ラッチ・イネーブル。		
51, 52	RASO, RAS1	0	ロー・アドレス・ストロープ。		
53~57	MA9~MA5	0	メモリ・アドレス・バス。		
58	VSS	_	グランド。		
59~63	MA4~MA0	0	メモリ・アドレス・バス。		
64	RESERVED	_	リザーブ。		
65	VDD3	_	電源。3.3Vで使用。		
66~72	VD0~VD6	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
73	VSS	_	グランド。		
74~76	VD7~VD9	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
77	VDD3	_	電源。3.3Vで使用。		

端子番号	端子名称	I/O	機能説明		
78~80	VD10~VD12	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
81	VDD3		電源。3.3Vで使用。		
82~84	VD13~VD15	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
85	VSS	_	グランド。		
86~89	VD16~VD19	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
90	VSS		グランド。		
91~94	VD20~VD23	0	ピクセル・データ・バス。RGBまたは、YCbCrフォーマット。		
95	-VSYNC or CSY	I/O	垂直同期信号。		
96	-HSYNC	I/O	水平同期信号。		
97	-VOE	I	ビデオ出力イネーブル。		
98	VDD3	_	電源。3.3Vで使用。		
99	VCLK	I/O	ビデオクロック。		
100	VSS	_	グランド。		
101	-RESET	I	ハードウェアリセット。		
102	vss		グランド。		
103	CD-C2PO	I	データエラー。CD-ROMデータ入力時に使用。		
104	CD-LRCK	I	LRクロック。		
105	CD-DATA	I	CD-DSPからのシリアル・データ入力。		
106	CD-BCK	I	CDデコーダのビット・クロック。		
107	DA-LRCK	0	LRクロック。		
108	DA-DATA	0	ビット・シリアル・オーディオサンプル信号。		
109	DA-BCK	0	オーディオ・ビット・クロック。		
110	VDD3		電源。3.3Vで使用。		
111	DA-XCLK	I	外部オーディオ周波数クロック。		
112	VDD3	_	電源。3.3Vで使用。		
113	-INT	0	割り込み要求。		
114	CDG-S0S1	I	ブロック・スタートSYNC。		
115	HOST_ENA	I	ホスト・イネーブル。		
116	RAM_ENA	I	ブートROMイネーブル。		
117	CDG-VFSY	I	フレーム・スタートまたは、コンポジットSYNC。		
118	DAC_EMP	0	出力エンファシス・フラグ。		
119	CDDA_EMP	I	入力エンファシス・フラグ。		
120	CDG-SDATA	I	サブコード・データ。		
121	CDG-SCLK	I/O	サブコード・データ・クロック。		
122	CDDA/VCD	0	入力データ判別。H: CDDA。L: ビデオCD。		
123	VDDMAX	I	電源。5.0Vで使用。		
124	FSC1	0	126ピン (FSC4) の入力CLKを1/4分周した出力。		
125	VSS	_	グランド。		
126	FSC4	I	分周器用入力。		
127、128	HSELO, HSEL1	I	ホスト・アドレス・バス。		

IC, BU2173AF

端子番号	端子名称	I/O	機能説明
1	VDD	_	デジタルVDD。
2	TSTO	0	ノーマルモード時はオープン。(テスト時に使用)
3	XTALI	I	基準発振入力。
4	XTALO	0	基準発振出力。
5	CTRLA	I	CD-G/VCDクロック切り替え端子。
6	CTRLB	I	ノーマルモード時はHに固定。
7	CTRLC	I	CD-G PAL/NTSCクロック切り替え端子。
8	TSTI	I	ノーマルモード時はVSSに接続。(テスト時に使用)
9	VSS	_	デジタル GND。
10	AVSS	_	アナログ GND。
11	FOUT3	0	未使用 ノーマルモード時はオープン。
12	VSSIO	_	I/O GND _o
13	FOUT2	0	クロック出力。(2)
14	TEST	_	テストモード設定 ノーマルモード時はVSSに接続。
15	FOUT1	0	クロック出力。(1)
16	VDDIO	_	I/O VDD _o
17	FOUT4	0	クロック出力。(4)
18	AVDD	_	アナログ VDD。

IC, CXD2500BQ

Pin No.	Pin Name	ľO	Description		
1	FOK	I	Focus OK input terminal. Used for SENS output and servo auto sequencer.		
2	FSW	0	Spindle motor output filter selection output.		
3	MON	0	Spindle motor ON-OFF control output.		
4	MDP	0	Spindle motor servo control.		
5	MDS	0	Spindle motor servo control.		
6	LOCK	0	H output when GFS is sampled at 460 Hz and GFS is H. L output when L is continuously 8 times.		
7	NC	1_	Not used.		
8	VCOO	0	Oscillator circuit output for analog EFM PLL.		
9	VCOI	I	Oscillator circuit input for analog EFM PLL. fLOCK = 8.6436 MHz.		
10	TEST	I	TEST terminal. Normally GND.		
11	PDO	0	Charge pump output for analog EFM PLL.		
12	VSS	1_	GND.		
13	NC		Not used.		
14	NC	_	Not used.		
15	NC	_	Not used.		
16	VPCO	0	Charge pump output for vari-pitch PLL.		
17	VCKI	I	Clock input from external VCO for vari-pitch. fc center = 16.9344 MHz.		
18	FILO	0	Filter output for master PLL (slave = digital PLL).		
19	FILI	I	Filter input for master PLL.		
20	PCO	0	Charge pump output for		
20	AVSS				
	CLTV	I	Analog GND.		
22	AVDD	<u> </u>	VCO control voltage input for master.		
	RF	I	Analog power supply. (+3.5 V) EFM signal input.		
24		-			
25	BIAS	I	Asymmetry circuit constant current input.		
26	ASYI	I	Asymmetry comparate voltage input.		
27	ASYO	0	EFM full swing output (L = Vss, H = VDD.)		
28	ASYE	I	L: asymmetry circuit OFF, H: asymmetry circuit ON.		
29	NC	_	Not used.		
30	PSSL	I	Audio data output mode selection input. Serial output at L, parallel outpu at H.		
31	WDCK	0	D/A interface for 48-bit slot. Word clock f = 2 Fs.		
32	LRCK	0	D/A interface for 48-bit slot. LR clock $f = Fs$.		
33	VDD		Power supply. (+3.5 V)		
34	S DATA	О	DA16 (MSB) output when PSSL = H. 48-bit slot serial data when PSSL : L. (2's COMP, MSB first).		
35	BCLK	0	DA15 output when PSSL = H. 48-bit slot bit clock when PSSL = L.		
36	NC	0	DA14 output when PSSL = H. 64-bit slot serial data when PSSL = L. (2) COMP, MSB first).		
37	NC	0	DA13 output when PSSL = H. 64-bit slot bit clock when PSSL = L.		
38	NC	0	DA12 output when PSSL = H. 64-bit slot LR clock when PSSL = L.		

Pin No.	Pin Name	I/O	Description			
39	GTOP	0	DA11 output when PSSL = H. GTOP output when PSSL = L.			
40	XUGF	0	DA10 output when PSSL = H. XUGF output when PSSL = L.			
41	XPLCK	0	DA09 output when PSSL = H. XPLCK output when PSSL = L.			
42	GFS	0	DA08 output when PSSL = H. GFS output when PSSL = L.			
43	RFCK	0	DA07 output when PSSL = H. RFCK output when PSSL = L.			
44	C2PO	0	DA06 output when PSSL = H. C2P0 output when PSSL = L.			
45	XRAOF	0	DA05 output when PSSL = H. XRAOFoutput when PSSL = L.			
46	MNT3	0	DA04 output when PSSL = H. MNT3 output when PSSL = L.			
47	MNT2	0	DA03 output when PSSL = H. MNT2 output when PSSL = L.			
48	MNT1	О	DA02 output when PSSL = H. MNT1 output when PSSL = L.			
49	MNT0	О	DA01 output when PSSL = H. MNT0 output when PSSL = L.			
50	APTR	0	Aperture correction control output. H when R channel.			
51	APTL	0	Aperture correction control output. H when L channel.			
52	VSS	_	GND.			
53	XTAI	I	Input to 16.9344 MHz X'tal oscillator circuit. or 33.8688 MHz input.			
54	XTAO	0	16.9344 MHz X'tal oscillator output.			
55	XTSL	I	X'tal selection input. L when X'tal is 16.9344 MHz. H when 33.8688 MHz.			
56	FSTT	0	2/3 divider output of the pins 53 and 54. Does not change with vari-pitch.			
57	C4M	0	4.2336 MHz output. When vari-pitch is performed, it changes too.			
58	C16M	0	16.2336 MHz output. When vari-pitch is performed, it changes too.			
59	MD2	I	Digital-out ON/OFF control. ON at H, OFF at L.			
60	DOUT	0	Digital-out terminal.			
61	ЕМРН	0	H output when the playback disc has emphasis. L output without emphasis.			
62	WFCK	0	WFCK (Write Frame Clock) output.			
63	SCOR	0	H output when S0 or S1 of the subcode sync is detected.			
64	SBSO	О	Serial output of Sub P to W.			
65	EXCK	I	Clock input for SBSO read out.			
66	SQSO	0	SubQ 8-bit and PCM peak level data. 16-bit output.			
67	SQCK	I	Clock input for SQSO readout.			
68	MUTE	I	Mute at H. Release at L.			
69	SENS	0	SENS output. Output to CPU.			
70	XRST	I	System reset. Reset at L.			
71	DATA	I	Serial data input from CPU.			
72	XLAT	I	Latch input from CPU. Latches serial data at fall-down edge.			
73	VDD	_	Power supply (+3.5 V).			
74	CLOK	I	Serial data transfer clock input from CPU.			
75	SEIN	I	Sensor input from SSP.			
76	CNIN	I	Track jump number counted signal input.			
77	DATO	0	Serial data output to SSP.			
78	XLTO	0	Serial data latch output to SSP. Latches at fall-down edge.			
79	CLKO	0	Serial data transfer clock output to SSP.			
80	MIRR	I	Mirror signal input. Used for jump of 128 track or more at auto sequencer.			

IC, SM5877AM

Pin No.	Pin Name	I/O	Description
1	MUTE	I	MODE = H: Soft mute ON/OFF terminal. (Mute at H).
1	MULE		MODE = L: Attenuator level DOWN/UP terminal. (DOWN at H).
2	DEEM	I	De-emphasis ON/OFF terminal. (De-emphasis ON at H).
3	СКО	0	Oscillator clock output. (16.9344 MHz).
4	DVSS	_	Digital VSS terminal.
5	BCKI	I	Bit clock input terminal.
6	DI	I	Serial data input terminal.
7	DVDD	_	Digital VDD terminal.
8	LRCI	I	Sample rate clock (fs) input terminal. (H = L ch/L = R ch).
9	TSTN	I	LSI test input.
10	TO1	0	Test output 1. (Normally low level output).
11	AVDDL	_	Analog VDD terminal. (For L ch).
12	LO	0	Left channel analog output terminal.
13	AVSS	-	Analog VSS terminal.
14	RO	О	Right channel analog output terminal.
15	AVDDR	_	Analog VDD terminal. (For R ch).
16	MUTEO	0	Infinity zero detection output.
17	XVDD	_	X'tal system VDD terminal.
18	XTI	I	X'tal oscillator terminal. (Or external clock input terminal of 16.9344 MHz).
19	хто	0	X'tal oscillator terminal.
20	XVSS	_	X'tal system VSS terminal.
21	DS	I	Double-speed/normal playback selection. (Double-speed at H).
22	RSTN	I	Reset terminal. (Reset at L).
23	MODE	I	Soft mute/Attenuator mode selection. (Soft mute at H).
24	ATCK	I	Attenuator level setup clock (Ignored when MODE = H).

IC, MB89627

Pin No.	Pin Name	I/O	Description
1	CCLK	0	SSP, DSP Control Clock.
2	DATA	0	SSP, DSP Control Data.
3∙	SENS	I	SSP, DSP Status.
4	XLAT	0	SSP, DSP Command Latch.
5	XRST	0	SSP, DSP Reset.
6	TVMSW	0	OFF/NTSC/PAL/PAL60/PAL AUTO/AUTO/TEST. *NOTE
7	DMUTE	0	Digital Mute.
8	AMUTE	0	Analog Mute.
9	LDON	0	Servo PCB Power on.
10	VCDRST	0	Video CD Reset.
11	OPTON	0	Optical Digital Output ON.
12	VCC	1_	A/D Converter VCC.
13	VCC	_	A/D Converter VREF.
14	VSS	-	A/D Converter VSS.
15	HOSTIRQ	I	Host CPU Interrupt Request.
16	SCOR	I	Subcode Sync 0. (Subcode IRQ)
17	ILSW	I	Inter Limit Switch.
18	VCDIRQ	I	Video CD Decoder Interrupt Request.
19	N. C.	I	Not used.
20	RST	I	CPU Reset.
21	MODE0	I	CPU MODE. (Pull-down)
22	MODE1	I	CPU MODE. (Pull-down)
23	CLKIN	0	8MHz System Clock.
24	CLKOUT	I	8MHz System Clock.
25	VSS	_	GND.
26	ALE	0	Address Latch Strobe.
27	RD	0	Data Read Strobe.
28	WR	0	Data Write Strobe.
29	CLK	0	Clock out.
30	READY	I	Video CD Decoder Ready.
31	OSDCS	0	OSDC Enable.
32	OSDCLK	0	OSDC Data Clock.
33	OSDSIN	0	OSDC Data.
34-41	A8-A15	0	Address Bus 8-15.
42-49	AD0-AD7	I/O	Address/Data Bus 0-7.
50	VSS	_	GND.
. 51	VCD/CDG	0	Video CD/CDG Switch.
52	HCLK	I	Host CPU Control Clock.
53	ST	0	Host CPU Control Send Data.
54	RT	I	Host CPU Control Receive Data.

Pin No.	Pin Name	I/O	Description
56	ENCRST	0	Video Encoder Reset.
57	DVCC	_	DVCC.
58	PAL/PAL60	0	PAL/PAL60 Switch.
59	XNTSC	0	PAL/NTSC Switch.
60	SQCK	О	Subcode Q Read Clock.
61	SQSO	I	Subcode Q Serial Data.
62	BUSY	I/O	Host CPU I/F Busy Signal.
63	FOK	I	Focus Servo OK Detect.
64	GFS	I	Frame Sync Detect.

Note

- Analog input (TVMSW: 6 pin) of the microprocessor is divided into 7, then controlled.
- The output are the command setting (Set Video Format) to the two ports of PAL/PAL60 (58 pin), XNTSC (59 pin) and IC301 (CL484).

TVMSW	/ (6 pins)	DISC encoding	TV output mode	PAL/PAL60	XNTSC	Set Video Format	
Volt (V)	Mode	system	1 v output mode	(58 pins)	(59 pins)	Set video i ormat	
5.00	OFF	_	Not used (NTSC output mode).				
4.58	NTSC	_	NTSC	Н	L	NTSC	
3.75	PAL	_	PAL	Н	Н	PAL	
- 2.92 -	PAL60	_	PAL60	L	Н	NTSC	
_ 2.08 _	PAL AUTO	NTSC	PAL60	L	Н	NTSC	
	PAL AUTO	PAL	PAL	Н	Н	PAL	
1.25	AUTO	NTSC	NTSC	Н	L	NTSC	
L	AUTO	PAL	PAL	Н	Н	PAL	
0.42	TEST	_	For servo circuit ac	ljustment (NTSC ou	tput mode).		
0.00							

- *1 As to identification of the disc encoding system, it is identified from the V_SIZE (1A1h/word) of the MPEG data.
- *2 "For servo circuit adjustment" is the process during adjustment (when variable resistor is operated by service engineer) that the microprocessor enters the emergency process routine if the servo system goes extremely out of the servo range.
- *3 In addition to the above, ENCRST (56 pin) is the reset signal for TV encoder, issues the active "L" pulse when each of the input port of CDGSW, NTB, CVSY, HSY, PIXCLK, GCLK, PAL60B and VCLK of IC401 (BU1417AK) has changed as follows:
 - 1) When the power is supplied to the circuit boards of the CD block,
 - (2) When starting to reach TOC.
 - (3) The modes have changed as follows:
 - · TVMSW is switched.
 - · Switching of encoding system owing to exchange of video CD disc
 - Exchange of video CD disc with the CD-DA or CD-G.

IC, BU1417AK

Pin No.	Pin Name	I/O	Description
1	BOSD	I	OSD Blue Data input.
2	GD0	I	Green Data Bit 0. (LSB)
3-8	GD1-GD6	I	Green Data Bit 1-6.
9	GND	_	Digital ground.
10	GD7	I	Green Data Bit 7. (MSB)
11	BD0	I	Blue Data Bit 0. (LSB)
12-14	BD1-BD3	I	Blue Data Bit 1-3.
15	OSDSW	I	OSD input enable.
16	CDGSWB	I	Select Video-CD/CD-G.
17-19	BD4-BD6	I	Blue Data Bit 4-6.
20	BD7	I	Blue Data Bit 7. (MSB)
21	GND	_	Digital ground.
22	NTB	I	Select NTSC/PAL mode.
23, 24	IM0, IM1	I	Input mode set Bit 0, 1.
25, 26	TEST1, TEST2	I	Normally pulldown to GND.
27	CVSY	I	C-SYNC or V-SYNC input.
28	HSY	I	H-SYNC input.
29	PIXCLK	0	1/2 Freq. of internal CL.
30	BLKB	I	Data blanking ENABLE.
31	VDD	_	Digital VDD.
32	INT	I	INTERLACE/NON-INTERLACE.
33	SLABEB	I	Set mode MASTER/SLABE.
34	ADDH	I	ADD One_line at Non-inter.
35	VREF	I	Reference voltage. (1.29V)
36	CGND	_	Chroma output ground.
37	COUT	0	Chroma output.
38	VGND		Composite output ground.
39	VOUT	0	Composite output.
40	AVSS		Analog (DAC, VREF) ground.
41	NC		Not used.
42	IR	I	Reference resistor. (1.2K)
43	AVDD		Analog (DAC, REF) VDD.
44	YGND		Luminance output ground.
45	YOUT	0	Luminance output.
46	G4FSC	I	Pulldown to GND.
47	GCLK	I	Video clock input for CD-G.
48	YCOFF	I	DAC (YOUT, COUT) off.
49	YFILON	I	Pulldown to GND.
50	PAL60B	I	PAL60 ON at NTB=HIGH.
51	VCLK	I	Video clock input for VCD.
52	RSTB	I	Logic part initial reset.

Pin No.	Pin Name	I/O	Description
53	CLKSW	I	Divide input CLK ENABLE.
54	RD0	I	Red data Bit 0. (LSB)
55, 56	RD1, RD2	I	Red data Bit 1, 2.
57	ROSD	I	OSD Red data input.
58-60	RD3-RD5	I	Red data Bit 3-5.
61	VDD	_	Digital VDD.
62	RD6, RD7	I	Red data Bit 6, 7.
63	GOSD	I	OSD green data input.

IC, CL484


Pin No.	Pin Name	I/O	Description
1	HSEL2	I	Host address bus.
2	-DS	I	Data strobe.
3	R/-W	I	Read/write.
4	CFLEVEL	0	Coded data FIFO level status. Open drain.
5	-DACK	0	Host data acknowledge. Open drain.
6	HD0	I/O	Host data bus.
7	VDD3	_	Power supply pin. Used in 3.3 V.
8, 9	HD1, HD2	I/O	Host data bus.
10	VSS	T -	GND.
11-15	HD3-HD7	I/O	Host data bus.
16	VSS	_	GND.
17	-TEST	I	Test terminal. Normally fixed to High.
18	VSS	_	GND.
19	XTL IN	I	Global clock. 40.5 MHz.
20	XTL OUT	0	Global clock. 40.5 MHz.
21, 22	VDD3	_	Power supply pin. Used in 3.3 V.
23-28	MD0-MD5	ľO	Memory data bus.
29	VDD3	_	Power supply pin. Used in 3.3 V.
30, 31	MD6, MD7	I/O	Memory data bus.
32, 33	-MCE0, -MCE1	0	Chip enable.
34-37	MD8-MD11	I/O	Memory data bus.
38	VSS	_	GND.
39-42	MD12-MD15	I/O	Memory data bus.
43	VDDMAX	_	Power supply pin. Used in 5.0 V.
44	-LCAS	0	Lower digit, column address strobe.
45	-LCASIN	I	Lower digit, data latch enable.
46	VSS	_	GND.
47	-MWE	0	Write enable.
48	-UCAS	0	Higher digit, column address strobe.
49	VDD3	_	Power supply pin. Used in 3.3 V.
50	-UCASIN	I	Higher digit, data latch enable.
51, 52	RAS0, RAS1	0	Lower address strobe.
53-57	MA9-MA5	0	Memory address bus.
58	VSS	_	GND.
59-63	MA4-MA0	0	Memory address bus.
64	RESERVED		Reserved.
65	VDD3	_	Power supply pin. Used in 3.3 V.
66-72	VD0-VD6	0	Pixel data bus. RGB or YCbCr format.
73	VSS	-	GND.
74-76	VD7-VD9	0	Pixel data bus. RGB or YCbCr format.
77	VDD3	_	Power supply pin. Used in 3.3 V.

Pin No.	Pin Name	I/O	Description
78-80	VD10-VD12	0	Pixel data bus. RGB or YCbCr format.
81	VDD3	_	Power supply pin. Used in 3.3 V.
82-84	VD13-VD15	0	Pixel data bus. RGB or YCbCr format.
85	VSS	_	GND
86-89	VD16-VD19	0	Pixel data bus. RGB or YCbCr format.
90	VSS		GND.
91-94	VD20-VD23	0	Pixel data bus. RGB or YCbCr format.
95	-VSYNC or CSY	I/O	Vertical sync signal.
96	-HSYNC	I/O	Horizontal sync signal.
97	-VOE	I	Video output enable.
98	VDD3		Power supply pin. Used in 3.3 V.
99	VCLK	I/O	Video clock.
100	VSS	_	GND.
101	-RESET	I	Hardware reset.
102	VSS	_	GND.
103	CD-C2PO	I	Data error. Used during CD-ROM data input.
104	CD-LRCK	I	LR clock.
105	CD-DATA	I	Serial data input from CD-DSP.
106	CD-BCK	I	Bit clock from CD decoder.
107	DA-LRCK	0	LR clock.
108	DA-DATA	0	Bit serial audio sample signal.
109	DA-BCK	0	Audio bit clock.
110	VDD3	_	Power supply pin. Used in 3.3 V.
111	DA-XCLK	I	External audio frequency clock.
112	VDD3	_	Power supply pin. Used in 3.3 V.
113	-INT	0	Interrupt request.
114	CDG-S0S1	I	Block start sync.
115	HOST_ENA	I	Host enable.
116	RAM_ENA	I	Boot ROM enable.
117	CDG-VFSY	I	Frame start or composite sync.
118	DAC_EMP	0	Output emphasis flag.
119	CDDA_EMP	I	Input emphasis flag.
120	CDG-SDATA	I	Subcode data.
121	CDG-SCLK	ΙΛΟ	Subcode data clock.
122	CDDA/VCD	0	Input data identification. H: CDDA. L: video CD.
123	VDDMAX	I	Power supply pin. Used in 5.0 V.
124	FSC1	0	Output generated by dividing-by-4 the pin-126 input CLK.
125	vss	_	GND.
126	FSC4	I	Frequency divider input.
127, 128	HSEL0, HSEL1	I	Host address bus.

IC, BU2173AF

Pin No.	Pin Name	I/O	Description	
1	VDD	_	Digital VDD.	
2	TSTO	0	Open during normal mode. (Used in test mode.)	
3	XTALI	I	Reference oscillator input.	
4	XTALO	0	Reference oscillator output.	
5	CTRLA	. I	CD-G/VCD clock selector terminal.	
6	CTRLB	I	Fixed to "H" during normal mode.	
7	CTRLC	I	CD-G PAL/NTSC clock selector terminal.	
8	TSTI	I	Connected to Vss during normal mode. (Used in test mode.)	
9	VSS	_	Digital GND.	
10	AVSS	_	Analog GND.	
11	FOUT3	0	Not used. Open during normal mode.	
12	VSSIO	_	I/O GND.	
13	FOUT2	О	Clock output (2).	
14	TEST	_	Test mode setting. Connected to Vss during normal mode.	
15	FOUT1	О	Clock output (1).	
16	VDDIO		I/O VDD.	
17	FOUT4	0	Clock output (4).	
18	AVDD	_	Analog VDD.	


VCD MAIN C.B (PATTERN SIDE)

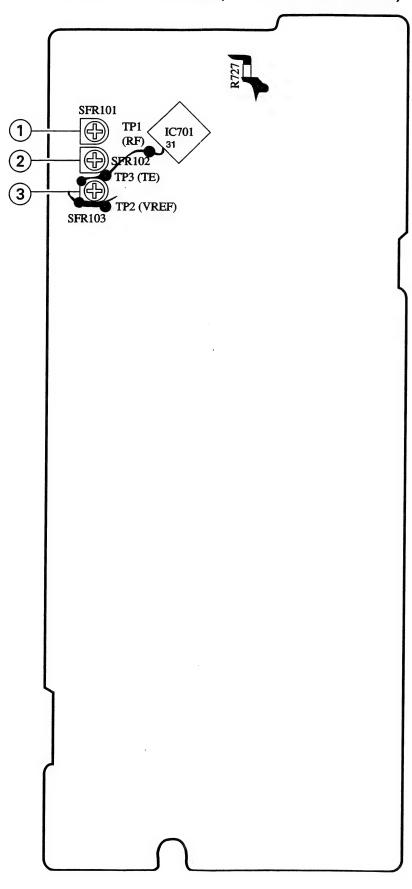


注意: · (10:1)のプローブを接続して、調整して下さい。
· 各調整には、オシロスコープの⊖側をTP2

・各調整には、オシロスコープの⊝側をTP2 (VREF)に接続して下さい。

 フォーカスバイアス調整 この調整は、光学系ブロックを交換修理した場合に調整すること。

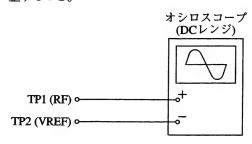


- 1) テストポイントTP1 (RF)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR11を調整する。

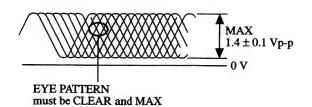


VOLT/DIV: 50mVTIME/DIV: 0.5μ S


注意: レーザー電流の確認はR727 (10Ω の両端電圧) で行えます。レーザーピックアップの裏側のラベルの電流値に対して ± 6.0 mAに入っていること。

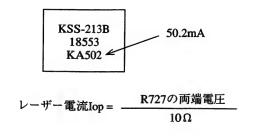

2. トラッキング・バランス調整

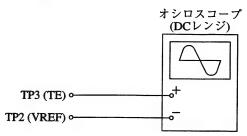

- 1) テストポイントTP3 (TE)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) SFR13を回しトラッキングゲインを絞る。
- 5) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR12を調整する。
- 6) 調整後、各端子のアースリード線をはずす。

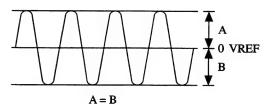

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に調整してありませ

- ゲインを上げると2軸デバイス動作時の雑音が増加す
- ゲインを下げると機械的ショックに弱くなり音飛びを起こしやすくなる。 そしてゲインの調整がずれていると次頁の様な症状が出ます。


ゲイン 症状	(フォーカス)	トラッキング
● STOP → ▶PLAY 時, 又 は自動選曲時 (M, M ボ タンを押したとき) に 演奏が始まるまでの時 間が長くなる。(通常は 2 秒位です。)	低い	低い 又は 高い
● STOP→▶PLAY時,又 は自動選曲時(M, Mボ タンを押したとき)に 演奏が始まらないで ディスクが回転を続け る。		低い
● STOP→▶PLAY 時, しばらくすると回転が止まる。	低い又は高い	
● 演奏中に音がとぎれる。又、タイムカウンターの表示が進まなくなる。		低い
● 2軸ディバイス動作時のノイズが多くなる。	高い	高い

なお、簡易調整として下記の方法があります。

—— 簡易調整 ——

注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい

調整方法:

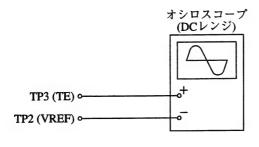

- 1. セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響 を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TE)、TP2 (VREF) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR13を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS


● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)




VOLT/DIV: 50mV TIME/DIV: 1mS

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)

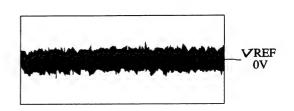

VOLT/DIV: 50mV TIME/DIV: 1mS

VCD MAIN C.B (PATTERN SIDE)

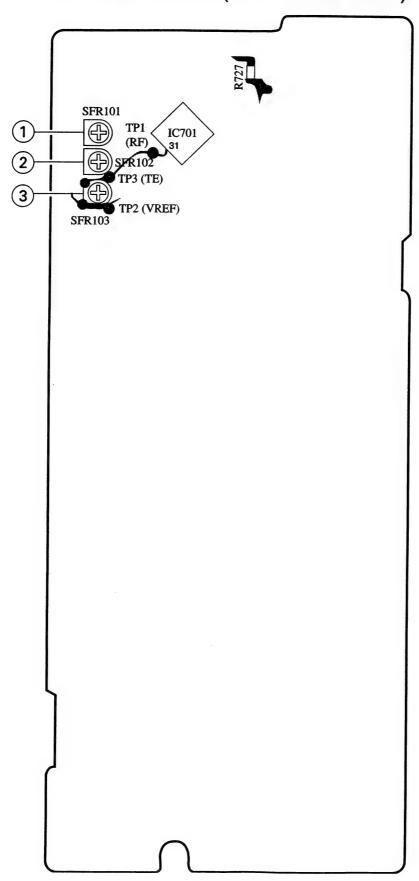


Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.

 During adjustment, connect (○) pin of an oscilloscope to TP2 (VREF).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

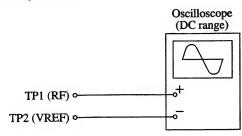


1) Connect an oscilloscope to test points TP1 (RF) and TP2 (VREF).

2) Turn on the power switch.

3) Insert test disc TCD-782 (YEDS-18) and play back the second composition.

 Adjust SFR11 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.

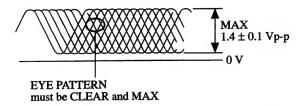


VOLT/DIV: 50mV TIME/DIV: 0.5μS

Note: The current of the laser signal can be checked with the voltages on both sides of R727 (10Ω). The difference for the specified value shown on the lavel must be within ± 6.0 mA.



Laser current Iop = $\frac{\text{Voltage across R727}}{10\Omega}$

2. Tracking Balance Adjustment

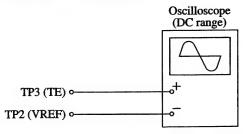

 Connect an oscilloscope to test points TP3 (TE) and TP2 (VREF).


2) Turn on the power switch.

3) Insert test disc TCD-782 (YEDS-18) and press the PLAY button.

4) Adjust SFR13 to decrease the tracking gain..

5) Adjust SFR12 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.

6) After the adjustment is completed, remove the connected lead wires from the terminals.

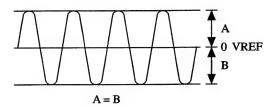

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

When gain is raised, the noise increases when the 2-axis device operates.

 When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain adjustment is off, the symptoms below appear.


Gain Symptoms	(Focus)	Tracking
 The time until music starts becomes longer for STOP → ►PLAY or automatic selection (►, ►) buttons pressed.) (Normally takes about 2 seconds.) 	low	low or high
 Music does not start and disc continues to rotate for STOP → PLAY or automatic selection (M, M) buttons pressed.) 		low
 Disc stops to rotate shortly after STOP →►PLAY. 	low or high	
 Sound is interrupted during PLAY. Or time counter display stops. 		low
More noises during the2-axis device operation.	high	high

The following is simple adjustment method.

— Simple adjustment —

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

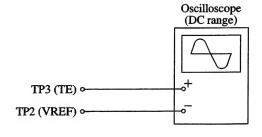

- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- 2) Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TE), TP2 (VREF).
- 4) Adjust SFR13 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example

Low tracking gain

(The fundamental wave appears as compared with the waveform adjusted.)



VOLT/DIV: 50mV TIME/DIV: 1mS


High tracking gain

(The frequency of the fundamental wave is higher than that in low gain.)



VOLT/DIV: 50mV TIME/DIV: 1mS

CD MECHANISM EXPLODED VIEW 1/1 (3ZG-2 C6N)

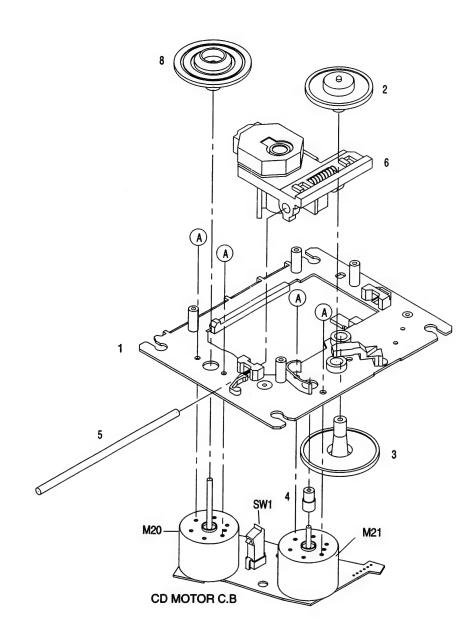

CD MECHANISM PARTS LIST 1/1 (3ZG-2 C6N)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTIO
1	83-ZG2-232-1	1K O-SERT	S ASSY, S5
2	83-ZG2-237-1	1K GEAR, A5	
3	83-ZG2-205-2	19 OE GEAR, B	
4	83-ZG2-238-0	1K GEAR, MC	TOR 5
5	83-ZG2-207-1	19 1A SHAFT, S	LIDE
6	87-070-445-0	10 2C PICK-UF	, KSS-213B
8	83-ZG2-227-0	1K TURN TA	BLE, C1
A	87-261-032-2	19 OE SCREW V	+2-3

MODEL NO. 6ZG-1 (D, F, P, V1) ELECTRICAL MAIN PARTS LIST


DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO. KANRI DESCRIPTI NO.	ON
IC				C301	87-010-549-040 OE CAP,E 47-6.3 M 5L	SRE
				C302	87-010-549-040 OE CAP,E 47-6.3 M 5L	SRE
	87-002-783-1			C303	87-010-178-080 OE C-CAP,S 1000P-50	K B
	87-A20-606-0			C304	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-017-825-0			C305	87-010-197-080 OE C-CAP,S 0.01-25 K	В
	84-ZG1-669-0					
	87-A20-255-0	40 1B C-IC, S	SN/4LV3/3NS	C306	87-010-197-080 OE C-CAP,S 0.01-25 K	
	07 300 464 0	40 1D 0 T0 T	WF1 C 4 2 W 4 0 T	C307	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-A20-464-0			C308	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-A20-252-0- 87-A20-253-0-			C309	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-A20-254-0			C310	87-010-197-080 OE C-CAP,S 0.01-25 K	В
	87-A20-576-0			C311	87-010-197-080 OE C-CAP,S 0.01-25 K	D
				C312	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-A20-244-0	10 3M C-IC.C	L484	C313	87-010-318-080 OE C-CAP,S 47P-50 J	
			M514260CJ7/CLJ7	C314	87-010-196-080 OE C-CAP,S 0.1-25 Z	F C2012
	86-NM1-621-04	40 1H C-IC, L	H5317W1	C315	87-010-196-080 OE C-CAP, S 0.1-25 Z	
	87-A20-256-04					
	87-A20-372-0	LO 2P C-IC,T	C9409BF	C316	87-010-549-040 OE CAP,E 47-6.3 M 5L	SRE
				C317	87-010-197-080 OE C-CAP,S 0.01-25 K	
	87-017-888-08			C320	87-010-196-080 OE C-CAP,S 0.1-25 Z 1	
	87-001-982-01			C321	87-010-550-040 OE CAP,E 100-6.3 5L :	
	87-017-745-01			C322	87-010-197-080 OE C-CAP,S 0.01-25 K	В
,	87-A20-257-04	EU IH C-IC,B	A0/91FP	2222	07 010 550 010 07 07 7	
•	87-A20-247-01	LU ZP C-IC,B	U141/AK	C323	87-010-550-040 OE CAP,E 100-6.3 5L S	
				C324	87-010-197-080 OE C-CAP,S 0.01-25 K	
RANSISTO)R			C330 C331	87-010-152-080 OE C-CAP, S 8P-50 D CE	
				C401	87-010-152-080 OE C-CAP,S 8P-50 D CE 87-010-496-040 OE CAP,E 3.3-50 M 5L	
	87-026-608-08	0 OE C-TR.D	TC123JK <f></f>	C401	07-010-490-040 OE CAP,E 3.3-30 M 3E	SKE
	89-421-722-38			C402	87-010-496-040 OE CAP,E 3.3-50 M 5L	SRE
	89-320-011-08			C501	87-010-498-040 OE CAP,E 10-16 M 5L S	
	87-026-239-08			C503	87-010-196-080 OE C-CAP,S 0.1-25 Z E	C2012
	87-026-470-08	0 1A C-TR, H	N1C03FB	C504	87-010-196-080 OE C-CAP,S 0.1-25 Z E	
				C505	87-010-313-080 OE C-CAP,S 18P-50 J C	H
	89-111-625-08					
	87-026-235-08	0 OE C-TR,D	rc114ek	C506	87-010-313-080 OE C-CAP,S 18P-50 J C	TH.
			•	C507	87-010-549-040 OE CAP,E 47-6.3 M 5L	
TODE				C508	87-010-498-040 OE CAP,E 10-16 M 5L S	
OIODE				C509	87-010-498-040 OE CAP,E 10-16 M 5L S	
	87-020-027-08	0 0F C-DIOD	P 100194	C510	87-010-498-040 OE CAP,E 10-16 M 5L S	RE
	87-A40-196-08			C511	87-010-549-040 OE CAP,E 47-6.3 M 5L	CDE
	0. 1110 150 00	0 00 0 0000	., obbo. 2D	C512	87-010-197-080 OE C-CAP,S 0.01-25 K	
				C512	87-010-197-080 OE C-CAP,S 0.01-25 K	
AIN VCD	C.B			C514	87-010-196-080 OE C-CAP,S 0.1-25 Z F	
				C515	87-010-318-080 OE C-CAP,S 47P-50 J C	
C101	87-010-197-08	0 OE C-CAP,	5 0.01-25 K B <d></d>			
C102			100-6.3 5L SRE <d></d>	C520	87-010-186-080 OE C-CAP,S 4700P-50 K	В
C103	87-010-318-08	0 OE C-CAP,	S 47P-50 J CH <d></d>	C521	87-010-187-080 OE C-CAP,S 5600P-50 K	В
C104	87-010-197-08	0 OE C-CAP,S	5 0.01-25 K B	C523	87-010-177-080 DE C-CAP,S 820P-50 J	SL
C105	87-010-318-08	O OE C-CAP,S	5 47P-50 J CH	C524	87-010-805-080 OE C-CAP,S 1-16 Z F	
C106	07.010.540.04	0 00 000 0	17 C 2 W ET CDD	C530	87-010-197-080 OE C-CAP,S 0.01-25 K	В
C106 C107			17-6.3 M 5L SRE 3 220P-50 J CH GRM	0531	97-010-407-040-05-05-5-4-5-35-5-	
C108			3300P-50 K B	C531 C532	87-010-497-040 OE CAP,E 4.7-35 5L SR	
C109			5 0.047-25 Z F	C532	87-010-497-040 OE CAP,E 4.7-35 5L SR 87-010-318-080 OE C-CAP,S 47P-50 J C	
				C534	87-010-318-080 OE C-CAP,S 47P-50 J C	
.111		0 OR C-CAP.S				
2111	87-010-197-08	0 OE C-CAP,S				H
C111 C112	87-010-197-08		3 0.47-10 Z F	C535	87-010-497-040 OE CAP,E 4.7-35 5L SR	H
C112	87-010-197-08 87-012-358-08	O OE C-CAP,S	3 0.47-10 Z F 3 0.1-25 Z F C2012	C535	87-010-497-040 OE CAP,E 4.7-35 5L SR	H E
C112 C113	87-010-197-08 87-012-358-08	0 OE C-CAP,S 0 OE C-CAP,S	0.1-25 Z F C2012		87-010-497-040 OE CAP,E 4.7-35 5L SR 87-010-497-040 OE CAP,E 4.7-35 5L SR	H E E
2112 2113 2114	87-010-197-08 87-012-358-08 87-010-196-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1	3 0.1-25 Z F C2012 .00-6.3 5L SRE	C535 C536	87-010-497-040 OE CAP,E 4.7-35 5L SR 87-010-497-040 OE CAP,E 4.7-35 5L SR 87-010-178-080 OE C-CAP,S 1000P-50 K	H E B
2112 2113 2114 2115	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE	C535 C536 C537	87-010-497-040 OE CAP,E 4.7-35 5L SR 87-010-497-040 OE CAP,E 4.7-35 5L SR	H E E B
C112 C113 C114 C115 C116	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-550-04	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E CAP,E 1	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE	C535 C536 C537 C538	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S	H E E B B SRE
C112 C113 C114 C115 C116	87-010-197-08 87-012-358-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E CAP,E 1	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012	C535 C536 C537 C538 C540 C541	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S	H E B B SRE SRE
2112 2113 2114 2115 2116	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S	3 0.1-25 Z F C2012 00-6.3 5L SRE 3 0.01-25 K B 00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012	C535 C536 C537 C538 C540 C541	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L SR 87-010-264-040 0E CAP,E 100-10 M 5L SR 87-010-197-080 0E C-CAP,S 0.01-25 K 1	H E B B SRE SRE
2112 2113 2114 2115 2116 2117 2118 2130	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E C-CAP,S	3 0.1-25 Z F C2012 00-6.3 5L SRE 3 0.01-25 K B 00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B	C535 C536 C537 C538 C540 C541	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L SR 87-010-264-040 0E CAP,E 100-10 M 5L SR 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-101-080 0E CAP,E 220-16 SME	H E E B B SRE SRE
C112 C113 C114 C115 C116 C117 C118 C130 C201	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08 87-010-499-04	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 2	3 0.1-25 Z F C2012 .00-6.3 5L SRE .0.01-25 K B .00-6.3 5L SRE .0.1-25 Z F C2012 .0.1-25 Z F C2012 .1000P-50 K B 2-6.3 M 5L SRE	C535 C536 C537 C538 C540 C541 C601 C602 C603	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-101-080 0E CAP,E 220-16 SME 87-010-196-080 0E C-CAP,S 0.1-25 Z F	H E E B B SRE SRE
C112 C113 C114 C115 C116 C117 C118 C130 C201	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 2	3 0.1-25 Z F C2012 .00-6.3 5L SRE .0.01-25 K B .00-6.3 5L SRE .0.1-25 Z F C2012 .0.1-25 Z F C2012 .1000P-50 K B 2-6.3 M 5L SRE	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-101-080 0E CAP,E 220-16 SME 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 18P-50 J CR	H E B B SRE SRE SRE B
C112 C113 C114 C115 C116 C117 C118 C130 C201	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08 87-010-198-08 87-010-197-08	0 OE C-CAP,S 0 OE C-CAP,S 0 OE CAP,E 1 0 OE C-CAP,S 0 OE C-CAP,S 0 OE C-CAP,S 0 OE C-CAP,S 0 OE C-CAP,S 0 OE C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 1 1000P-50 K B 2-6.3 M 5L SRE 0 0.01-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-101-080 0E CAP,E 220-16 SME 87-010-196-080 0E C-CAP,S 0.1-25 Z F	H E B B SRE SRE SRE B
C112 C113 C114 C115 C116 C117 C118 C130 C201 C201	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08 87-010-197-08 87-010-197-08 87-010-196-08	0 0E C-CAP,S 0 0E C-CAP,E 0 0E C-CAP,E 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S	3 0.1-25 Z F C2012 00-6.3 5L SRE 3 0.01-25 K B 00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 0 0.1-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-191-080 0E CAP,E 220-16 SME 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 18P-50 J CR 87-010-193-080 0E C-CAP,S 0.033-25 Z	H E B B B SRE SRE 3 C2012 H F C201
C1112 C1113 C1114 C115 C1116 C117 C1118 C130 C201 C202 C203 C203	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-178-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-196-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S 0 0E C-CAP,S	3 0.1-25 Z F C2012 00-6.3 5L SRE 0.0.1-25 K B 00-6.3 5L SRE 3 0.1-25 Z F C2012 1 0.1-25 Z F C2012 1 1000P-50 K B 2-6.3 M 5L SRE 0.01-25 K B 0.1-25 Z F C2012 33P-50 J CH	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-958-080 0E C-CAP,S 0.01-25 J I	H E B B SSRE SSRE 3 C2012 H F C201
C112 C113 C114 C115 C116 C117 C118 C130 C201 C202 C202 C203 C204 C205	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-316-08 87-010-316-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 0 0.1-25 K B 0 0.1-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-958-080 0E C-CAP,S 0.01-25 J F 87-016-369-080 0E C-CAP,S 0.01-25 K S 87-010-958-080 0E C-CAP,S 0.01-25 J F	H E B B SSRE SSRE 3 C2012 H F C201
C112 C113 C114 C115 C116 C117 C118 C1201 C201 C201 C202 C203 C203 C204 C205 C206	87-010-197-08 87-012-358-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-316-08 87-010-316-08 87-010-316-08 87-010-399-04	0 0E C-CAP,S 0 0E C-CAP,E 0 0E C-CAP,E 0 0E C-CAP,E 0 0E C-CAP,S 0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 0.1-25 Z F C2012 33P-50 J CH 33P-50 J CH 2-6.3 M 5L SRE	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-101-080 0E C-CAP,S 0.1-25 Z F 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-958-080 0E C-CAP,S 0.033-25 K 87-010-197-080 0E C-CAP,S 0.01-25 J F 87-010-197-080 0E C-CAP,S 0.01-25 J F 87-010-197-080 0E C-CAP,S 0.01-25 K 87-010-197-080 0E C-CAP,S 0.01-25 K	H E B B B SRE SRE 3 C2012 H F C201
1112 1113 1114 1115 1116 1117 1118 1130 12201 12201 12202 12203 12203 12204 12205 12206	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-316-08 87-010-316-08	0 0E C-CAP,S 0 0E C-CAP,E 0 0E C-CAP,E 0 0E C-CAP,E 0 0E C-CAP,S 0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 0.1-25 Z F C2012 33P-50 J CH 33P-50 J CH 2-6.3 M 5L SRE	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702 C703 C704 C705 C707	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.33-25 Z S 87-010-958-080 0E C-CAP,S 0.01-25 J E 87-010-958-080 0E C-CAP,S 0.01-25 K I 87-010-197-080 0E C-CAP,S 0.01-25 K E 87-010-197-080 0E C-CAP,S 0.01-25 K E 87-010-197-080 0E C-CAP,S 0.01-25 K E	H E B B B SRE SRE 3 C2012 H F C201
2112 2113 2114 2115 2116 2117 2118 2130 2201 2202 2203 2204 2205 2206 2207	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-550-04 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-316-08 87-010-316-08 87-010-499-04 87-010-197-08	0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S	3 0.1-25 Z F C2012 00-6.3 5L SRE 00.01-25 K B 00-6.3 5L SRE 00.1-25 Z F C2012 10.1-25 Z F C2012 1000P-50 K B 2-6.3 M 5L SRE 0.01-25 K B 0.1-25 Z F C2012 33P-50 J CH 33P-50 J CH 2-6.3 M 5L SRE 0.01-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-101-080 0E C-CAP,S 0.1-25 Z F 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-958-080 0E C-CAP,S 0.033-25 K 87-010-197-080 0E C-CAP,S 0.01-25 J F 87-010-197-080 0E C-CAP,S 0.01-25 J F 87-010-197-080 0E C-CAP,S 0.01-25 K 87-010-197-080 0E C-CAP,S 0.01-25 K	H E B B B SRE SRE 3 C2012 H F C201
C112 C113 C114 C115 C116 C117 C118 C130 C201 C202 C203 C203 C204 C205 C207 C208	87-010-197-08 87-012-358-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-196-08 87-010-316-08 87-010-316-08 87-010-316-08 87-010-399-04	0 0E C-CAP,S 0 0E C-CAP,S 0 0E C-CAP,S 0 0E CAP,E 1 0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE : 0.01-25 K B .00-6.3 5L SRE : 0.1-25 Z F C2012 : 0.1-25 Z F C2012 : 1000P-50 K B 2-6.3 M 5L SRE : 0.01-25 K B : 0.1-25 Z F C2012 33P-50 J CH 33P-50 J CH 2-6.3 M 5L SRE 0.01-25 K B : 0.01-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702 C703 C704 C705 C707 C708	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-193-080 0E C-CAP,S 0.01-25 K I 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-805-080 0E C-CAP,S 0.01-25 K I	H E B B SSRE SRE 3 C2012 H F C2013 B B 3
C112 C113 C114 C115 C116 C117 C118 C130 C201 C202 C203 C202 C203 C205 C207 C206 C207	87-010-197-08 87-012-358-08 87-010-196-08 87-010-550-04 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-316-08 87-010-316-08 87-010-197-08 87-010-197-08 87-010-197-08	0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 3 0.1-25 Z F C2012 3 1 2 5	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702 C703 C704 C705 C707	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-101-080 0E C-CAP,S 0.1-25 Z F 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.033-25 Z 87-010-958-080 0E C-CAP,S 0.01-25 J F 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-012-155-080 0E C-CAP,S 180P-50 J C	H E B B B SRE SRE B C2012 I F C2013 B B B CH
C112 C113 C114 C115 C116 C117 C118 C130 C201 C202 C203 C203 C204 C205 C207 C208 C207 C208 C209 C209 C210 C210 C210 C210 C210 C210 C210 C210	87-010-197-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08	0 0E C-CAP,S	3 0.1-25 Z F C2012 3 0.0-6.3 5L SRE 3 0.01-25 K B 3 0.0-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 1000P-50 K B 2-6.3 M 5L SRE 4 0.01-25 K B 4 0.1-25 Z F C2012 3 3 P-50 J CH 3 3 P-50 J CH 2 -6.3 M 5L SRE 3 0.01-25 K B 3 0.01-25 K B	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702 C703 C704 C705 C707 C708	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.033-25 Z 87-010-193-080 0E C-CAP,S 0.01-25 K I 87-010-197-080 0E C-CAP,S 0.01-25 K I 87-010-805-080 0E C-CAP,S 0.01-25 K I	HEEBBBSREEBBC2012 HFC2012 BBBBC2012
C112 C113 C114 C115 C116 C117 C118 C130 C201 C202 C203 C203 C204 C205 C207 C208 C207 C208 C209 C209 C210 C210 C210 C210 C210 C210 C210 C210	87-010-197-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-196-08 87-010-196-08 87-010-196-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08 87-010-197-08	0 0E C-CAP,S	3 0.1-25 Z F C2012 .00-6.3 5L SRE 3 0.01-25 K B .00-6.3 5L SRE 3 0.1-25 Z F C2012 3 0.1-25 Z F C2012 3 0.00P-50 K B 2 0.01-25 K B 3 0.1-25 Z F C2012 3 3 P-50 J CH 3 3 P-50 J CH 3 2 C C C C C C C C C C C C C C C C C C	C535 C536 C537 C538 C540 C541 C601 C602 C603 C701 C702 C703 C704 C705 C707 C708 C709 C710	87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-497-040 0E CAP,E 4.7-35 5L SR 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-178-080 0E C-CAP,S 1000P-50 K 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-264-040 0E CAP,E 100-10 M 5L S 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-196-080 0E C-CAP,S 0.1-25 Z F 87-010-313-080 0E C-CAP,S 0.1-25 Z F 87-010-193-080 0E C-CAP,S 0.33-25 Z 87-010-958-080 0E C-CAP,S 0.01-25 J R 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-958-080 0E C-CAP,S 0.01-25 K 1 87-010-197-080 0E C-CAP,S 0.01-25 K 1 87-010-805-080 0E C-CAP,S 0.01-25 K 1 87-010-805-080 0E C-CAP,S 0.033-25 K 1 87-012-155-080 0E C-CAP,S 180P-50 J C 87-016-369-080 0E C-CAP,S 0.033-25 K	HEEBBBSRESRESRESPECTOR

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C714 C715 C716 C717 C718	87-010-196-08	0 OE C-CAP,S 0 OE C-CAP,S 0 OE C-CAP,S	0 22-16 Z F	L302 L303 L801 L821 L822	87-005-196-08 87-005-196-08 87-005-189-08	0 0E COIL,1 0 0E COIL,1 0 0E COIL,2	LOUH K EL0606KSI LOUH K EL0606KSI LOUH K EL0606KSI 2.7UH K EL0606 3.3UH K EL0606
C719 C720 C721 C722 C725	87-010-549-04 87-010-549-04 87-010-497-04	0 0E CAP,E 4 0 0E CAP,E 4 0 0E CAP,E 4	0.1-25 Z F C2012 7-6.3 M 5L SRE 7-6.3 M 5L SRE .7-35 5L SRE 00-6.3 5L SRE	M601 R740 R741 R742 R743	87-022-364-08 87-022-362-08 87-022-362-08	0 0E C-RES, 0 0E C-RES, 0 0E C-RES,	RF-500TB DC-5V (2MA) S 82K-1/10W F S 56K-1/10W F S 56K-1/10W F S 56K-1/10W F
C726 C727 C728 C729 C731	87-010-549-04 87-010-182-08	0 0E CAP,E 4 0 0E CAP,E 4 0 0E C-CAP,S	7-6.3 M 5L SRE 7-6.3 M 5L SRE	R744 R745 S101 S102 S103		0 0E C-RES, 0 1A SW,MIC 0 1A SW,MIC	CRO SPPB61
C733 C734 C735 C736 C737	87-010-196-08	00 OE C-CAP,S 00 OE C-CAP,S 00 OE C-CAP,S	0.1-25 Z F C2012 0.1-25 Z F C2012 0.01-25 K B	S201 SFR701 SFR702 SFR703 X201	87-A90-300-01 87-024-175-08 87-024-176-08 87-024-175-08 84-JP7-609-08	0 0E SFR,47 0 0E SFR,10 0 0E SFR,47	K H RH0638C DOK H RH0638C K H RH0638C
C738 C751 C801 C802 C803	87-016-081-08	00 OE C-CAP,S 00 OE CAP,E 1 00 OE C-CAP,S	00-6.3 5L SRE 0.01-25 K B	X301 X501 LED C.B<			PAL 40.5MHZ PAL 16.9344MHZ HC-49/U03
C804 C805 C806 C807 C821	87-010-197-08 87-010-196-08	00 OE C-CAP,S 00 OE C-CAP,S 00 OE C-CAP,S	0.1-25 Z F C2012		87-017-350-08	0 OE LED, SE	L1250SMTP5 RED <f> L1550CM PGRN-F> L1250SMTP5 RED<f></f></f>
C822 C823 C824 C825 C826	87-012-140-08 87-012-140-08 87-010-371-08	80 OE C-CAP,S 80 OE C-CAP,S 80 OE CAP,E 4	470P-50 J CH	T-T C.B C411 LED411 M401 PS401 O411	87-018-214-08 87-070-288-01 87-A90-036-01 87-A90-156-01 87-A30-031-01	0 0E LED,GL 0 1D MOT AS 0 1B SNSR,S	380 SY,RF-300CA-11 G-240
C827 C828 C829 FC1 FC2	87-010-175-08 87-010-317-08 87-010-197-08 86-ZG1-605-01 86-ZG1-608-01	00 0E C-CAP,S 00 0E C-CAP,S 00 1A CABLE,F	0.01-25 K B FC 16P	S 4 01	87-036-109-01		
J502 J801 L101 L201 L301	87-009-502-01 87-005-196-08 87-005-196-08	0 1A JACK,PI 0 0E COIL,10 0 0E COIL,10	N 2P RED W/O SW N 1P YEL W/O SW UH K EL0606KSI UH K EL0606KSI UH K EL0606KSI				

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち Chip Resistor Part Coding

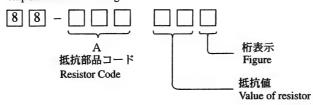

チップ抵抗 Chip resistor

Γ	容量	種類	重類 許容誤差 記号 寸法/Diamens			sions (1	mm)		抵抗コード :A
	Wattage	Type	Tolerance	Symbol	外形 / Form	L	W	t	Resistor Code: A
Γ	1/16W	1608	5%	CJ	<u> </u>	1.6	0.8	0.45	1 08
Γ	1/10W	2125	5%	CJ	The same	2	1.25	0.45	1 18
Г	1/8W	3216	5%	CJ	W	3.2	1.6	0.55	1 28

共通部分は、下記のページを参照して下さい。 Refer to the following pages for the common section.

IC DESCRIPTION	
CXA1782BQ	24ページ参照
CXD2500BQ	See page 28 56ページ参照
MB89627	See page 67 60ページ参照
BU1417AK	See page 70 62ページ参照
CL484	See page 72 64ページ参照
	See page 74
	CXA1782BQ

IC BLOCK DIAGRAM


IC BLOCK DIAGRAM	
TA7291S	23ページ参照
	See page 23
BA6791FP	55ページ参照
	See page 55


■ MECHANICAL EXPLODED VIEW/PARTS LIST


40ページ参照 See page 40

■ CD MECHANISM EXPLODED VIEW/PARTS LIST

83ページ参照 See page 83

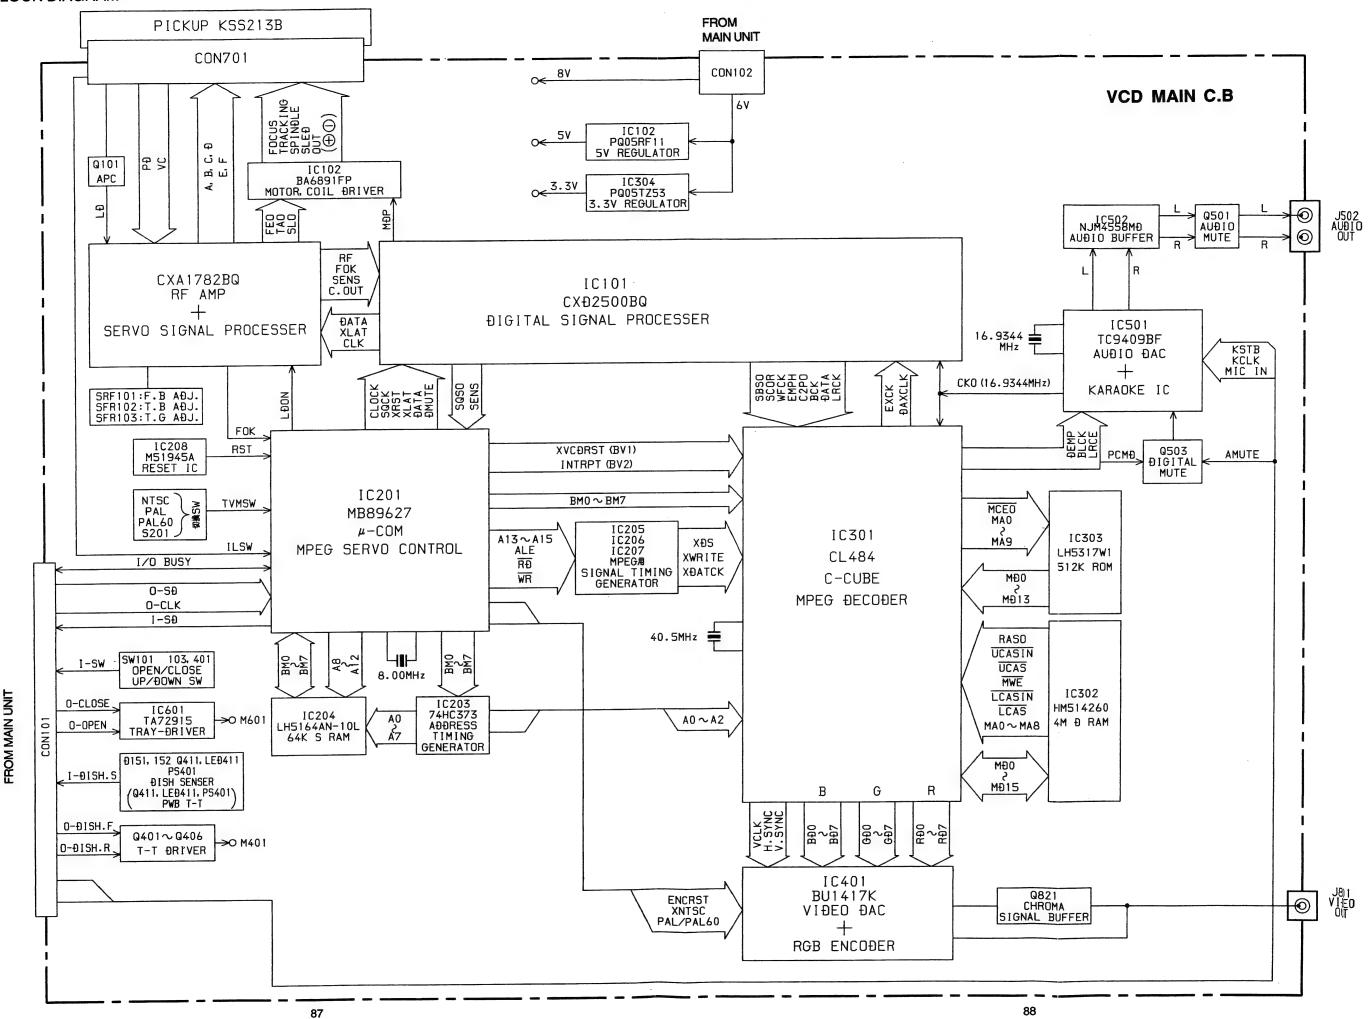

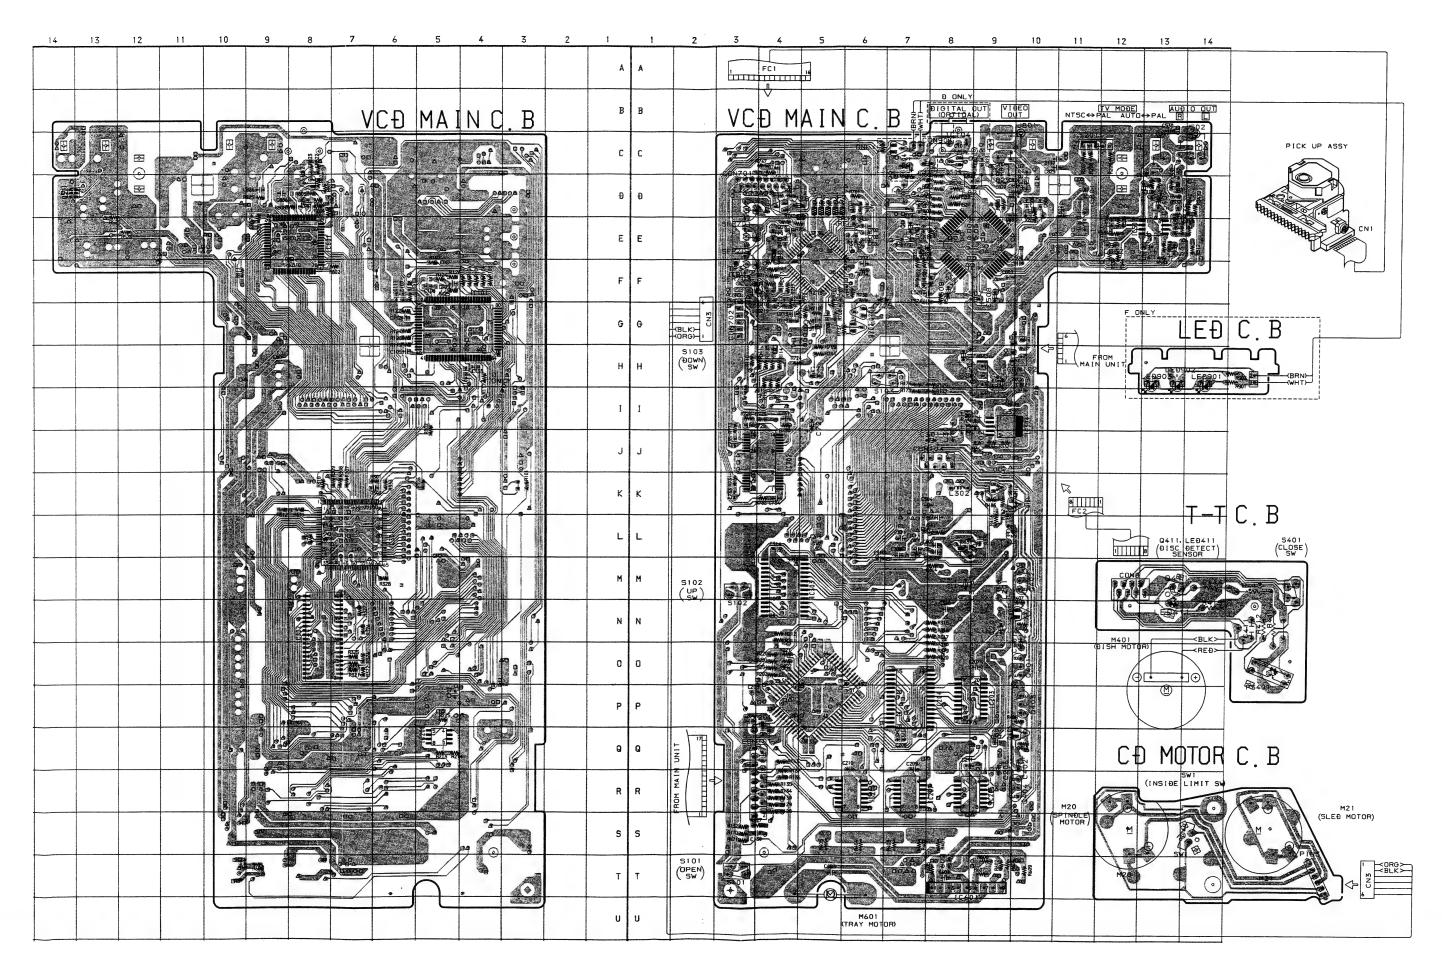

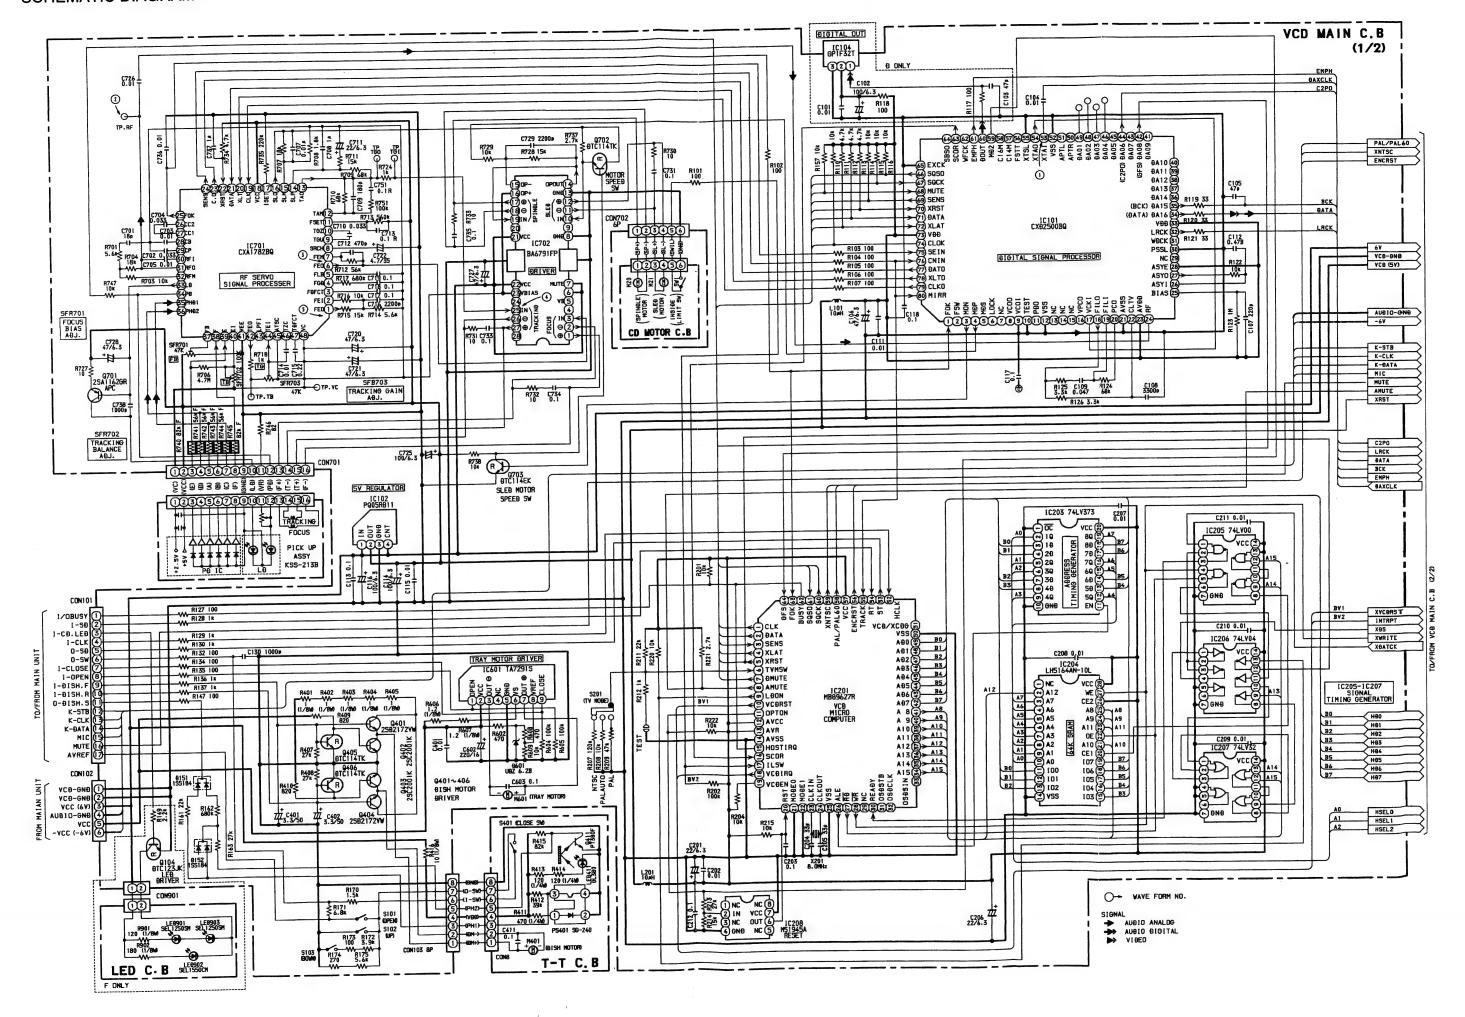

WAVE FORM

SYSTEM CLOCK f=16.9344MHz IC101 Pin (7) (XCKI) IC101 Pin (3) (XTAI)

VOLT/DIV: 2V TIME/DIV: 0.1mS

2 RF IC701 Pin 3 (RFO)

VOLT/DIV: 500mV TIME/DIV: 0.5µS


3 **FOCUS** IC701 Pin (6) (FEO)

VOLT/DIV: 200mV TIME/DIV: 2mS

TRACKING IC702 Pin 25 (Tracking IN) TIME/DIV: 1mS



FOCUS SEARCH IC701 Pin (1) (FEO)

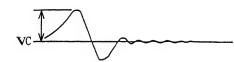

IC301 Pin (9) (XTLIN) 40.5MHz

VCD PLAY • NTSC • PAL



• PAL AUTO

IC301 Pin 99 (VCLK) 13.5MHz±675Hz VCD PLAY • NTSC

VOLT/DIV: 1V TIME/DIV: 10nS

VOLT/DIV: 1V


TIME/DIV: 10nS

• PAL • PAL AUTO




IC301 Pin (S) (V SYNC) VCD, PLAY TV MODE: • NTSC


VOLT/DIV: 1V TIME/DIV: 10nS

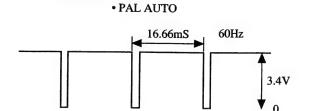


VCD, PLAY TV MODE: • PAL

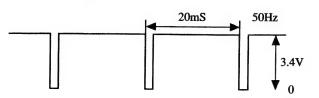


IC301 Pin (H SYNC) VCD, PLAY TV MODE: • NTSC • PAL AUTO

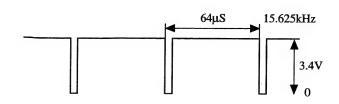


VCD, PLAY TV MODE: • PAL

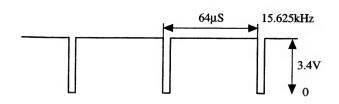

VIDEO OUT (C825 ⊖ side) VOLT/DIV: 200mV VCD PLAY: CD-T05 TRACK4 TIME/DIV: 10µS TV MODE: • NTSC

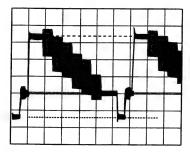

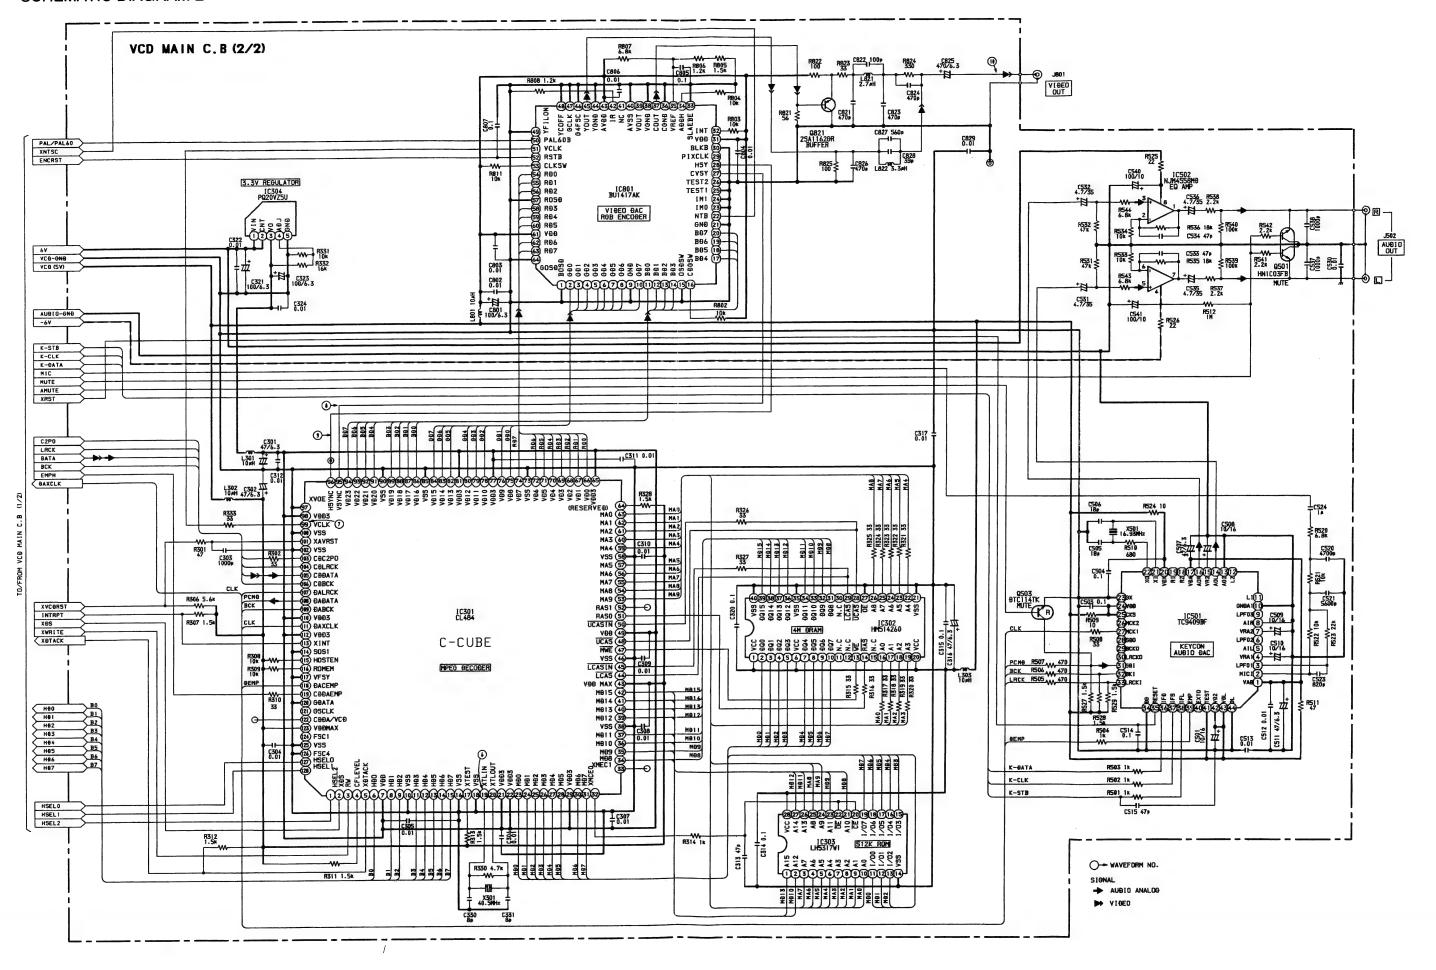

端子番号 端子名称 機能説明 ADC電源。 1 VDA1 MIC入力用LPF入力。 2 **MICI** I 3 MIC入力用LPF出力。 LPFO1 4 ADC基準電圧。 VRA1 5 AIL ライン入力L-ch用LPF入力。 6 LPFO2 ライン入力L-ch用LPF出力。 7 VRA2 ADC用基準電源。 8 AIR ライン入力R-ch用LPF入力。 9 LPFO3 ライン入力R-ch用LPF出力。 ADCグランド。 10 GNDA1 LI 11 I L-chアナログ加算入力。(未使用時オープン) 12 LZ L-chデジタル入力ゼロ検出。 13 GNDA2 DACグランド。 14, 16 AOL, AOR DAC出力L-ch、DAC出力R-ch。 VR2 15 DAC基準電圧。 17 VDA2 DAC電源。 18 RZR-chデジタル入力ゼロ検出。 19 RI R-chアナログ加算入力。(未使用時オープン) 発振部電源。 20 VDX 21 XI 発振子接続端子。(256、384、512、768fsのいずれか) 22 XO 発振子接続端子。 23 **GNDX** 発振部グランド。 VDD1、VDD2 デジタル電源。 24, 42 25 CKS マスタクロック選択。("H": 256/384fs "L": 512/768fs) 26 MCK2 発振クロック1/2分周出力。 27 MCK1 発振クロック出力。 28 SDO デジタルオーディオデータ出力。 29 **BCKO** ビットクロック出力。 30 LRCKO チャネルクロック出力。 31 SDI デジタルオーディオデータ入力。 32 **BCKI** ビットクロック入力。 33 LRCKI チャネルクロック入力。 34 **GNDD** デジタルグランド。 35 RESET リセット。("L" でリセット) 36 **IFD** マイコンI/Fデータ入力。 37 マイコンI/Fデータシフトクロック入力。 **IFS** 38 **IFL** マイコンI/Fラッチパルス入力。 39 **EMP** ディエンファシス設定。("H"でディエンファシスフィルタON) O 40 **EXTO** 拡張出力端子。 TEST 41 I テストモード設定。(通常 "H": 固定) 43 DRAM用デジタル電源。 VDL 44 DRAM用デジタルグランド。 **GNDL**

IC, TC9409BF

Pin No.	Pin Name	I/O	Description	
1	VDA1	1_	ADC power supply.	
2	MICI	I	Input to MIC input low-pass filter.	
3	LPFO1	0	Output from MIC input low-pass filter.	
4	VRA1	1-	ADC reference voltage.	
5	AIL	I	Input to LINE input L-ch low-pass filter.	
6	LPFO2	0	Output from LINE input L-ch low-pass filter.	
7	VRA2	_	ADC reference power supply.	
8	AIR	I	Input to LINE input R-ch low-pass filter.	
9	LPFO3	0	Output from LINE input R-ch low-pass filter.	
10	GNDA1	_	ADC ground.	
11	LI	I	Input to L-ch analog adder. (Open when not used.)	
12	LZ	0	Zero is detected when L-ch digital is input.	
13	GNDA2	_	DAC ground.	
14, 16	AOL, AOR	0	DAC output L-ch. DAC output R-ch.	
15	VR2	_	DAC reference voltage.	
17	VDA2	-	DAC power supply.	
18	RZ	0	Zero is detected when R-ch digital is input.	
19	RI	I	Input to R-ch analog adder. (Open when not used.)	
20	VDX	_	Oscillator block power supply.	
21	XI	I	Terminal where external oscillator is connected. (Any of 256, 384, 5 12 or 768 fs).	
22	хо	0	Terminal where external oscillator is connected.	
23	GNDX		Oscillator ground.	
24, 42	VDD1, VDD2	_	Digital power supply.	
25	CKS	I	Master clock selection. (H: 256/384 fs, L: 512/768 fs).	
26	MCK2	0	Oscillator clock divided-by-2 output.	
27	MCK1	0	Oscillator clock output.	
28	SDO	0	Digital audio data output.	
29	ВСКО	0	Bit clock output.	
30	LRCKO	0	Channel clock output.	
31	SDI	I	Digital audio data input.	
32	ВСКІ	I	Bit clock input.	
33	LRCKI	I	Channel clock input.	
34	GNDD		Digital ground.	
35	RESET	I	Reset. (Reset at L).	
36	IFD	I	Microprocessor I/F data input.	
37	IFS	I	Microprocessor I/F data shift clock input.	
38	IFL	I	Microprocessor I/F latch pulse input.	
39	ЕМР	I	De-emphasis setting. (De-emphasis filter ON at H).	
40	EXTO	0	Expansion output terminal.	
41	TEST	I	Test mode setting. (Fixed to normally H).	
43	VDL	_	Digital power supply for DRAM.	
44	GNDL		Digital ground for DRAM.	

TEST MODE

KARAOKE KEY+POWER KEYでTEST MODEに入り全灯表示。

FOCUS.......PLAY KEYでMODEに入る。
DISC無時→ フォーカスONせずにフォーカス
サーチを続ける
DISC有時→ 通常PLAY

STOP KEYでフォーカスサーチorPLAY終る。

※ TEST MODE時はDISC CHANGEはしない

1度POWER OFFするとTEST MODEから抜ける。

How to Enter the Test Mode

Press the KARAOKE key and the POWER key at the same time. Then all indicators turn on.

Press the PLAY key, and the machine enters the focus search or normal play as follows.

When disk is not inserted:

Focus search is continued without locking-n the focus servo.

When disk is inserted, the machine enters the normal play.

To terminate the focus search or normal play, press the STOP key.


* Do not change discs during the Test mode.

The machine can exit the Test mode by turning off the main power.


VCD MAIN C.B (PATTERN SIDE) TP1 (RF) SFR701 IC701 TP3 (TB) SFR703

注意: ・(10:1)のプローブを接続して、調整して下さい。

- ・各調整には、オシロスコープのΘ側をTP2(VC) に接続して下さい。
- 1. フォーカスバイアス調整 この調整は、光学系ブロックを交換修理した場合に調 整すること。

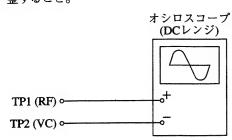

- 1) テストポイントTP1 (RF)、TP2 (VC) にオシロスコープ を接続する。
- 2) POWERスイッチをONにする。
- テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR701を調整する。

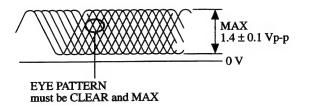


VOLT/DIV: 50mVTIME/DIV: $0.5 \mu \text{S}$


注意: レーザー電流の確認はR727 (10Ωの両端電圧) で行 えます。レーザーピックアップの裏側のラベルの電 流値に対して±6.0mAに入っていること。



レーザー電流Iop = R727の両端電圧 10Ω 2. トラッキング・バランス調整

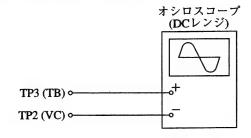

- テストポイントTP3 (TB)、TP2 (VC) にオシロスコープ を接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) SFR703を回しトラッキングゲインを絞る。
- 5) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR702を調整する。
- 6) 調整後、各端子のアースリード線をはずす。

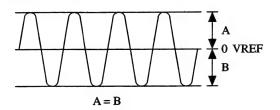

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に調整してありませ

- ゲインを上げると2軸デバイス動作時の雑音が増加する
- ゲインを下げると機械的ショックに弱くなり音飛びを 起こしやすくなる。


そしてゲインの調整がずれていると次頁の様な症状が 出ます。

ゲイン 症状	(フォーカス)	トラッキング		
● STOP → ▶PLAY 時,又				
は自動選曲時(₩、₩ボ		低い		
タンを押したとき) に	低い	又は		
演奏が 始まるまでの時	Ex V			
間が長くなる。(通常は		高い		
2秒位です。)				
● STOP → ▶ PLAY 時,又				
は自動選曲時(米、)州ボ				
タンを押したとき) に				
		低い		
演奏が 始まらないで				
ディスクが回転を続け				
る。				
● STOP → ▶ PLAY 時, し				
ばらくすると回転が止	低い又は高い			
まる。				
● 演奏中に音がとぎれ				
る。又,タイムカウン		Irr. 1 .		
ターの表示が進まなく		低い		
なる。				
● 2軸ディバイス動作時	声以	立い		
のノイズが多くなる。	高い	高い		

なお、簡易調整として下記の方法があります。

- ----- 簡易調整 -----
- 注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい。

調整方法:

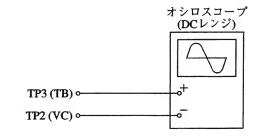

- セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TB)、TP2 (VC) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR703を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS

● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)




VOLT/DIV: 50mV TIME/DIV: 1mS

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)



VOLT/DIV: 50mV TIME/DIV: 1mS

VCD MAIN C.B (PATTERN SIDE)

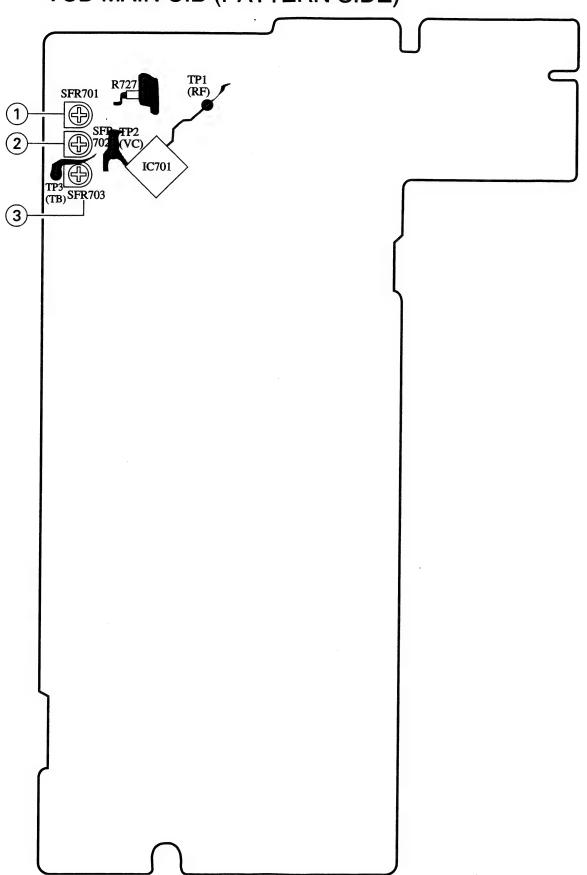


Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.


 During adjustment, connect (⊕) pin of an oscilloscope to TP2 (VC).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

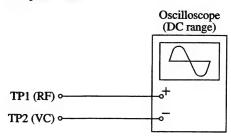


- 1) Connect an oscilloscope to test points TP1 (RF) and TP2 (VC).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- Adjust SFR701 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.

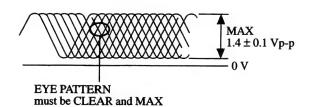


VOLT/DIV: 50mV TIME/DIV: 0.5µS


Note: The current of the laser signal can be checked with the voltages on both sides of R727 (10Ω). The difference for the specified value shown on the lavel must be within±6.0mA.

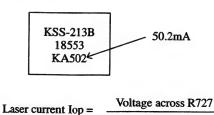

2. Tracking Balance Adjustment

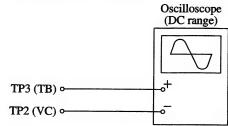

- Connect an oscilloscope to test points TP3 (TB) and TP2 (VC).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 (YEDS-18) and press the PLAY button
- 4) Adjust SFR703 to decrease the tracking gain..
- 5) Adjust SFR702 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.
- 6) After the adjustment is completed, remove the connected lead wires from the terminals.

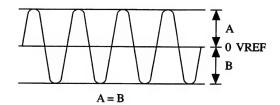

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise increases when the 2-axis device operates.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain editor ment is off the supporters helper.

When the gain adjustment is off, the symptoms below appear.


Gain	(Focus)	Tracking		
Symptoms	(2 0 0 0 0)			
 The time until music starts 				
becomes longer for STOP →		1.		
▶PLAY or automatic	low	low or high		
selection (₩, ₩ buttons	IOW	low or mgm		
pressed.) (Normally takes				
about 2 seconds.)				
 Music does not start and 				
disc continues to rotate for		low		
STOP →▶PLAY or				
automatic selection (M,)				
buttons pressed.)				
 Disc stops to rotate shortly 	law as bish			
after STOP →▶PLAY.	low or high			
 Sound is interrupted during 				
PLAY. Or time counter		low		
display stops.				
 More noises during the 	L:_L	high		
2-axis device operation.	high	high		

The following is simple adjustment method.

- Simple adjustment -

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

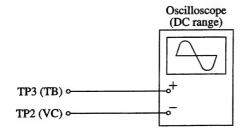

- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TB), TP2 (VC).
- 4) Adjust SFR703 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example

Low tracking gain (The fundamental wave appears as compared with the waveform adjusted.)



VOLT/DIV: 50mV TIME/DIV: 1mS

High tracking gain

(The frequency of the fundamental wave is higher than that in low gain.)



VOLT/DI✓: 50mV TIME/DIV: 1mS

MODEL NO. 6ZG-1S/S1 (D, F)

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KAN	
IC	87-A20-547-01 87-A20-546-01 87-A20-592-04 87-070-305-01	10 2A C-IC 10 1A C-IC	CXD2589Q ,M51943 AML	C210 C211 C212 C213 C214	87-010-176-02 87-010-176-02 87-010-382-04	0 OE 0 OE 0 OE	E C-CAP,S 150P-50 J CH GRM C-CAP,S 680P-50 J SL C-CAP,S 680P-50 J SL CAP,E 22-25 SME CAP,E 22-25 SME
TRANSISTO				C215 C216 C217 C218 C219	87-010-318-02 87-010-380-04 87-010-197-02	0 OE 0 OE 0 OE	C-CAP,S 47P-50 CH C-CAP,S 47P-50 CH C-CAP,E 47-16 SME C-CAP,S 0.01-25 B C-CAP,S 0.1-25 F
	87-026-463-08 89-421-722-38 89-320-011-08	80 OE TR,2 80 OE TR,2 80 OE TR,2	SD655 (0.5W) <s> SA933S (0.3W) SD2172V/W SC2001 (15W) TC114TK (0.2W)<s1></s1></s>	C220 C221 C222 C223 C226	87-010-197-02 87-010-186-02 87-016-081-02	0 OE 0 OE	CCAP,E 330-6.3 SME C-CAP,S 0.01-25 B C-CAP,S 4700P-50 B C-CAP,S 0.1-16 RK C-CAP,0.1-25 F <s1></s1>
		0 0E TR,2		C231 C401 C402 C501 C502	87-018-209-08 87-010-403-08 87-010-403-04 87-016-459-04	0 0E 0 0E 0 0E 0 0E	CAP, CER 0.1-50V <s> CAP, ELECT 3.3-50V CAP,E 3.3-50 SME CAP,E 470-10 SMG C-CAP,S 0.01-25 B</s>
DIODE		0 0E DIOD	E,1SS133 (110MA)	C503 C504 C505 C506	87-010-196-02 87-010-196-02 87-010-196-02	0 OE 0 OE 0 OE	CAP,E 100-10 C-CAP,S 0.1-25 F C-CAP,S 0.1-25 F C-CAP,S 0.1-25 F
CD MAIN C C1 C2 C4 C101 C102	87-010-196-02 87-010-260-08 87-010-197-02 87-010-263-04	0 0E CAP, 0 0E C-CA 0 0E CAP,	P,S 0.1-25 F <s> ELECT 47-25V<s> P,S 0.01-25 B<s> E 100-10 P,S 1000P-50 B</s></s></s>	C507 C508 C509 C510 C601 C602	87-016-459-04 87-010-196-02 87-010-196-02 87-010-197-02	0 0E 0 0E 0 0E 0 0E	C-CAP,S 0.1-25 F CAP,E 470-10 SMG C-CAP,S 0.1-25 F C-CAP,S 0.1-25 F C-CAP,S 0.01-25 B CAP,E 220-16 SMG
C103 C104 C105 C106 C107	87-010-182-02 87-010-198-02 87-016-081-02	0 0E C-CA 0 0E C-CA 0 0E C-CA	E 100-6.3 GAS P.S 2200P-50 B P.S 0.022-25 B P.S 0.1-16 RK P.S 0.1-16 RK	C603 C701 C702 C703 C705	87-010-322-02 87-010-318-02 87-010-318-02	0 0E 0 0E 0 0E	C-CAP,S 0.1-25 F C-CAP,S 100P-50 CH C-CAP,S 47P-50 CH C-CAP,S 47P-50 CH C-CAP,S 1000P-50 B
C108 C109 C110 C111 C112	87-010-497-04	0 0E CAP,1 0 0E C-CA 0 0E C-CA	P,S 0.1-16 RK P,S 0.01-25 B	C706 C901 C902 CN3 FB1	87-010-260-04 87-010-196-02 86-ZG1-609-01	0 0E 0 0E 0 1D	CAP, CER 3300P CAP,E 47-25 SME <d> C-CAP,S 0.1-25 F<d> CONN ASSY,6P FERRITE BEAD BL02RN2</d></d>
C113 C114 C115 C116 C117	87-010-263-04 87-010-197-02	0 0E C-CAL 0 0E CAP,1 0 0E C-CAL	P,S 0.015-25 B	FB2 FC1 FC2 L101 L201		1A 1B 0 0E	COIL, 10UH
C118 C119 C120 C121 C122	87-010-197-02 87-016-369-02 87-010-197-02 87-010-494-04 87-010-154-02	0 0E C-CAI 0 0E C-CAI 0 0E CAP,I	P,S 0.033-25 B K P,S 0.01-25 B E 1-50 GAS	LED901 M601 MPR1 R101 R102	87-045-305-010 87-026-689-080 87-022-363-020) 1F) 0E) 0E	LED,SLZ-8128A-01-B <d> MOTOR, RF-500TB DC-5V (2MA) PROTECTOR,1A 60V 491<s> C-RES,S 68K-1/10W F C-RES,S 68K-1/10W F</s></d>
C123 C124 C125 C126 C127	87-010-596-02	0 0E C-CAI 0 0E C-CAI 0 0E C-CAI		R103 R104 R105 R106 R420	87-022-363-020 87-022-365-020 87-022-365-020	0E 0 0E	C-RES,S 68K-1/10W F C-RES,S 68K-1/10W F C-RES,S 100K-1/10W F C-RES,S 100K-1/10W F RES,FUSE 33-1/4 W <s></s>
C128 C129 C130 C131 C132		0 0E C-CAI 0 0E C-CAI 0 0E CAP, I	100-6.3 GAS	S601 S602 S603 X201	87-036-109-010 87-036-109-010 87-036-109-010 87-A70-046-010	1A 1A	PUSH SWITCH
C133 C150 C202 C203 C204	87-010-145-020 87-010-596-020 87-010-188-020	0 0E C-CAI 0 0E C-CAI 0 0E C-CAI	P,S 390P-50 J CH P,S 1P-50 C CH P,S 0.047-16 RK P,S 6800P-50 B P,S 220P-50 CH	LED C.B <f: LED701 LED702 LED703</f: 	87-017-733-080 87-017-350-080	0E	LED, SEL1250SM LED, SEL1550CM LED, SEL1250SM
C205 C206 C207 C208 C209	87-010-400-040 87-010-197-020 87-010-318-020) OE CAP,E) OE C-CAF) OE C-CAF		T-T C.B C411 LED411	87-018-214-080 87-070-288-010		CAP TC U 0.1-50F LED,GL380

REF. NO PART NO. KANRI DESCRIPTION NO.

M401 87-A90-036-010 1D MOT ASSY, RF-300CA-11

PS401 87-A90-156-010 1B SNSR, SG-240 0411 87-A30-031-010 1A P-TR, PT380F S401 87-036-109-010 1A PUSH SWITCH

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

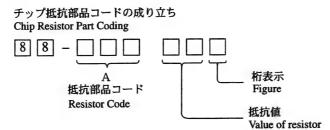

チップ抵抗 Chip resistor

容量	種類	許容誤差	記号	寸法 / Diamen	抵抗コード :A			
Wattage	Type	Tolerance	Symbol	外形 / Form	L	W	t	Resistor Code : A
1/16W	1608	5%	CJ	<u> </u>	1.6	0.8	0.45	108
1/10W	2125	5%	CJ	The state of the s	2	1.25	0.45	118
1/8W	3216	5%	CJ	W	3.2	1.6	0.55	128

共通部分は、下記のページを参照して下さい。

Refer to the following pages for the common section.

IC BLOCK DIAGRAM

MECHANICAL EXPLODED VIEW/PARTS LIST

40ページ参照 See page 40

CD MECHANISM EXPLODED VIEW/PARTS LIST

42ページ参照


See page 42


WAVE FORM


1 SYSTEM CLOCK f=16.9344MHz

VOLT/DIV: 2V TIME/DIV: 0.1µS 4 TRACKING

TIME/DIV: 1mS

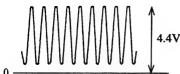


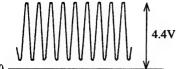


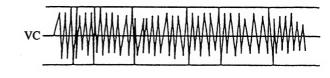


2 RF

VOLT/DIV: 500mV TIME/DIV: 0.5µS

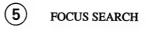

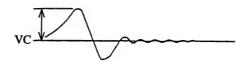


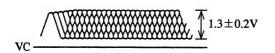



3 **FOCUS**

VOLT/DIV: 200mV TIME/DIV: 2mS



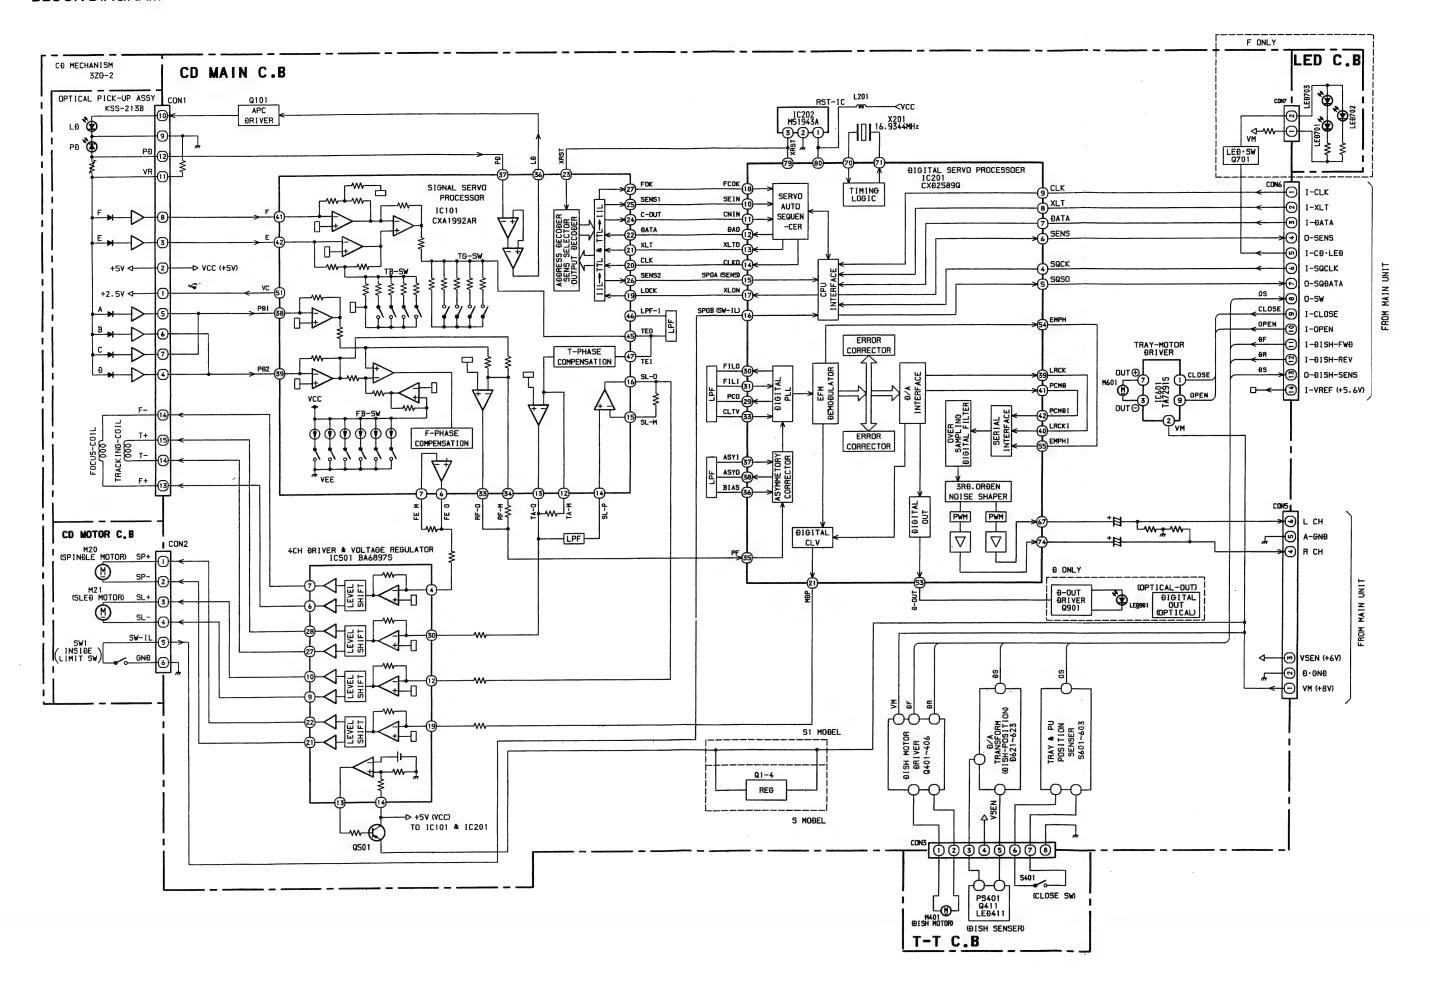

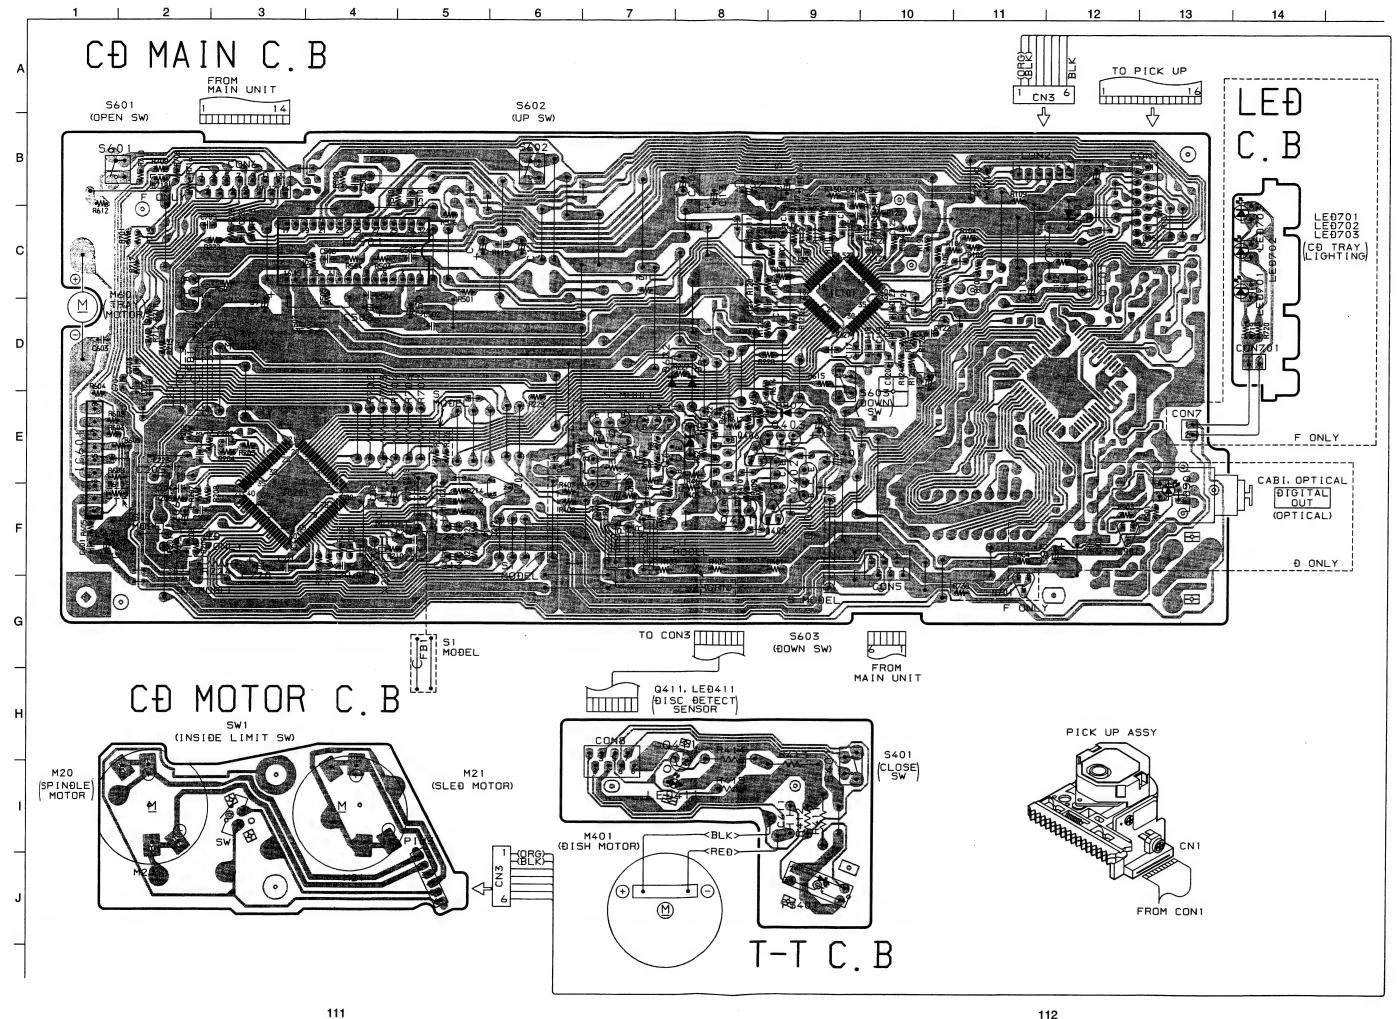

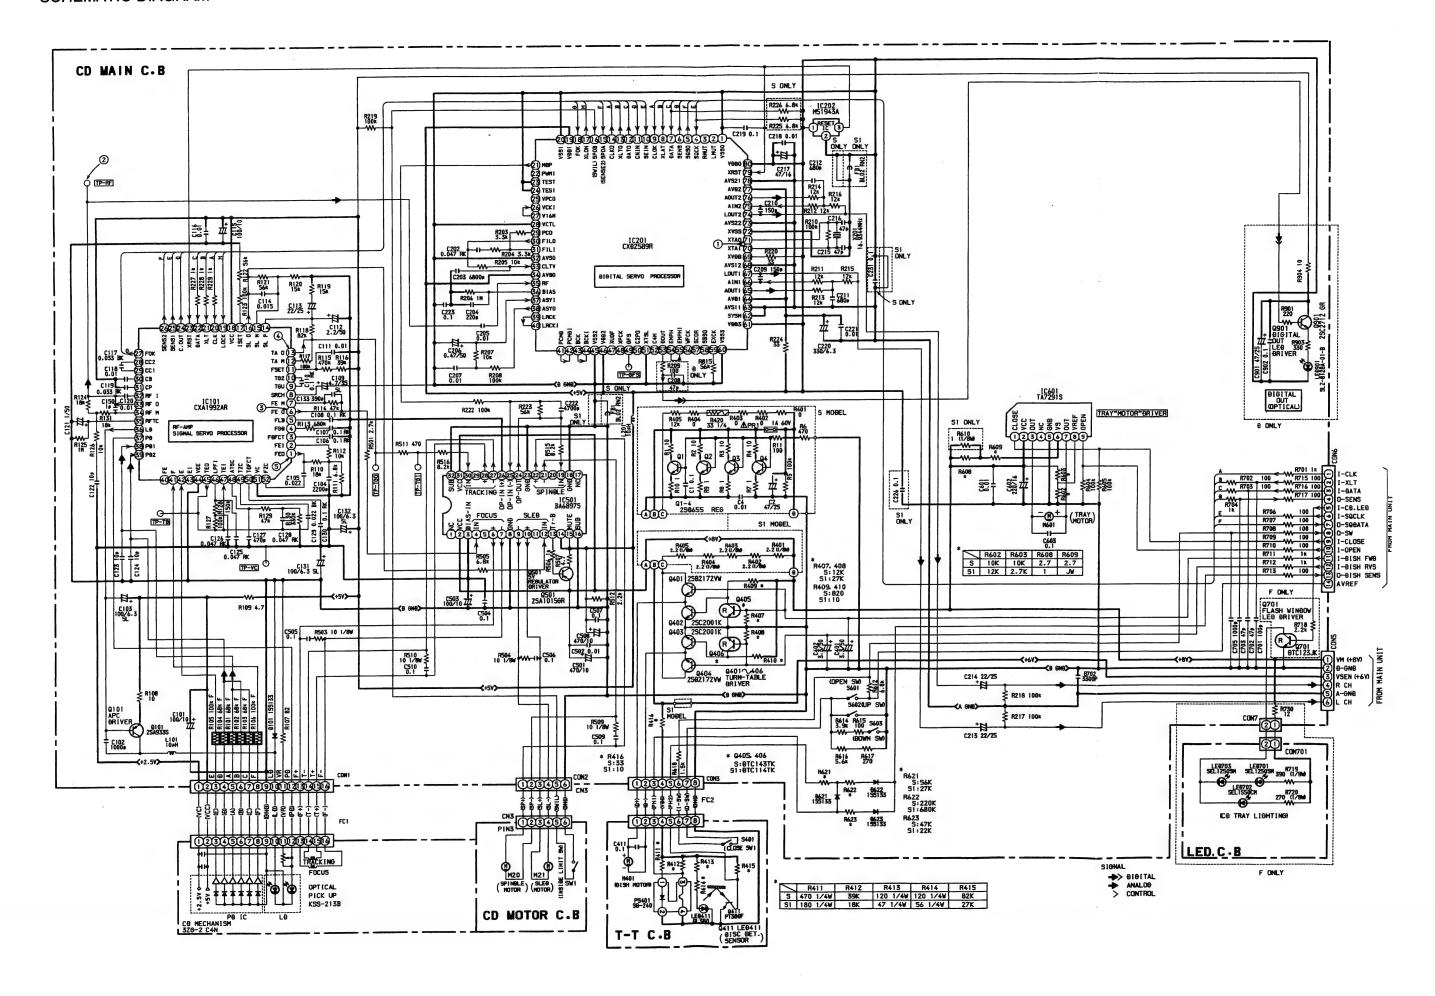

IC DESCRIPTION IC, CXA1992AR

端子番号	端子名称	I/O	機能説明
			フォーカス・エラーアンプの出力端子です。
1	FEO	0	内部でバイアス調整用のウィンドウコンパレータ入力に接続されています。
2	FEI	I	フォーカス・エラーの入力端子です。
3	FDFCT	I	ディフェクト時の時定数用コンデンサ接続端子です。
4	FGD	I	フォーカス・サーボの高域ゲインを落とす場合、この端子をコンデンサで接地 します。
5	FLB	I	フォーカス・サーボの低域持ち上げ用時定数外付け端子です。
6	FE_O	0	フォーカス・ドライブ出力です。
7	FEM	I	フォーカス・アンプの反転入力端子です。
8	SRCH	I	フォーカス・サーチ波形を作るための時定数外付け端子です。
9	TGU	I	トラッキング高域ゲイン切り換え用時定数外付け端子です。
10	TG2	I	トラッキング高域ゲイン切り換え用時定数外付け端子です。
11	FSET	I	フォーカス・トラッキングの位相補償のピーク設定用端子です。
12	TA_M	I	トラッキング・アンプの反転入力端子です。
13	TA_O	0	トラッキングドライブ出力。
14	SL_P	I	スレッド・アンプの非反転入力端子です。
15	SL_M	I	スレッド・アンプの反転入力端子です。
16	SL_O	0	スレッドドライブ出力。
17	ISET	I	フォーカスサーチ、トラックジャンプ、スレッドキックの高さを決める電流を 設定します。
18	Vcc	I	+5V電源供給端子。
19	LOCK	I	"L"でスレッド暴走防止回路が働きます。
20	CLK	I	シリアルデータ転送クロック入力です。
21	XLT	I	ラッチ入力です。
22	DATA	I	シリアルデータ入力です。
23	XRST	I	リセット入力端子"L"でリセットします。
24	C_OUT	0	トラック数カウント用信号出力です。
25	SENS1	О	コマンドにより、FZC、DFCT1、TZC、BALH、TGH、FOH、ATSCなどを出力 します。
26	SENS2	0	コマンドにより、DFCT2、MIRR、BALL、TGL、FOLなどを出力します。
27	FOK	0	フォーカスOKコンパレータの出力端子です。
28	CC2	I	DEFECTボトム・ホールド出力が容量結合されて入力される入力端子です。
29	CC1	0	DEFECTボトム・ホールド出力端子です。
30	СВ	I	DEFECTボトム・ホールドコンデンサ接続端子です。
31	СР	I	MIRRホールド・コンデンサの接続端子です。かつ、MIRRコンパレータの非反転 入力端子です。
32	RF_I	I	RFサミングアンプの出力が容量結合されて入力される入力端子です。
33	RF_O	0	RFサミングアンプの出力端子です。(EYEパターンのチェックポイント)
34	RF_M	I	RFサミングアンプの反転入力端子です。 この端子とRFO端子間に接続された抵抗でRFアンプのゲインが決まります。
35	RFTC	I	RFレベルコントロール時の時定数外付け端子です。
33	KFIC	1	INT C 1 0 P ロールはV V M 大 C 9 0

端	子番号	端子名称	I/O	機能説明
	36	LD	0	APCアンプの出力端子です。
	37	PD	I	APCアンプの入力端子です。
3	38、39 PD1、PD2		ī	RFI-Vアンプの反転入力端子です。光学ピックアップのA+C、B+D端子に接続し
			•	て電流入力で受けます。
	40	FEBIAS	1/0	フォーカス・エラーアンプのバイアス調整用端子です。自動調整する場合、
	40 FEDIAS			OPEN _o
4	41, 42 F, E		I	F、EのI-Vアンプの反転入力端子です。光学ピックアップのF、Eに接続して電流
	1, 72	I, L	•	入力で受けます。
	43	EI	_	I-VアンプEのゲイン調整用端子です。
	44	VEE	_	GND接続端子。
	45	TEO	0	トラッキング・エラーアンプの出力端子です。E-F信号が出力されます。
	46	LPFI	I	BAL調整用コンパレータ入力端子です。
	47	TEI	I	トラッキング・エラーの入力端子です。
	48	ATSC	I	ATSC検出用ウインドウコンパレータ入力端子です。
	49	TZC	I	トラッキング・ゼロクロスコンパレータの入力端子です。
	50	TDFCT	I	ディフェクト時の時定数用コンデンサ接続端子。
	51	VC	0	(VCC+VEE) /2 の直流電圧出力端子です。
	52	FZC	I	フォーカス・ゼロクロスコンパレータの入力端子です。

IC, CXD2589Q

端子番号	端子名称	I/O	機能説明			
1, 20, 45, 60	VSS	_	GND _o			
2	LMUT	0	Lch・ "0" 検出フラグ。			
3	RMUT	0	Rch・"0" 検出フラグ。			
4	SQCK	I	SQSOリード・アウト用クロック入力。			
5	SQSO	0	SubQ 80bitのシリアル出力。			
6	SENS	0	SENS出力 CPUへ出力。			
7	DATA	I	CPUよりシリアルデータ入力。			
8	XLAT	I	CPUよりラッチ入力、立ち下がりでシリアルデータをラッチ。			
9	CLOK	I	CPUよりシリアルデータ転送クロック入力。			
10	SEIN	I	SSPよりセンス入力。			
11	CNIN	I	トラックジャンプ数カウント信号入力。			
12	DATO	0	SSPへシリアルデータ出力。			
13	XLTO	0	SSPへシリアルデータラッチ出力 立ち下がりでラッチ。			
14	CLKO	0	SSPへシリアルデータ転送クロック出力。			
15	SPOA	I	マイコン拡張インタフェース。(入力A)			
16	SPOB	I	マイコン拡張インタフェース。(入力B)			
17	XLON	0	マイコン拡張インタフェース。(出力)			
18	FOK	I	フォーカスOK入力端子。SENS出力とサーボ・オートシーケンサに使用。			
19、46、61、80	VDD	_	電源。(+5V)			
21	MDP	0	久ピンドルモータのサーボ制御。			
22	PWMI	I	スピンドルモータの外部制御入力。			
23	TEST	ı	TEST用端子 通常GND。			
24	TESI]	1E31/13/8 1 /2 /1 31/20			
25	VPCO	O	広帯域EFM PLL用チャージポンプ出力。			
26	VCKI	I	広帯域EFM PLL用VCO2発振入力。			
27	V16M	О	広帯域EFM PLL用VCO2発振出力。			
28	VCTL	I	広帯域EFM PLL用VCO2コントロール電圧入力。			
29	PCO	О	マスタPLL用チャージポンプ出力。			
30	FILO	0	マスタPLL用 (スレーブ=デジタルPLL) フィルタ出力。			
31	FILI	I	マスタPLL用フィルタ入力。			
32	AVSS	_	アナログGND。			
33	CLTV	I	マスタ用VCOコントロール電圧入力。			
34	AVDD	_	アナログ電源。(+5V)			
35	RF	I	EFM信号入力。			
36	BIAS	I	アシンメトリー回路定電流入力。			
37	ASYI	I	アシンメトリーコンパレート電圧入力。			
38	ASYO	0	EFMフルスイング出力。(L=VSS、H=VDD)			
39	LRCK	0	D/Aインタフェース LRクロック出力 f=Fs。			
40	LRCKI	I	LRクロック入力。			
41	PCMD	0	D/Aインタフェース シリアルデータ出力。(2's COMP、MSBファースト)			
42	PCMDI	I	D/Aインタフェース シリアルデータ入力。(2's COMP、MSBファースト)			

端子番号	端子名称	I/O	機能説明
43	BCK	0	D/Aインタフェース ビットクロック出力。
44	BCKI	I	D/Aインタフェース ビットクロック入力。
47	XUGF	О	XUGF出力、コマンドによる切り換えでMNT1、RFCK出力。
48	XPCK	0	XPLCK出力、コマンドによる切り換えでMNT0出力。
49	GFS	O	GFS出力、コマンドによる切り換えでMNT3、XRAOF出力。
50	C2PO	0	C2PO出力、コマンドによる切り換えでGTOP出力。
51	XTSL	I	X'tal選択入力端子 X'talが16.9344MHzの時"L" 33.8688MHzの時"H"。
52	C4M	0	4.2336MHz出力 CAV-Wモード時はVCKIの1/4分周が出力。
53	DOUT	0	Digital Out出力端子。
54	ЕМРН	0	再生Discがエンファシス有りの時"H"出力 無しの時"L"出力。
55	ЕМРНІ	I	ディエンファシスONの時"H"入力 OFFの時"L"入力。
56	WFCK	0	WFCK出力。
57	SCOR	0	サブコードシンクSOかS1どちらか検出された時 "H" 出力。
58	SESO	0	SubP~Wのシリアル出力。
59	EXCK	I	SBSOリード・アウト用クロック入力。
62	SYSM	I	ミュート入力端子"H"の時アクティブ。
63	AVSS	_	アナログGND。
64	AVDD	_	アナログ電源。(+5V)
65	AOUT1	0	Lch・アナログ出力端子。
66	AINI	I	Lch·OPAMP入力端子。
67	LOUT1	0	Lch·LINE出力端子。
68	AVSS	_	アナログGND。
69	XVDD	_	マスタクロック用電源。
70	XTAI	I	水晶発振回路入力端子。マスタクロックを外部から入力する場合この端子か
70	XIAI	1	ら入力。
71	XTAO	0	水晶発振回路出力端子。
72	xvss	_	マスタクロック用GND端子。
73	AVSS	_	アナログGND。
74	LOUT2	0	Rch·LINE出力端子。
75	AIN2	I	Rch·OPAMP入力端子。
76	AOUT2	0	Rch・アナログ出力端子。
77	AVDD	_	アナログ電源。(+5V)
78	AVSS	_	アナログGND。
79	XRST	I	システムリセット Lでリセット。

- 注) · PCMDは、MSBファーストの2'sコンプリメント出力です。
 - ・GTOPは、Frame Syncの保護状況をモニタするものです。("H":シンク保護ウインドウ開放)
 - · XUGFは、EFM信号から得られたFrame Syncで、ネガティブパスルです。シンク保護前の信号。
 - · XPLCKは、EFM PLLのクロックの反転。立ち下がりエッジとEFM信号の変化点が、合うようにPLLが作られています。
 - · GFSは、Frame Syncと内挿タイミングが一致した時 "H"となる信号です。
 - ・RFCKは、X'tal精度で作られる136 μ 周期の信号 (通常速時)です。
 - · C2POは、Dataのエラー状態を表す信号です。
 - · XRAOFは、16K RAMが、±4Fのジッタマージンを超えた時、発生する信号です。

IC, CXA1992AR

Pin No.	Pin Name	I/O	Description			
1	FEO	0	Output terminal for focus error amplifier. Internally connected to window comparator			
			input for bias condition.			
2	FEI	I	Input terminal for focus error.			
3	FDFCT	I	Capacitor connection terminal for time constant used when there is defect.			
4	FGD	I	This pin is connected to GND via capacitor when high frequency gain of the focus			
	100		servo is attenuated.			
5	5 FLB		This is a pin where the time constant is externally connected to raise the low frequency			
	T E.D	I	gain of the focus servo.			
6	FE_O	0	Focus drive output.			
7	FEM	I	Focus amplifier inverted input pin.			
8	SRCH	I	This is a pin where the time constant is externally connected to generate the focus			
°	SKCH	1	search waveform.			
0	TGU	I	This is a pin where the selection time constant is externally connected to set the			
9	100	1	tracking servo the high frequency gain.			
10	TC2	I	This is a pin where the selection time constant is externally connected to set the			
10	TG2		tracking high frequency gain.			
11	FSET	I	Pin for setting peak of the phase compensator of the focus tracking.			
12	TA_M	I	Tracking amplifier inverted input pin.			
13	TA_O	0	Tracking drive output.			
14	SL_P	I	Sled amplifier non-inverted input pin.			
15	SL_M	I	Sled amplifier inverted input pin.			
16	SL_O	0	Sled drive output.			
4.5			The current which determines height of the focus search, track jump and sled kick is			
17	ISET	I	input with external resistance connected.			
18	Vcc	I	Power supply.			
19	LOCK	I	"L" setting starts sled disorder-prevention circuit. (Not pull-up resistance)			
20	CLK	I	Clock input for serial data transfer from CPU. (No pull-up resistance)			
21	XLT	I	Latch input from CPU. (No pull-up resistance)			
22	DATA	I	Serial data input from CPU. (No pull-up resistance)			
23	XRST	I	Reset system at "L" setting. (No pull-up resistance)			
24	C_OUT	0	Signal output for track number counting.			
			FZC, DFCT1, TZC, BALH, TGH, FOH, or ATSC is output depending on the			
25	SENS1	0	command from CPU.			
26	SENS2	0	DFCT2, MIRR, BALL, TGL or FOL is output depending on the command from CPU.			
27	FOK	0	Output terminal for focus OK comparator.			
28	CC2	I	Input pin where the DEFECT bottom hold output is capacitance coupled.			
			DEFECT bottom-hold output terminal. Internally connected to interruption comparator			
29	CC1	0	input.			
30	СВ	I	Connection terminal for DEFECT bottom-hold capacitor.			
			Connection terminal for MIRR hold-capacitor.			
31	CP	I	Anti-reverse input terminal for MIRR comparator.			

119

Pin No.	Pin Name	I/O	Description
32	RF_I	I	Input terminal by capacity combination of RF summing amplifier.
33	RF_O	0	Output terminal of RF summing amplifier. Checkpoint of Eye pattern.
34	RF_M	I	Anti-reverse input terminal for RF summing amplifier. The gain of RF amplifier is decided by the connection resistance between RF_M and RFO terminals.
35	RFTC	I	This is a pin where the selection time constant is externally connected to control the RF level.
36	LD	0	APC amplifier output terminal.
37	PD	I	APC amplifier input terminal.
38, 39	PD1, PD2	I	RFI-V amplifier inverted input pin. These pins are connected to the A+C and B+C pins of the optical pickup, receiving by currents input.
40	FEBIAS	I/O	Bias adjustment pin of the focus error amplifier.
41, 42	F, E	I	F and EIV amplifier inverted input pins. These pins are connected to the F and E of the optical pickup, receiving by current input.
43	. EI	_	Gain adjustment pin of the I-V amplifier E. (When not in use of BAL automatic adjustment)
44	VEE	_	GND connection pin.
45	TEO	0	Output terminal for tacking-error amplifier. Output E-F signal.
46	LPFI	I	BAL adjustment comparator input pin. (Input through LPF from TEO)
47	TEI	I	Input terminal for tracking error.
48	ATSC	I	Window-comparator input terminal for detecting ATSC.
49	TZC	I	Input terminal for tracking-zero cross comparator.
50	TDFCT	I	Capacitor connection pin for the time constant used when there is defect.
51	VC	0	Output terminal for DC voltage reduced to half of VCC+VEE.
52	FZC	I	Input terminal for focus-zero cross comparator.

IC, CXD2589Q

Pin No.	Pin Name	I/O	Description
1, 20, 45, 60	VSS		GND.
2	LMUT	0	Lch-"0" detect flag.
3	RMUT	0	Rch-"0" detect flag.
4	SQCK	I	Clock input for SQSO read out.
5	SQSO	0	SubQ 80 bit serial output.
6	SENS	О	SENS signal output to CPU.
7	DATA	I	Serial data input from CPU.
8	XLAT	I	Latch input from CPU, Latch serial data at fall down.
9	CLOK	I	Clock input to serial data transfer from CPU.
10	SEIN	I	SENS input from SSP.
11	CNIN	I	Numbers of track jump are counted and input.
12	DATO	0	Serial data output to SSP.
13	XLTO	0	Serial-data latch output to SSP. Latch at fall down.
14	CLKO	0	Clock output for serial data transfer to SSP.
15	SPOA	I	Microcomputer expansion interface. (Input A)
16	SPOB	I	Microcomputer expansion interface. (Input B)
17	XLON	0	Microcomputer expansion interface. (Output)
18	FOK	I	Focus OK input terminal. Used for SENS output and servo-auto sequencer.
19, 46, 61, 80	VDD	_	Power supply. (+5V)
21	MDP	0	Servo control for spindle motor.
22	PWMI	I	External control input for spindle motor.
23	TEST	I	TEST terminal. (Connected to GND)
24	TESI	I	TEST terminal. (Connected to GND)
25	VPCO	0	Charge pump output for extensive EFM PLL.
26	VCKI	I	VCO2 oscillator input for extensive EFM PLL.
27	V16M	0	VCO2 oscillator output for extensive EFM PLL.
28	VCTL	I	VCO2 control voltage input for extensive EFM PLL.
29	PCO	0	Charge pump output for master PLL.
30	FILO	0	Filter (slave = digital PLL) output for master PLL.
31	FILI	I	Filter input for master PLL.
32	AVSS	_	Analog GND.
33	CLTV	I	VCO control voltage input for master.
34	AVDD	-	Analog power. (+5V)
35	RF	I	EFM signal input.
36	BIAS	I	Constant current input to asymmetry circuit.
37	ASYI	I	Comparison voltage input to asymmetry circuit.
38	ASYO	О	EFM full-swing output. (L=VSS, H=VDD)
39	LRCK	0	D/A interface, LR clock output f=FS.
40	LRCKI	I	LR clock input.
41	PCMD	0	D/A interface, serial data output. (2's COMP, MSB first)
42	PCMDI	I	D/A interface, serial data input. (2's COMP, MSB first)

Pin No.	Pin Name	I/O	Description
43	BCK	0	D/A interface bit clock output.
44	вскі	I	D/A interface bit clock input.
47	XUGF	О	XUGF output, MNT1 or RPCK output by switching command.
48	XPCK	0	XPLCK output, MNT0 output by switching command.
49	GFS	О	GFS output, MNT3 or XRAOF output by switching command.
50	С2РО	0	C2PO output, GTOP output by switching command.
51	XTSL	I	X'tal select input terminal, X'tal: 16.9344MHz = "L" 33.8688MHz = "H".
52	C4M	О	4.2336MHz output, Output 1/4 divided frequency of VCKI at CAV-W mode.
53	DOUT	О	Digital Out connector output signal.
54	ЕМРН	О	"H" when the playback disc has emphasis. "L" when it does not.
55	ЕМРНІ	I	De-emphasis ON/OFF, "H" when ON, "L" when OFF.
56	WFCK	О	WFCK output.
57	SCOR	О	H output when the subcode sync S0 or S1 is detected.
58	SESO	0	Serial output for SubP-W.
59	EXCK	I	SBSO read out clock input.
62	SYSM	I	Mute input terminal, Active the "H" setting.
63	AVSS	_	Analogue GND.
64	AVDD	_	Analogue power supply. (+5V)
65	AOUT1	0	Lch/analogue output terminal.
66	AINI	I	Lch/OP AMP input terminal.
67	LOUT1	0	Lch/LINE output terminal.
68	AVSS	_	Analogue GND.
69	XVDD	_	Power supply for master clock.
70	XTAI	I	Input terminal for crystal oscillator circuit.
/0	XIXI		Input external master clock from this terminal.
71	XTAO	0	Output terminal for crystal oscillator circuit.
72	XVSS	_	GND terminal for master clock.
73	AVSS	_	Analogue GND.
74	LOUT2	0	Rch/LINE output terminal.
75	AIN2	I	Rch/OP AMP input terminal.
76	AOUT2	0	Rch/analogue output terminal.
77	AVDD	_	Analogue power supply. (+5V)
78	AVSS	_	Analogue GND.
79	XRST	I	Reset system at "L" setting.

Note)

- PCMD is the two's complement output with MSB first.
- GTOP monitors the protection status of the Frame Sync. (H: Sync protection window opened).
- XUGF is the Frame Sync negative pulse which is obtained from the EFM signal. This is the signal before the sync protection.
- XPLCK is the inverted signal of the EFM PLL clock. The PLL works so that the fall-down edge and the changed point of the EFM signal agree.
- GFS is the signal that goes "H" when the Frame Sync and the internally inserted timing agree.
- RFCK is the signal having 136 micro-seconds (during normal speed) that is generated to have the same accuracy as X'tal.
- C2PO is the signal indicating the error status of the data.
- XRAOF is the signal that is generated when the 16k RAM goes outside the jitter margin ±4F.

CD TEST MODE

<テストモードにするには>

PROGRAMキーを押しながら、ACコードをコンセントに差します。

〈テストモードにはいると〉

システムが初期化され、パワーオンします。 テストモード中は、CDブロックの電源は、常にオ ンしています。 まず始めに[スレッドモード]になります。

<テストモードの種類>

[スレッドモード]

FL表示が全点灯します。「《」「》」キーでピックアップを移動できます。

「ロ」キーを押すと、[フォーカスモード] になりま す。

「▷」キーを押すと、[プレイモード]になります。

「《」キーを押すと、スレッドが**外**周方向に動作します。

「»」キーを押すと、スレッドが内周方向に動作します。

OPEN/CLOSEキーを押すと、トレイの開閉ができます。

[フォーカスモード]

FL表示の全点灯が解除され、通常表示に戻ります。ディスクの有無、フォーカスOK/NGに関係なく、フォーカスサーチを行います。(サーチの回数は無制限、オートシーケンスは使用しません。)フォーカスが合ってもフォーカスサーボはオンしません。「D」キーを押すと、[プレイモード] になります。

「(べ」キーを押すと、トラックナンバーを ー1します。

「»」キーを押すと、トラックナンバーを +1します。

OPEN/CLOSEキーを押すと、トレイの開閉ができます。

[スレッドモード] になります。

[プレイモード]

FL表示の全点灯が解除され、通常表示に戻ります。

フォーカスサーチ(サーチの回数は無制限)を行い、フォーカスが合うと、フォーカスサーボをオンとなり、通常の演奏モードになります。[プレイモード]中は、GFSと音飛びは監視しません。フォーカスが落ちたら、再度フォーカスを合わせます。

「▷」 キーでトラッキングとスレッドのサーボをオン/オフできます。

「□」キーを押すと、[スレッドモード] になります。 「▷」キーを押すと、[‖] 表示を点灯/消灯を切り 換えます。

[|]消灯中は、

CLV-A トラッキングサーボ ON スレッドサーボ ON

[||] 点灯中は、

CLV-A トラッキングサーボ OFF スレッドサーボ OFF

「《」キーを押すと、トラックナンバーを -1します。

「»」キーを押すと、トラックナンバーを +1します。

OPEN/CLOSEキーを押すと、トレイの開閉ができます。[スレッドモード] になります。

<テストモードを解除するには>

ACコードを抜く。または、システムをパワーオフする。

下記は全てTEST-MODEのPLAY-MODEの時にのみ 実行する。PLAY中にPRGM釦を押すとFocus-BIAS の調整値を表示する。その後

Focus-BIAS

DISC PLAY中RANDOM-KEYを押すとFocus-BIAS設定値を表示する。

MKEYを一回押す度に1STEP DOWNする。 MKEYを一回押す度に1STEP UPする。 設定後PLAY-KEYを押す事により確定し、設定した 状態でPLAYする。また、STOP-KEYを押す事によ り設定値は解除する。

TRACKING-BALANCE

DISC PLAY中REPEAT-KEYを押すとT-BALANCE設 定値を表示する。設定値の変更、確定、解除は Focus-BIASと同様とする。

· TRACKING-GAIN

DISC PLAY中DISPLAY-KEYを押すとT-GAIN設定値を表示する。設定値の変更、確定、解除はFocus-BIASと同様とする。

表示方法

888-88:88

· Focus-BIAS

F8-88

TRACKING-BALANCE

8L-88

· TRACKING-GAIN

58-88

< How to Enter the Test Mode >

While pressing the PROGRAM key, insert the AC power cord to AC wall outlet.

< When the Machine Has Entered the Test Mode >

The system is initialized and the main power is turned on. During the test mode, the main power of the CD block is turned on always. The test mode starts with the [Sled mode].

< Types of Test Mode >

[Sled mode]

All displays of the FL tubes light. The optical pickup can be moved by pressing [\lambda] or [\rangle] key.

Pressing the $[\Box]$ key establishes the [Focus mode]. Pressing the $[\triangleright]$ key establishes the [Play mode].

Pressing the [\lambda] key moves the sled to outer circumference.

Pressing the [»] key moves the sled to inner circumference.

Pressing OPEN/CLOSE key opens or closes the tray.

[Focus mode]

Lighting of all displays of the FL tubes are turned off and returns to normal display. The focus search is performed in the focus mode regardless whether disc is inserted or not, or focus OK or NG. (Numbers of times of focus search is unlimited. Auto sequence is not used.)

Focus servo is not locked in even the focus is obtained.

Pressing the [▷] key establishes the [Play mode].

Pressing the [⟨⟨] key decreases the track number to -1.

Pressing the [⟩⟩] key increases the track number to +1.

Pressing OPEN/CLOSE key opens or closes the tray.

The machine enters the [Sled mode].

[Play mode]

Lighting of all displays of the FL tubes are turned off and returns to normal display. The focus search (numbers of search is unlimited) is performed. When focus comes to in-focus, the focus servo is locked in and the machines enters the normal play mode.

During [Play mode], GFS and sound skipping are not monitored.

When focus becomes out-of-focus, another attempt is made to search for focus.

The tracking servo and the sled servo can be turned on and off by pressing the $[\triangleright]$ key.

Pressing the $[\Box]$ key establishes the [Sled mode]. The $[\ \|\]$ display can be turned on and off by pressing the $[\ \]$ key .

While the [||] display is turned off: CLV-A Tracking servo: on Sled servo: on While the [||] display is turned on:

CLV-A Tracking servo: off Sled servo: off Pressing the [\lambda] key decreases the track number to -1. Pressing the [\lambda] key increases the track number to +1. Pressing OPEN/CLOSE key opens or closes the tray. The machine enters the [Sled mode].

< How to Exit the Test Mode >

Remove the AC power cord from power outlet, or turn off the system power.

The focus bias, tracking balance and the tracking gain adjustment values can be displayed, modified, set and released in the Play mode only of the following Test mode.

When the PRGM button is pressed during Play, the adjustment value of the focus bias is displayed. After that, you can enter the followings:

• FOCUS - BIAS

[Display]: Pressing the RANDOM key during disc play, the focus bias setting value is displayed.
[Adjustment]: Every pressing of the W key decrements the adjustment value by 1 step.

Every pressing of the M key increments the adjustment value by 1 step.

[Set]: The adjustment value is set by pressing the PLAY key after adjustment. Playback a disc after setting. [Release]: The set value can be released by pressing the STOP key.

TRACKING - BALANCE

[Display]: Pressing the REPEAT key during disc play, the tracking balance setting value is displayed.

[Adjustment]: The same procedure as in the FOCUS - BIAS.

[Set]: The same procedure as in the FOCUS - BIAS. [Release]: The same procedure as in the FOCUS - BIAS.

TRACKING - GAIN

[Display]: Pressing the DISPLAY key during disc play, the tracking balance setting value is displayed.
[Adjustment]: The same procedure as in the FOCUS - BIAS.

[Set]: The same procedure as in the FOCUS - BIAS. [Release]: The same procedure as in the FOCUS - BIAS.


Display method

888-88:88


FOCUS - BIAS

F8-88

TRACKING - BALANCE

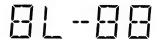

TRACKING - GAIN

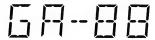

MODEL NO. 6ZG-1VZ (D, F) ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

If can't	understand	for Descr	iption please kindly	refer to KE	FEREN	LE NAME LIS	01.	ا
REF. NO	PART NO.	KANRI NO.	DESCRIPTION		REF. NO	PART NO.	KAN NO	
IC					C138	87-016-369-08	0 OE	C-CAP,S 0.033-25 B K
					C139	87-010-805-08		
	87-A20-446-0				C140			CHIP CAP 1000P
	87-A20-019-0				C141 C142	87-010-374-04		C-CAP,S 0.1-25 K B
	87-017-825-0 87-001-982-0				C142	07-010-374-04	UUE	CAF, E 4/-10
	87-A20-405-0				C143	87-010-549-04	0 OE	CAP, E 47-6.3 GAS
					C144			CAP, E 10-16 GAS
			LC865632A-5E67		C145			C-CAP, S 0.1-25 K B
	87-001-792-0 87-A20-406-0				C147 C148			C-CAP,S 0.033-25 B K C-CAP,S 0.1-25 K B
	87-A20-549-0				C140	07-010-005-00	0 01	C CAI, 5 V.1 25 R B
			HM514260CJ/CLJ-6		C151	87-010-992-08	0 OE	C-CAP,S 0.047-25 B
					C152			C-CAP,S 0.1-25 K B
			LC321667CT-25P		C153			C-CAP, S 0.1-25 K B
	87-A20-602-0				C154 C155	87-012-154-08		C-CAP,S 150P-50 CH
	87-A20-601-0	10 10 10, PC	ZUKVIE		(133	07-010-374-04	0 015	CAP,E 4/-10
					C156	87-016-669-08	0 OE	C-CAP,S 0.1-25 K B
TRANSISTO)R				C157			C-CAP,S 0.1-25 K B
			mm		C158	87-010-374-04		
			TR, 2SA1037 S		C159 C160			C-CAP,S 15P-50 CH C-CAP,S 15P-50 CH
	87-026-223-0 89-320-011-0				C100	07-010-312-00	UE	C-CAP, S 13P-30 CR
	89-421-722-3				C161	87-016-669-08	0 OE	C-CAP,S 0.1-25 K B
			DTC 123 JK <f></f>		C162	87-016-669-08	0E	C-CAP,S 0.1-25 K B
					C163			C-CAP,S 5P-50 CH
			TR, 2SC2712GR		C164			CHIP CAPACITOR, 0.1-25
	87-026-470-0		11CO3F (0.3W)		C181	87-010-009-086	JUE	C-CAP,S 0.1-25 K B <d></d>
			1C01F (0.3W)		C182	87-010-374-046	0 E	CAP, E 47-10 <d></d>
	87-026-473-0				C223			CAP,E330-25 SME
					C224			CAP, CHIP 0.01 DM
	87-026-237-0				C225			CAP, CHIP 0.01 DM
	89-213-292-08 87-A30-117-08				C226	87-010-178-080	J UE	CHIP CAP 1000P
	0, 1150 11, 0	10 111 111, 21			C227	87-010-197-086	0E	CAP, CHIP 0.01 DM
					C251			CAP, E 220-10 SME
DIODE					C252			CHIP CAPACITOR, 0.1-25
	07 020 027 0	00 OF CUIT	DIODE 100104		C253 C255			CHIP CAPACITOR, 0.1-25
			DIODE 1SS184 DE,SB07-015C		C255	67-010-403-040) UE	CAP, E 3.3-50 SME
	0, 1110 100 0		,		C256	87-010-403-040	0E	CAP, E 3.3-50 SME
					C302			C-CAP,S 100P-50 CH
MAIN VCD	C.B				C303			C-CAP, S 100P-50 CH
C101	97-016-369-09	80 0E C_CAE	у, S 0.033-25 В К		C304 C305			C-CAP,S 100P-50 CH C-CAP,S 100P-50 CH
C102	87-A10-201-0				6303	07 010 322 000	, 02	C CALL / B 1001 30 CA
C103			,S 0.22-16 B		C306	87-010-178-080	0E	CHIP CAP 1000P
C104			,S 0.015-50 B		C307	87-010-374-040		
C105	87-012-157-08	80 OE C-CAP	,S 330P-50 CH		C308 C401			CHIP CAPACITOR, 0.1-25
C106	87-016-369-09	OF C-CAP	,S 0.033-25 B K		C401	87-010-805-080 87-010-196-080		CHIP CAPACITOR, 0.1-25
C107	87-010-181-08				0.00	0. 020 250 000		CHILL CHILDETON, U.L. 23
C109	87-010-198-08	30 OE CAP,	CHIP 0.022		C403			CAP,E 47-6.3 GAS
C110	87-010-178-08				C404			CHIP CAPACITOR, 0.1-25
C111	87-016-460-08	SO OF C-CAP	,S 0.22-16 B		C405			C-CAP, S 47P-50 CH
C112	87-016-669-08	30 OE C-CAP	,S 0.1-25 K B		C406 C407			C-CAP,S 47P-50 CH CHIP CAPACITOR,82P(J)
C113			,S 0.15-16 RK				-	
C114	87-010-197-08	30 OE CAP,	CHIP 0.01 DM		C408			CHIP CAPACITOR, 82P(J)
C115	87-010-186-08				C409	87-010-320-080		
C116	8/-U1U-322-08	SU UE C-CAP	,S 100P-50 CH		C410 C411	87-010-320-080 87-010-320-080		
C117	87-010-184-08	30 OE CHIP	CAPACITOR 3300P(K)		C411	87-010-320-080		
C118			,S 0.47-16 BK					
C119	87-010-403-04	10 OE CAP,E	3.3-50 SME		C413			CHIP CAPACITOR, 82P(J)
C120	87-010-379-04				C414			CHIP CAPACITOR, 82P(J)
C122	87-010-186-08	SU UE CAP,C	nir 4/00P		C415 C416			CAP,E 4.7-50 SME CAP,E 4.7-50 SME
C123	87-010-150-08	30 OE C-CAP	,S 6P-50 CH		C416			CAP, CHIP 4700P
C124	87-010-320-08	30 OE CHIP	CAP 68P					
C126			,S 0.1-25 K B		C418			CAP, CHIP 4700P
C128			,S 0.1-25 K B		C419	87-010-263-040		
C129	87-010-421-04	IO UE CAP,E	#./-DO DD		C420 C421			CHIP CAPACITOR, 0.1-25 CHIP CAPACITOR, 0.1-25
C130	87-010-550-04	OE CAP.E	100-6.3 GAS		C501			CAP, CHIP 0.01 DM
C132			,S 0.1-25 K B					
C133	87-016-669-08	0 OE C-CAP	,S 0.1-25 K B		C502			C-CAP,S 1.0U-10 K B
C134	87-010-549-04				C503			CHIP CAPACITOR, 0.1-25
C135	87-010-498-04	OUE CAP, E	10-10 GAS		C504 C508			CHIP CAPACITOR, 0.1-25
C137	87-A10-201-08	0 OE C-CAP	,S0.33-16 KB		C508			CHIP CAPACITOR, 0.1-25 C-CAP, S 22P-50V
			<u> </u>					

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KAN NO	
C510 C511	87-010-314-08		S 22P-50V APACITOR, 0.1-25	L503 L504	87-005-196-080		
C511			APACITOR, 0.1-25	L511	87-005-196-080 87-005-207-080		
C514			APACITOR, 0.1-25	L601			COIL 4.7UH FLR50
C515	87-010-314-08			L602			COIL, 68UH RCR875D
CJIJ	07 010 314 00	o on c can, c	3 221 304	1002	07 A30 033 010	, IL	COID, OUGH REROYSD
C516	87-010-314-08			M601			MOTOR, RF-500TB DC-5V (2MA)
C527			APACITOR, 0.1-25	R171			C-RES, S 180K-1/10W F
C531	87-010-197-08			R172			C-RES,S 120K-1/10WF
C532			PACITOR, 0.1-25	R173			C-RES, S 120K-1/10WF
C534	8/-010-196-08	O OE CHIP CA	APACITOR, 0.1-25	R174	87-022-366-080) OE	C-RES,S 120K-1/10WF
C535			PACITOR, 0.1-25	R175	87-022-366-080	0E	C-RES, S 120K-1/10WF
C537	87-010-371-04			R176	87-022-368-080)	C-RES,S 180K-1/10W F
C538	87-010-374-04			R605			C-RES,S 820-1/10W F
C539	87-010-378-04			R606			C-RES, S10K-1/10W F
C541	87-010-196-08	0 OE CHIP CA	PACITOR, 0.1-25	R607	87-022-339-080) 0E	C-RES,S,390-1/10W F
C542	87-010-374-04	0 0E CAP,E 4	7-10	S301	87-036-109-010	1A	PUSH SWITCH
C543	87-010-374-04			S302	87-036-109-010		
C545			PACITOR, 0.1-25	S303	87-036-109-010		
C546	87-010-549-04			X151			VIB,XTAL 16.9344MHZ
C547	87-010-196-08	0 OE CHIP CA	PACITOR, 0.1-25	X301	87-030-422-080	1A	VIB, CER CST 6.00MGW
C548	87-010-322-08	O OE C-CAP.S	100P-50 CH	X501	80-JUC-601-080) 1E	VIB,XTAL 14.31MHZ
C549			IP S 4P-50 CH	X502			VIB,XTAL 17.73MHZ
C551	87-010-314-08						,
C553	87-012-153-08						
C554	87-010-154-080	O OE CAP CHI	P 10P	LED C.B <f< td=""><td>></td><td></td><td></td></f<>	>		
C555	87-010-197-08	OF CAP. CH	TP 0.01 DM	LED801	87-017-733-080	0E	LED. SEL1250SM <f></f>
C556	87-010-318-08			LED802	87-017-733-080	0E	LED. SEL1250SM <f></f>
C557	87-010-318-08			LED803	87-017-350-080	0E	LED, SEL1250SM <f> LED, SEL1250SM<f> LED, SEL1550CM<f></f></f></f>
C558	87-010-197-086						
C601	87-010-263-040	0 0E CAP,E 1	00-10				
0000	07 010 106 000		D107mon 0 1 05	T-T C.B			
C602 C603			PACITOR, 0.1-25	0411	07 010 014 000	077	G3D MG H A 1 FAR
C604	87-010-384-040 87-012-140-080			C411 LED411			CAP TC U 0.1-50F
C605	87-010-178-080			M401			MOT ASSY, RF-300CA-11
C606	87-010-178-080			PS401	87-A90-156-010		
2000	07-010-170-000	OL CHIL CA	1 10001	0411	87-A30-031-010		
C607	87-010-248-040	OE CAP,E 2	20-10 SME				,
C608			PACITOR, 0.1-25	S401	87-036-109-010	1A	PUSH SWITCH
C609	87-010-263-040) OE CAP,E 1	00-10				
C610	87-010-374-040						
C611	87-010-384-040	OE CAP,E 1	00-25 SME	VIDEO SW (C.B		
C615	87-010-197-080	OE CAP, CH	IP 0.01 DM	S851	87-A90-238-010	1A	SW,SL 1-1-3 9L
C618	87-010-805-080						•
CN3	86-ZG1-609-010	D 1D CONN AS	SY,6P				
FC1	86-ZG1-605-010						
FC2	86-ZG1-608-010	1B CABLE, F	FC 8P				
J501	87-009-502-010	1A JACK, PI	N 1P Y EARTH				
L101	87-005-196-080						
L102	87-005-196-080						
L501	87-005-196-080						
L502	87-005-196-080	0E COIL,10	UH				


○ チップ抵抗部品コード / CHIP RESISTOR PART CODE


チップ抵抗部品コードの成り立ち Chip Resistor Part Coding


88 - 所表示 抵抗部品コード Resistor Code 抵抗値 Value of resistor


チップ抵抗 Chip resistor


容量	種類	許容誤差	記号	寸法 / Diamen	抵抗コード : A			
Wattage	Туре	Tolerance	Symbol	外形 / Form	L	W	t	Resistor Code : A
1/16W	1608	5%	CJ	<u>←_L</u>	1.6	0.8	0.45	108
1/1 0W	2125	5%	CJ	The state of the s	2	1.25	0.45	118
1/8 W	3216	5%	CJ	w	3.2	1.6	0.55	128

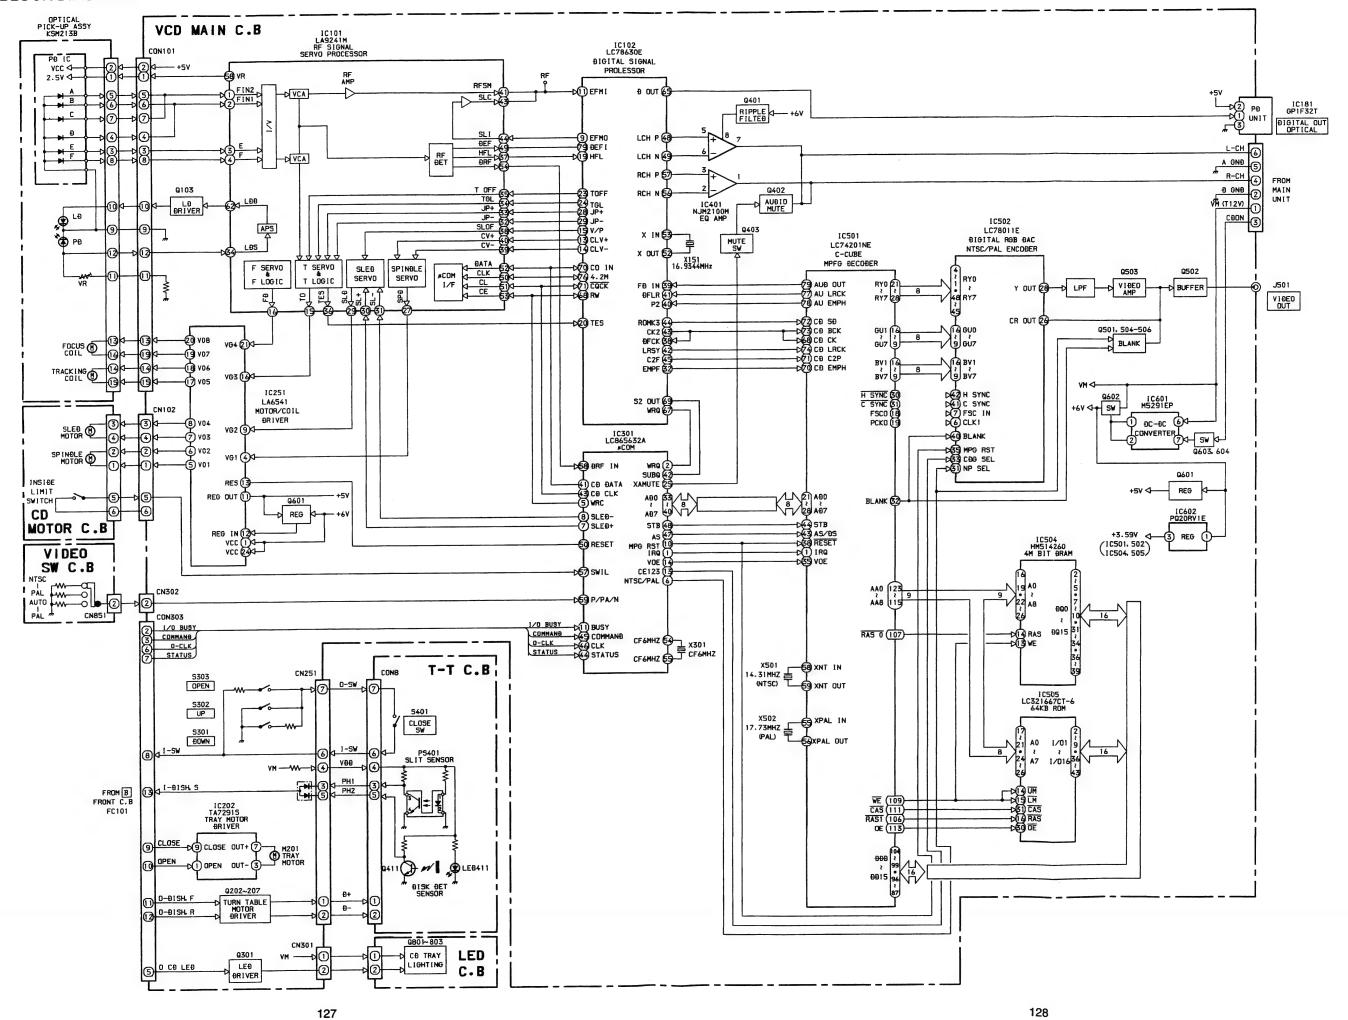


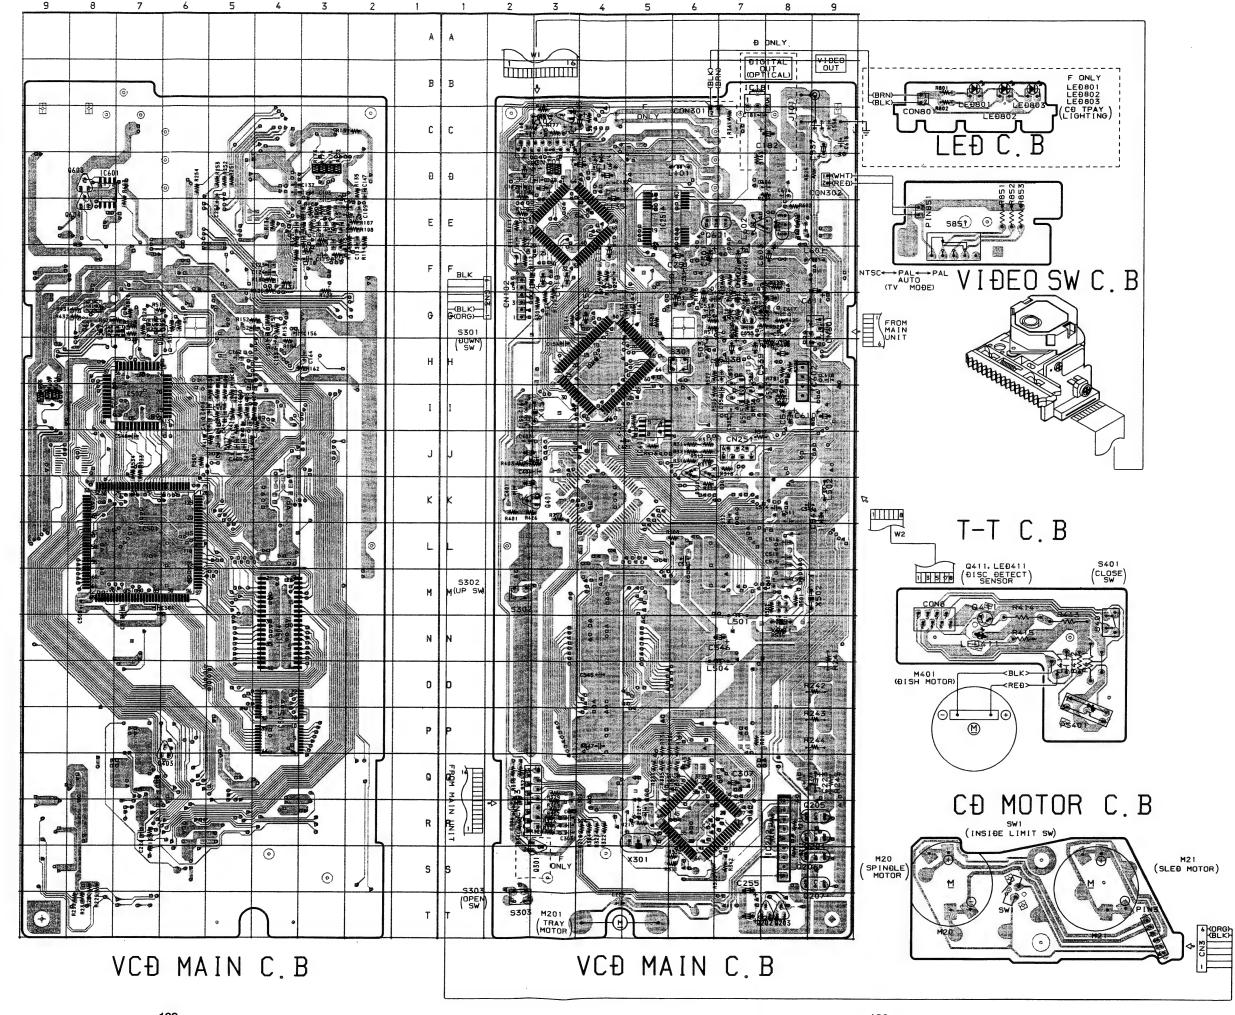


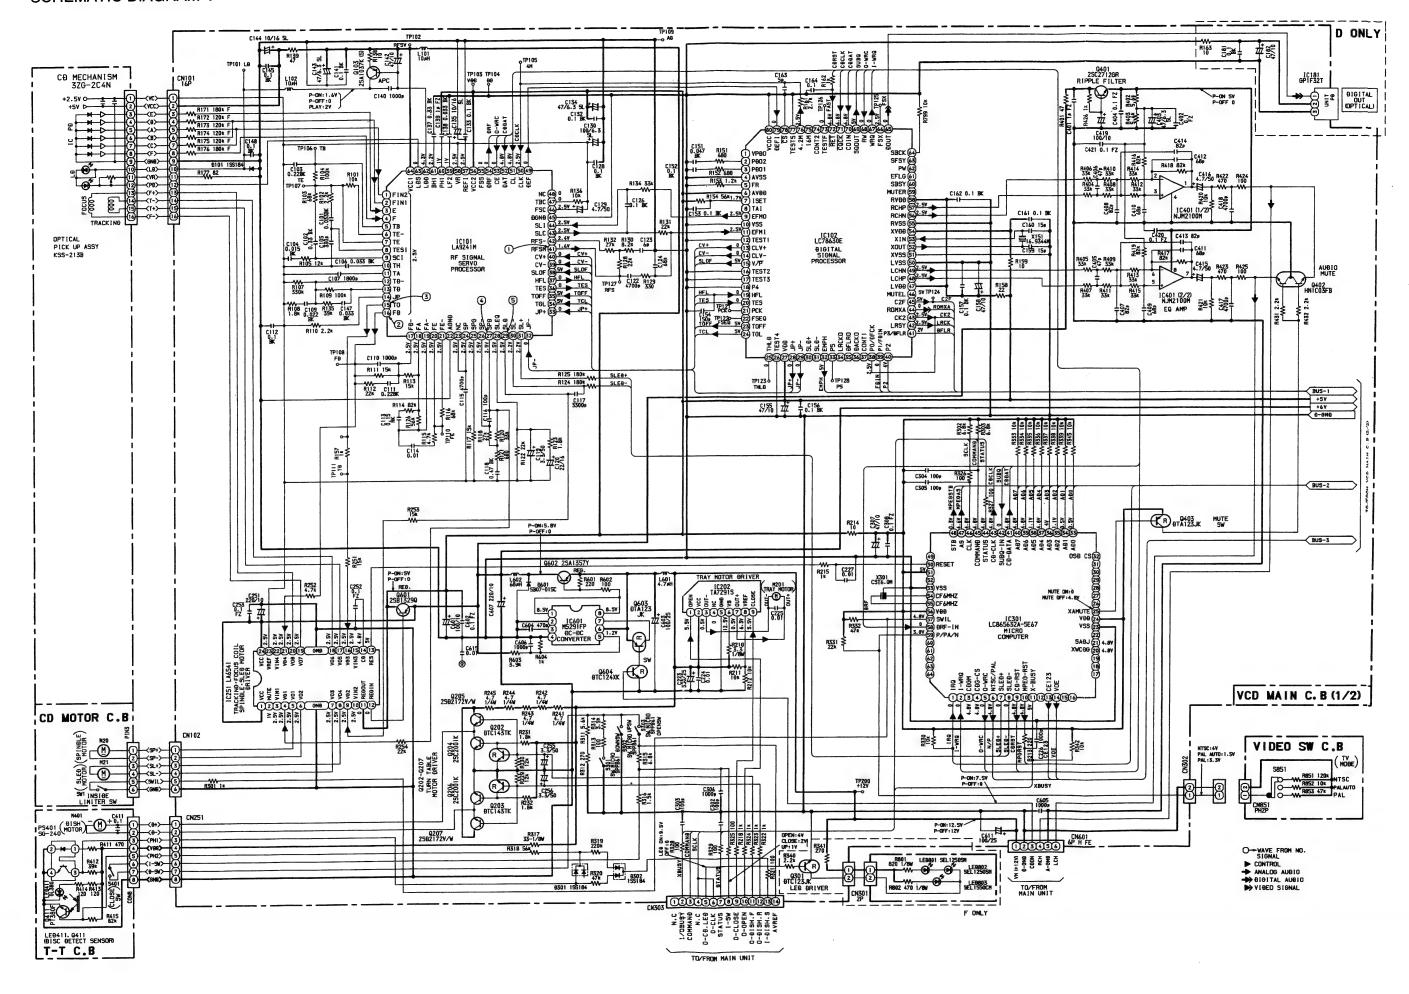


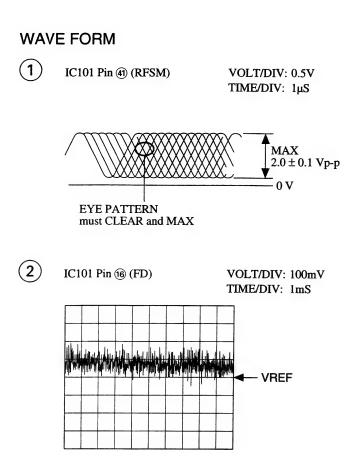

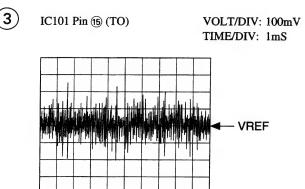


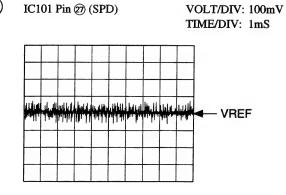


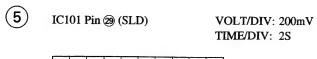


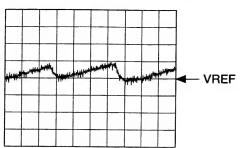


6 IC501 Pin (9) (PCKO) VOLT/DIV: 2V IC501 Pin ® (FSCO) TIME/DIV: 50nS

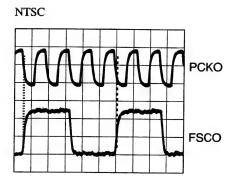


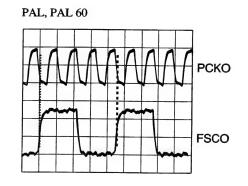

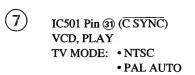


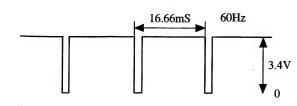


VCD, PLAY TV MODE: PAL

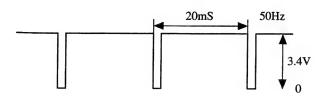

IC501 Pin ③ (H SYNC) VCD, PLAY TV MODE: • NTSC • PAL AUTO

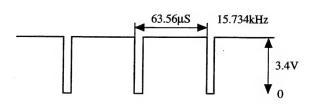



VCD, PLAY TV MODE: PAL

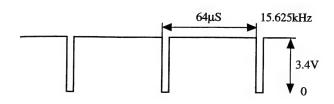


VIDEO OUT C537 ⊖ side VCD PLAY: CD-T05 TRACK4 VOLT/DIV: 200mV TV MODE: • NTSC

VOLT/DIV: 200mV TIME/DIV: 10µS TIME/DIV: 10µS

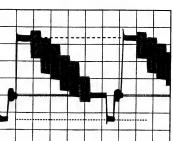

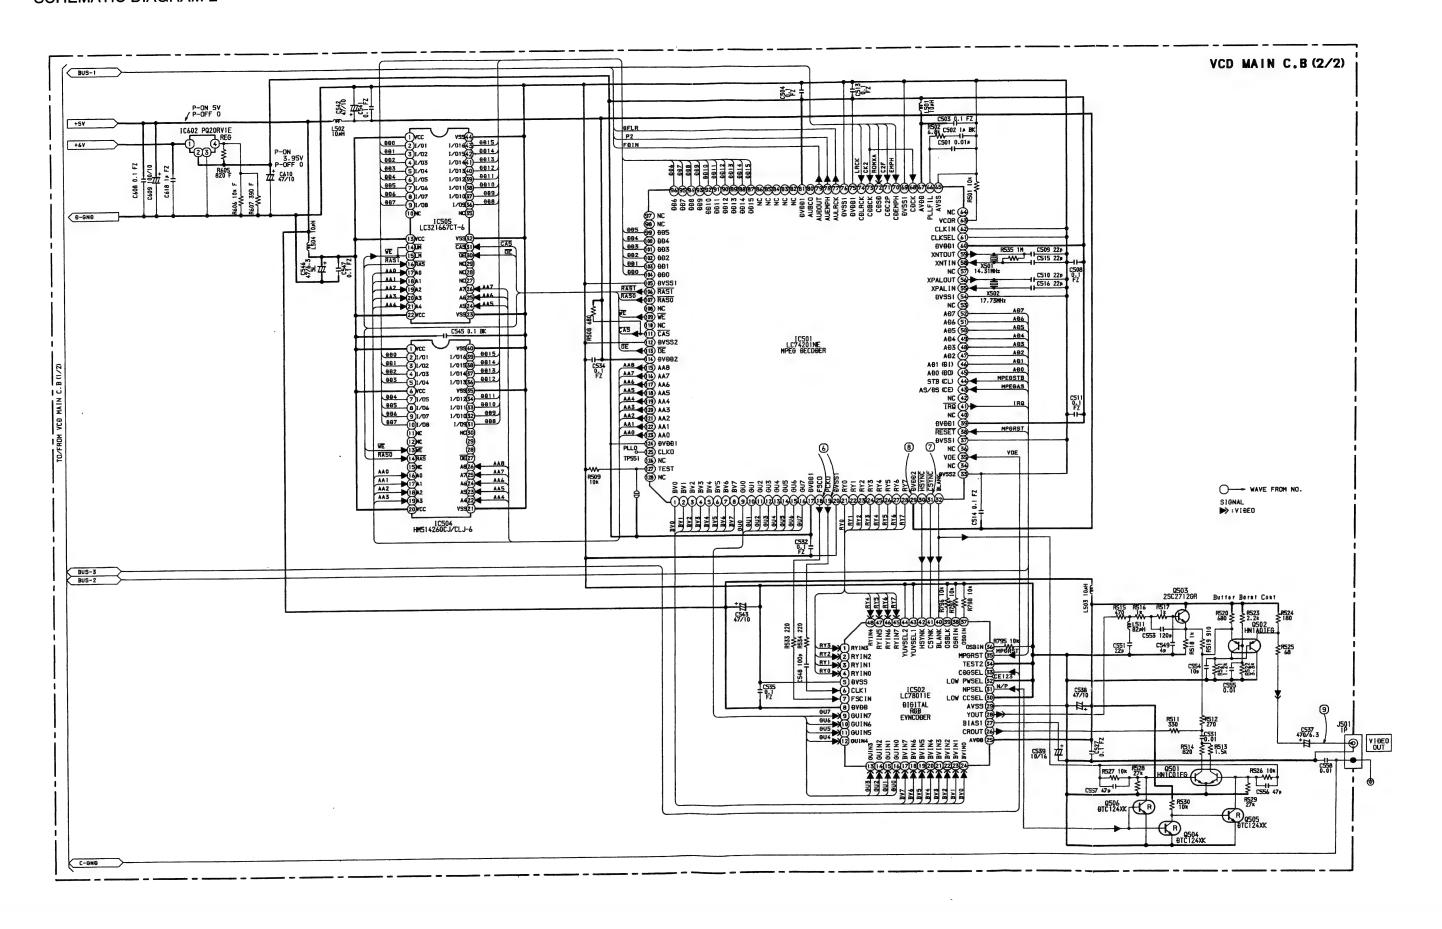

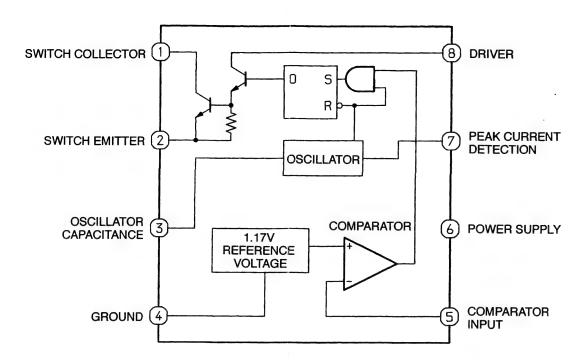

共通部分は、下記のページを参照して下さい。 Refer to the following pages for the common section.

IC BLOCK DIAGRAM

TA7291S 23ページ参照 See page 23 BA6897S 23ページ参照 See page 23

MECHANICAL EXPLODED VIEW/PARTS LIST 40ページ参照 See page 40

CD MECHANISM EXPLODED VIEW/PARTS LIST 42ページ参照 See page 42

IC DESCRIPTION IC, LA9241M

端子番号	端子名称	I/O	機能説明	
1	FIN2	I	ピックアップのフォトダイオード接続用ピン。FIN1ピンとの加算でRF信号を	
			生成し、減算でFE信号を生成する。	
2	FIN1	I	ピックアップのフォトダイオード接続用ピン。	
3	E	I	ピックアップのフォトダイオード接続用ピン。Fピンとの減算でTE信号を生成する。	
4	F	I	ピックアップのフォトダイオード接続用ピン。	
5	ТВ	I	TE信号のDC成分入力用ピン。	
6	TE-	I	TE信号のゲイン設定用抵抗をTEピン間に接続するピン。	
7	TE	0	TE信号出力ピン。	
8	TESI	I	TES "Track Error Sence" コンパレータ入力ピン。TE信号をバンドパスし、入力する。	
9	SCI	I	ショック検出用入力ピン。	
10	TH	I	トラッキングゲイン時定数設定用ピン。	
11	TA	0	TAアンプ出力ピン。	
12	TD-	I	トラッキング位相補償定数をTD、VRピン間で構成するためのピン。	
13	TD	I	トラッキング位相補償設定用ピン。	
14	JP	I	トラッキングシャンプ信号 (キックパルス) 振幅設定用ピン。	
15	то	0	トラッキング制御信号出力ピン。	
16	FD	0	フォーカシング制御信号出力ピン。	
17	FD-	I	フォーカシング位相補償定数をFD、FAピン間で構成するためのピン。	
18	FA	I	フォーカシング位相補償定数をFD-、FA-ピン間で構成するためのピン。	
19	FA-	I	フォーカシング位相補償定数をFA、FEピン間で構成するためのピン。	
20	FE	0	FE信号の出力ピン。	
21	FE-	I	FE信号のゲイン設定用抵抗をFEピン間に接続するピン。	
22	AGND	-	アナログ信号用GND。	
23	NC	_	NO CONNECT	
24	SP	0	CV+、CV-ピン入力信号のシングルエンド出力。	
25	SPG	I	スピンドル12cmモード時ゲイン設定用抵抗接続ピン。	
26	SP-	I	SPDピンとともにスピンドル位相補償定数接続用ピン。	
27	SPD	0	スピンドル制御信号出力ピン。	
28	SLEQ	I	スレッド位相補償定数接続用ピン。	
29	SLD	0	スレッド制御信号出力ピン。	
30、31	SL-, SL+	I	マイコンからのスレッド送り信号入力ピン。	
32、33	Љ−′ Љ +	I	DSPからのトラッキングジャンプ信号入力ピン。	
34	TGL	I	DSPからのトラッキングゲインコントロール信号入力ピン。 TGL=「H」でゲインロー。	
35	TOFF	I	DSPからのトラッキングオフコントロール信号入力ピン。 TOFF=「H」でオフ。	
36	TES	0	TES信号をDSPへ出力するピン。	
37	HFL	0	"High Frequency Level"は、メインビームの位置がビット上か、ミラー上かの判断に利用される。	

端子番号	端子名称	I/O	機能説明	
38	SLOF	I	スレッドサーボオフコントロール入力ピン。	
39、40	cv-, cv+	I	DSPからのCLVエラー信号入力用ピン。	
41	RFSM	0	RF出力ピン。	
42	RFS-	I	RFSMピンとともにRFのゲイン設定およびEFM信号の3T補償定数設定用ピン。	
43	SLC	0	"Slice Level Control"は、RF波形のDSPによるデータスライスのレベルを制御する出力ピン。	
44	SLI	I	DSPによるデータスライスのレベルを制御するための入力ピン。	
45	DGND	_	ディジタル系のGNDピン。	
46	FSC	0	フォーカスサーチスムージングコンデンサ用出力ピン。	
47	TBC	I	"Tracking Balance Control" EFバランス可変範囲用設定ピン。	
48	NC	_	NO CONNECT .	
49	DEF	0	ディスクのディフェクト検出出力ピン。	
50	CLK	I	基準クロック入力ピン。DSPの4.23MHzが入力される。	
51	CL	I	マイコンコマンドクロック入力ピン。	
52	DAT	I	マイコンコマンドデータ入力ピン。	
53	CE	I	マイコンコマンドチップイネーブル入力ピン。	
54	DRF	0	"Detect RF" RFレベル検出出力。	
55	FSS	I	"Focus Serch Select"フォーカスサーチモード (基準電圧に対し±サーチ/+サーチ) の切り換えピン。	
56	VCC2	_	サーボ系、ディジタル系用VCCピン。	
57	REFI	_	基準電圧用バスコン接続用ピン。	
58	VR	0	基準電圧出力ピン。	
59	LF2	I	ディスクのディフェクト検出時定数設定用ピン。	
60	PH1	I	RF信号のピークホールド用コンデンサ接続用ピン。	
61	BH1	I	RF信号のボトムホールド用コンデンサ接続用ピン。	
62	LDD	0	APC回路出力ピン。	
63	LDS	I	APC回路入力ピン。	
64	VCC1	_	RF系VCCピン。	

IC, LC78630E

端子番号	端子名称	I/O	機能説明		
1.	VPDO	0	バリピッチ用PLLのチャージポンプ出力端子。未使用時 "OPEN" とすること。		
2	PDO2	0	2倍速、4倍速時のビットクロック再生用PLLのチャージポンプ出力端子。未使 用時 "OPEN"とすること。		
3	PDO1	0	通常速時のビットクロック再生用PLLのチャージポンプ出力端子。		
4	AVSS	_	アナログ系接地端子。通常0V。		
5	FR	I	内蔵VCO周波数レンジ設定用抵抗接続端子。		
6	AVDD	_	アナログ系電源端子。		
7	ISET	I	PDO1、PDO2出力電流設定用抵抗接続端子。		
8	TAI	I	テスト用入力端子。プルダウン抵抗内蔵。		
9	EFMO	0	EFM信号出力端子。		
10	VSS	-	ディジタル系接地端子。通常0V。		
11	EFMI	I	EFM信号入力端子。		
12	TEST1	I	テスト用入力端子。プルダウン抵抗内蔵。		
13	CLV+	0	71211111111111111111111111111111111111		
14	CLV-	0	スピンドルサーボ制御用出力端子。CLV+が「H」で加速、CLV-が「H」で減速。		
15	v.		ラフサーボ/位相制御の自動切換えモニタ出力端子。「H」でラフサーボ、		
15	15 V/P	0	「L」で位相制御モード。		
16、17	TEST2、TEST3	I	テスト用入力端子。プルダウン抵抗内蔵。		
18	P4	I/O	入出力ポート。		
19	HFL	I	トラック検出信号入力端子。シュミット入力。		
20	TES	I	トラッキング誤差信号入力端子。シュミット入力。		
21	PCK	0	EFMデータ再生用ビットクロックモニタ端子。通常速再生での位相ロック時		
21	r CR		4.3218MHz _o		
22	FSEQ	0	同期信号検出出力端子。EFM信号から検出した同期信号と内部生成の同期信		
	1320		号が一致した時に「H」。		
23	TOFF	0	トラッキングOFF出力端子。		
24	TGL	0	トラッキングゲイン切換え用出力端子。「L」でゲインを上げる。		
25	THLD	0	トラッキングホールド出力端子。		
26	TEST4	I	テスト用入力端子。プルダウン抵抗内蔵。		
27	VDD	_	ディジタル系電源端子。		
			トラックジャンプ用出力端子。JP+が「H」で外周方向ジャンプ時の加速また		
28、29	JP+、JP-	0	は内周方向ジャンプ時の減速。JP-が「H」で内周方向ジャンプ時の加速また		
			は外周方向ジャンプ時の減速。		
30、31	SLD+、SLD-	О	スレッド出力端子。コマンドにより4レベル設定可能。		
32	ЕМРН	0	エンファシスのモニタ端子。「H」の時エンファシス・ディスク再生中。		
33	P5	I/O	入出力ポート。		
34	LRCKO	0	ディジタルフィルタ出力・LRクロック出力端子。		
35	DFLRO	О	ディジタルフィルタ出力・LRデータ出力端子。DFOFFコマンドによりDFを		
36	DACEC		OFF。 ディジタルフィルタ出力・ビットクロック出力端子。		
	DACKO	0			
37	CONT1	0	出力ポート。		

端子番号	端子名称	I/O	機能説明		
38	P0/DFCK	I/O	入出力ポート。アンチショックモード時は、DFのビットクロック入力端子。		
39	P1/DFIN	I/O	入出力ポート。アンチショックモード時は、DFのデータ入力端子。		
			入出力ポート。アンチショックモード時は、ディエンファシス・フィルタの		
40	P2	I/O	ON/OFF切換え入力端子。「H」でディエンファシス・フィルタON。		
41	P3/DFLR	I/O	入出力ポート。アンチショックモード時は、DFのLRクロック入力端子。		
42	LRSY	0	ROMXA用・LRクロック出力端子。		
43	CK2	0	ROMXA用・ビットクロック出力端子。CK2CONコマンドにより極性反転。		
			ROMXA用・補助データ出力端子。ROMXAコマンドにより補間されないデー		
44	ROMXA	0	タを出力。		
45	C2F	0	ROMXA用・C2フラグ出力端子。		
46	MUTEL	0	1bit DAC用・Lチャネルミュート出力端子。		
47	LVDD	_	1bit DAC用・Lチャネル用電源端子。		
48	LCHP	0	1bit DAC用・LチャネルP出力端子。		
49	LCHN	0	1bit DAC用・LチャネルN出力端子。		
50	LVSS	_	1bit DAC用・Lチャネル用接地端子。通常0V。		
51	XVSS	_	水晶発振用接地端子。通常0V。		
52	XOUT	0	16.9344MHz水晶振発振子の接続端子。		
53	XIN	I	4倍速再生は33.8688MHz水晶振発振子を接続。		
54	XVDD	_	水晶発振用電源端子。		
55	RVSS	_	1bit DAC用・Rチャネル用接地端子。通常0V。		
56	RCHN	0	1bit DAC用・RチャネルN出力端子。		
57	RCHP	0	1bit DAC用・RチャネルP出力端子。		
58	RVDD	_	1bit DAC用・Rチャネル用電源端子。		
59	MUTER	0	1bit DAC用・Rチャネルミュート出力端子。		
60	SBSY	0	サブコードブロックの同期信号出力端子。		
61	EFLG	0	C1、C2のエラー訂正モニタ端子。		
62	PW	0	サブコードP、Q、R、S、T、U、V、Wの出力端子。		
63	SFSY	o	サブコードのフレーム同期信号出力端子。サブコードがスタンバイレた時立		
05	0101	Ů	下がる。		
64	SBCK		サブコード読み出しクロック入力端子。シュミット入力。未使用時は接地す		
			ること。		
65	DOUT	0	ディジタルOUT出力端子。		
66	FSX	0	水晶発振から分周した7.35kHz同期信号出力端子。		
67	WRQ	0	サブコードQ出力スタンバイ出力端子。		
68	RWC	I	リード/ライト制御入力端子。		
69	SQOUT	0	サブコードQ出力端子。		
70	COIN	I	マイコンからコマンド入力端子。		
71	CQCK	I	コマンド入力取り込みクロック、またはSQOUTからのサブコード歌み出しク		
			ロック入力端子。シュミット入力。		
72	RES	I	チップリセット入力端子。電源投入時に一旦「L」にする。		
73	TESTF	0	テスト用出力端子。		

端子番号	端子名称	I/O	機能説明
74	CONT2	0	出力ポート。
75	16M	0	16.9344MHz出力端子。4倍速再生モード時は、33.8688MHz出力。
76	4.2M	0	4.2336MHz出力端子。
77	TEST5	I	テスト用入力端子。プルダウン抵抗内蔵。
78	CS	I	チップセレクト入力端子。プルダウン抵抗内蔵。
79	DEFI	I	ディフェクト検出信号入力端子。未使用時は接地すること。
80	VCOC	I	バリピッチ用 VCOの制御入力端子。未使用時は接地すること。

IC, LC865632A-5E67

Till → 40 14	141 フ た 41	7.00	₩ ← ← → 100		
端子番号	, 端子名称	I/O	機能説明		
1	IRQ	I	MPEGインタラプトリクエスト信号入力。		
2	I-WRQ	I	CD WRQ入力信号。		
3、4	CDGM、CDG-CS	I	未使用。		
5	O-WRC	0	CD リード/ライト制御信号出力。		
6	PAL NTSC	0	MPEG PAL/NTSC モード選択信号出力。(L=PAL)		
7、8	SLED+、SLED-	0	スレッド送り信号出力。		
9	CD-RST	0	CD リセット端子。		
10	MPFG-RST	0	MPEG リセット端子。		
11	X-BUSY	I/O	ホストCPUインターフェースビジー信号。		
12	NC	_	未使用。		
13	CE123	0	VCD/CDGモード制御信号出力。(H=VCD)		
14	VOE	0	ビデオ出力イネーブル信号出力。(H=VCD)		
15、16	CDG CE、CDG CLK	0			
17、18	CDG DATA、GINTI	0	+ At III		
19、20	GMUTE, GPAL	0	未使用。		
21, 22	SADJ, XWCDG	I			
23	VSS		GND _o		
24	VDD	_	電源端子。		
25	XAMUTE	0	アナログオーディオミュート信号出力。(L=MUTE)		
26~30	NC	_			
31, 32	PAL60, OSDCS	0	未使用。		
33~40	AD0-AD7	I/O	MPEGデータ入出力。		
41	CD-DATA	0	CDコマンドデータ出力。		
42	SUBQ-IN	I	サブコードQ信号入力。		
43	CD-CLK	0	CDクロック信号出力。		
44	STATUS	0	ホストCPUへのステータス信号出力。		
45	COMMAND	I	ホストCPUからのコマンドデータ入力。		
46	CLK	I	ホストCPUからのクロック信号入力。		
47	AS	0	MPEGアドレス/シリアルデータ出力。		
48	STB	0	MPEGストローブ信号出力。		
	TEST		未使用。		
49			リセット端子。		
50	RESET				
51、52	XT1、XT2		未使用。		
53	VSS	_	GND _o		
54	CF1	I	6MHz発振子入力端子。		
55	CF2	0			
56	VDD		電源端子。		
57	SWIL	I	CDピックアップ最内周検出信号入力。		
58	DRF-IN	I	"Detect RF" RFレベル検出信号入力。		
59	P/PA/N	I	PAL/PAL AUTO/NTSCモード選択信号入力。(H=PAL/PAL AUTO、L=NTSC)		
60~64	NC		未使用。		

IC, LC78011E

端子番号	端子名称	I/O	機能説明		
1~3	RYIN3~RYIN1	I	R/Yデータ入力。		
4	RYIN0	I	R/Yデータ入力。(LSB)		
5	DVSS	_	デジタル系GND。		
6	CLKI	I	(NTSC: 14.31818MHz) 4fscクロック入力。 (PAL: 17.734475MHz) (PAL-M: 14.3024459MHz)		
7	FSCIN	I	(NTSC: 3.579545MHz) サブキャリアクロック入力。(PAL: 4.4336187MHz) (PAL-M: 3.5756114MHz)		
8	DVDD	_	デジタル系電源。		
9	GUIN7	I	G/Uデータ入力。(MSB)		
10~15	GUIN6~GUIN1	I	G/Uデータ入力。		
16	GUIN0	I	G/Uデータ入力。(LSB)		
17	BVIN7	I	B/V/UVデータ入力。(MSB)		
18~23	BVIN6~BVIN1	I	B/V/UVデータ入力。		
24	BVIN0	I	B/V/UVデータ入力。(LSB)		
25	AVDD		アナログ系電源。		
26	CROUT	0	色/複合映像信号 (アナログ) 出力。(8bits-DAC出力)		
27	BIAS	0	リップル除去用コンデンサー接続。		
28	YOUT	0	輝度信号 (アナログ) 出力 (8bits-DAC出力)。		
29	AVSS	_	アナログ系GND。		
30	CCSEL	I	出力信号制御。(色信号出力: 0、複合映像信号出力: 1)		
31	NPSEL	I	NPSEL PMSEL 設定信号モード 0 0 NTSC 1 0 PAL		
				0 1 PAL-M	
32	PMSEL	I	1 1 ———		
33	CDGSEL	I	ビデオCD/CD-G入力モード制御端子。(V-CD=0、CD-G=1)		
34	TEST	I	テストモード入力。通常は "L" に固定すること。		
35	RESET	I	リセット信号入力。		
36	OSBIN	I	OSD (B) 信号入力端子。		
37	OSGIN	I	OSD (G) 信号入力端子。		
38	OSRIN	I	OSD (R) 信号入力端子。		
39	OSBLK	I	OSD切り替え信号 (OSD BLANK) 入力端子。		
40	BLANK	I	コンポジットBLANK (HBLANK/VBLANK) 信号入力。		
41	CSYNC	I	CSYNC同期信号入力。		
42	HSYNC	I	HSYNC同期信号入力。		

端子番号	端子名称	I/O			機 能 説 明	
42	VINCEI 1	_	YUVSEL1	YUVSEL2	入力モード	
43	YUVSEL1	1	0	0	RYIN=R、GUIN=G、BVIN=B	
			1	0	RYIN=Y、GUIN=U、BVIN=V	
4.4	THE PART OF THE PA	I	0	1	RYIN=Y、BVIN=UV	
44	YUVSEL2		1	1	1	
45	RYIN7	I	R/Yデータ入力	o (MSB)		
46~48	RYIN6~RYIN4	I	R/Yデータ入力			

IC, LC74201NE

端子番号	端子名称	I/O	機能説明			
1	BV0 (LSB)	110	ビデオ信号出力。(B信号、V信号) 出力: DVDD1 (3V) 系の3-state出力。			
2~4	BV1~BV3	I/O	C/A同サ山バ。(DIPな、VIEな) 山川: DVDDI(3V)ボッカ-State田川。			
5~7	BV4∼BV6	1/0	12 - 1 - E Bull Lange			
8	BV7 (MSB)	I/O	ビデオ信号出力。(B信号、V信号) 出力: DVDD2 (5V) 系の3-state出力。			
9	GU0 (LSB)	I/O	ビデオ信号出力。(G信号、U信号) 出力: DVDD1 (3V) 系の3-state出力。			
10~12	GU1∼GU3	1,0	C / 4 信 4 田 / 3。(G 信 4、 G 信 4) 田 / 3 · D · D · D · I (3 · V) 示 · State 田 / 3。			
13~15	GU4~GU6	I/O	ビデオ信号出力。(G信号、U信号) 出力: DVDD2 (5V) 系の3-state出力。			
16	GU7 (MSB)] #0	C / 4 旧 4 田 / 3。(G 日 4、 G 日 4) 田 / 3. D V D D 2 (5 V) 来 v / 3- State 田 / 3。			
17	DVDD1	_	システム電源。(3V系電源: 3.3±0.3V)			
18	FSCO	О	サブキャリア・クロック出力。(ピクセル・クロックの1/4分周出力) DVDD2 (5V) 系の3-state出力。			
19	РСКО	0	ピクセル・クロック出力。(NTSC-4fsc/PAL-4fsc/13.5MHz)			
			DVDD1 (3V) 系の3-state出力。			
20	DVSS1		システム電源。(GND接地)			
21	RY0 (LSB)	I/O	ビデオ信号出力。(R信号、Y信号) 出力: DVDD1 (3V) 系の3-state出力。			
22~24	RY1~RY3	ļ				
25~27	RY4~RY6	I/O	ビデオ信号出力。(R信号、Y信号) 出力: DVDD2 (5V) 系の3-state出力。			
28	RY7 (MSB)					
29	DVDD2	_	5V系入出力端子用電源。(5.0±0.5V)			
30	HSYNC	0	水平同期信号出力。DVDD2 (5V) 系の3-state出力。			
31	CSYNC	0	複合同期信号出力。DVDD2 (5V) 系の3-state出力。			
32	BLANK	o	ブランキング信号出力。(垂直、水平ブランキング期間信号)			
			DVDD2 (5V) 系の3-state出力。			
33	DVSS2	_	5V系入出力端子用電源。(GND接地)			
34	NC		未接続端子。			
35	VOE	I	ビデオ出力イネーブル信号入力。"H":出力イネーブル			
36	NC		未接続端子。			
37	DVSS1	_	システム電源。(GND接地)			
38	RESET	I	システム・リセット入力。			
39	DVDD1	_	システム電源。(3V系電源: 3.3±0.3V)			
40	NC		未接続端子。			
41	IRQ	0	割り込み要求信号出力。(N-chオープン・ドレイン出力)			
42	NC	-	未接続端子。			
43	AS/DS (CE)	I	パラレル時: アドレス/データ入力切り換え。("L"=アドレス) シリアル時: シリアル転送イネーブル信号入力。("H"=イネーブル)			
44	STB (CL)	I	パラレル時: アドレス/データ入出力・ストローブ信号入力。 シリアル時: シリアル転送用クロック信号入力。			
45	AD0 (DO)	I/O	パラレル時: アドレス/データ入出力ポートPO。(LSB) シリアル時: シリアル・データ出力。(LSBファースト入力)			
46	AD1 (DI)	I/O	パラレル時: アドレス/データ入出力ポートP1。 シリアル時: シリアル・データ入力。(LSBファースト出力)			

端子番号	端子名称	I/O	機能説明			
			パラレル・インターフェース時のアドレス/データ入出力ポート。			
47~51	AD2~AD6	I/O	インターフェースのモードは、システム・リセット解除時に設定。			
47 -31		1,0	AD3、AD4、AD5の3ビットの設定により、モードを確定。			
		ļ	① シリアル・インターフェース: 「AD5:AD4:AD3=1:*:*」 *=Don't care			
			② パラレル・インターフェース: 「AD5:AD4:AD3=0:1:0」			
52	AD7 (MSB)	I/O	AD7: パラレル時のアドレス/データ入出力ポートP7。(MSB)			
			AD0~AD7の出力は、N-chオープン・ドレイン出力形式。			
53	NC		未接続端子。			
54	DVSS1	_	システム電源。(GND接地)			
55	XPALIN	I				
56	XPALOUT	0	PAL用4fsc水晶発振子接続端子。(4fsc=17.734476MHz)			
57	NC	_	未接続端子。			
58	XNTIN	I				
59	XNTOUT	0	NTSC用4fsc水晶発振子接続端子。(4fsc=14.31818MHz)			
60	DVDD1		システム電源。(3V系電源: 3.3±0.3V)			
			54.0MHz クロック入力 (CLKIN: 62pin) と内部VCO発振クロックの切り換え制			
61	CLKSEL	I	御入力。 "H": CLKIN端子入力モード			
	62 CLKIN		54.0MHz クロック入力端子 (内部バイアス付き入力) 未使用時は、端子処理			
62		I	(DVDD1または、DVSS1) して下さい。			
63	VCOR	_	VCO発振回路の調整用抵抗接続端子。			
64	NC	_	未接続端子。			
65	AVSS	_	VCO、PLL部用電源。(GND接地)			
66	PLLFIL	l –	PLLループのフィルター接続端子。			
67	AVDD	-	VCO、PLL部用電源。(3V系電源: 3.3±0.3V)			
68	CDCK	I	CD-DSPクロック入力。(16.9344MHz/2.8224MHz/2.1168MHz)			
69	DVSS1	_	システム電源。(GND接地)			
70	CDEMPH	I	エンファシス入力。			
71	CDC2P	I	C2エラー・フラグ入力。			
72	CDSD	I	シリアル・データ入力。			
73	CDBCK	I	シリアル・データ・ビットクロック入力。			
74	CDLŖCK	I	Left/Rightクロック入力。			
75	DVDD1	_	システム電源。(3V系電源: 3.3±0.3V)			
76	DVSS1	_	システム電源。(GND接地)			
77	AULRCK	О	オーディオ・データ Left/Rightクロック出力。(N-chオープン・ドレイン出力)			
78	AUEMPH	0	オーディオ・エンファシス・フラグ出力。(N-chオープン・ドレイン出力)			
79	AUDOUT	0	オーディオ・データ シリアル出力。(N-chオープン・ドレイン出力)			
80	AUBCO	0	オーディオ・データ ビット・クロック出力。(N-chオープン・ドレイン出力)			
81	DVDD1	_	システム電源。(3V系電源: 3.3±0.3V)			
82~86	NC	-	未接続端子。			
87	DD15 (MSB)	1/0	DRAMA OF BILL WH. DVDD2 (SIN FOR THE WHAT			
88~96	DD14~DD6	I/O	DRAMへのデータ入出力。出力: DVDD2 (5V) 系の3-state出力。			

端子番号	端子名称	I/O	機能説明
97、98	NC	_	未接続端子。
99~103	DD5~DD1	I/O	DRAMへのデータ入出力。出力: DVDD2 (5V) 系の3-state出力。
104	DD0 (LSB)	1,0	DIAMI (V) / / / / / / / / / / / / / / / / / / /
105	DVSS1	_	システム電源。(GND接地)
106	RAS1	0	拡張1M-DRAMへのRaw address strobe信号出力。DVDD2 (5V) 系の3-state出力。
107	RAS0	0	4M-DRAMへのRaw address strobe信号出力。DVDD2 (5V) 系の3-state出力。
108	NC	_	未接続端子。
109	WE	0	DRAMへのWrite enable信号出力。DVDD2 (5V) 系の3-state出力。
110	NC	_	未接続端子。
111	CAS	0	DRAMへのColumn address strobe信号出力。DVDD2 (5V) 系の3-state出力。
112	DVSS2	_	5V系入出力端子用電源。(GND接地)
113	ŌĒ	0	DRAMへのOutput enable信号出力。DVDD2 (5V) 系の3-state出力。
114	DVDD2	_	5V系入出力端子用電源。(5.0±0.5V)
115	AA8 (MSB)		
116~122	AA7~AA1	0	DRAMへのアドレス出力。出力: DVDD2 (5V) 系の3-state出力。
123	AA0 (LSB)		
124	DVDD1	_	システム電源。(3V系電源: 3.3±0.3V)
125	CLKO	0	テスト時のVCO、PLL部クロック出力。
126	NC	_	未接続端子。
127	TEST	I	テストモード動作制御端子。(通常: "L"に固定)
128	NC	_	未接続端子。

IC, LA9241M

Pin No.	Pin Name	I/O	Description			
1	FIN2	I	Pin to which external pickup photo diode is connected. RF signal is created by adding with the FIN1 pin signal. FE signal is created by subtracting from the FIN1 pin signal.			
	FYA11	7	Pin to which external pickup photo diode is connected.			
2	FIN1	I	Pin to which external pickup photo diode is connected. TE signal is created by			
3	E	I				
			subtracting from the F pin signal.			
4	F	I	Pin to which external pickup photo diode is connected.			
5	ТВ	I	DC component of the TE signal is input.			
6	TE-	I	Pin to which external resistor setting the TE signal gain is connected between the TE pin			
7	TE	0	TE signal output pin.			
8	TESI	I	TES "Track Error Sense" comparator input pin. TE signal is passed through a band- pass filter then input.			
9	SCI	I	Shock detection signal input pin.			
10	TH	I	Tracking gain time constant setting pin.			
11	TA	0	TA amplifier output pin.			
			Pin to which external tracking phase compensation constants are connected between			
12	TD-	I	the TD and VR pins.			
13	TD	I	Tracking phase compensation setting pin.			
14	JP	I	Tracking jump signal (kick pulse) amplitude setting pin.			
15	ТО	0	Tracking control signal output pin.			
16	FD	0	Focusing control signal output pin.			
10	10	<u> </u>	Pin to which external focusing phase compensation constants are connected between			
17	17 FD-	I	the FD and FA pins.			
			Pin to which external focusing phase compensation constants are connected between			
18	FA	I	the FD- and FA- pins.			
			Pin to which external focusing phase compensation constants are connected between			
19	FA-	I	the FA and FE pins.			
20	FE	0	FE signal output pin.			
	FE-	I	Pin to which external FE signal gain setting resistor is connected between the FE pin.			
21		1	Analog signal GND.			
22	AGND	 -	No connection.			
23	NC	 -	Single ended output of the CV+ and CV- pin input signal.			
24	SP	0	Pin to which external spindle gain setting resistor in 12 cm mode is connected.			
25	SPG	I	Pin to which external spindle phase compensation constants are connected together			
26	SP-	I				
		 	with SPD pin.			
27	SPD	0	Spindle control signal output pin.			
28	SLEQ	I	Pin to which external sled phase compensation constants are connected.			
29	SLD	0	Sled control signal output pin.			
30, 31	SL-, SL+	I	Sled advance signal input pin from microprocessor.			
32, 33	JP-, JP+ ·-	I	Tracking jump signal input pin from DSP.			
34	TGL	I	Tracking gain control signal input from DSP. Low gain when TGL = H.			
35	TOFF	I	Tracking off control signal input pin from DSP. Off when TOFF = H.			

149

Pin No.	Pin Name	I/O	Description	
36	TES	0	Pin from which TES signal is output to DSP.	
27	37 HFL	О	"High Frequency Level" is used to judge whether the main beam position is on top of	
31	37 HFL		bit or on top of mirror.	
38	SLOF	I	Sled servo off control input pin.	
39, 40	CV-, CV+	· I	CLV error signal input pin from DSP.	
41	RFSM	0	RF output pin.	
42	RFS-	I	RF gain setting and EFM signal 3T compensation constant setting pin together with RFSM pin.	
43	SEC	0	"Slice Level Control" is the output pin which controls the RF signal data slice level by DSP.	
44	SLI	I	Input pin which control the data slice level by the DSP.	
45	DGND	_	Digital system GND.	
46	FSC	0	Output pin to which external focus search smoothing capacitor is connected.	
47	TBC	I	"Tracking Balance Control" EF balance variable range setting pin.	
48	NC	_	No connection.	
49	DEF	0	Disc defect detector output pin.	
50	CLK	I	Reference clock input pin. 4.23 MHz of the DSP is input.	
51	CL	I	Microprocessor command clock input pin.	
52	DAT	I	Microprocessor command data input pin.	
53	CE	I	Microprocessor command chip enable input pin.	
54	DRF	0	"Detect RF" RF level detector output.	
55	FSS	I	"Focus Search Select" focus search mode (± search/+ search) select pin.	
56	VCC2	_	Servo system and digital system Vcc pin.	
57	REFI	_	Pin to which external bypass capacitor for reference voltage is connected.	
58	VR	0	Reference voltage output pin.	
59	LF2	I	Disc defect detector time constant setting pin.	
60	PH1	I	Pin to which external capacitor for RF signal peak holding is connected.	
61	BH1	I	Pin to which external capacitor for RF signal bottom holding is connected.	
62	LDD	0	APC circuit output pin.	
63	LDS	I	APC circuit input pin.	
64	VCC1		RF system Vcc pin.	

150

IC, LC78630E

Pin No.	Pin Name	I/O	Description	
1	VPDO	0	Vari-pitch PLL charge pump output pin. This pin must be open when not used.	
2	PDO2		Bit clock playback PLL charge pump output pin during 2 times and 4 times speed.	
	1502	0	This pin must be open when not used.	
3	PDO1	0	Bit clock playback PLL charge pump output pin during normal speed.	
4	AVSS		Analog system GND. Normally 0V.	
5	FR	I	An external resistor to set built-in VCO frequency range is connected to this pin.	
6	AVDD	_	Analog system GND.	
7	ISET	I	An external resistor set PD01 and PD02 output current is connected to this pin.	
8	TAI	I	Test input pin with built-in pull-down resistor.	
9	EFMO	0	EFM signal output pin.	
10	VSS		Digital system GND. Normally 0V.	
11	EFMI	I	EFM signal input pin.	
12	TEST1	I	Test input pin with built-in pull-down resistor.	
13	CLV+	0	Spindle servo control output pin. Acceleration when CLV+ is "H".	
14	CLV-	0	Deceleration when CLV- is "H".	
4.5	***		Rough servo/phase control automatic selection monitoring output pin. Rough servo at	
15	V/P	0	"H". Phase control mode at "L".	
16, 17	TEST2, TEST3	I	Test input pin with built-in pull-down resistor.	
18	P4	I/O	Input/output port.	
19	HFL	I	Tracking detection signal input pin. Schmitt input.	
20	TES	I	Tracking error signal input pin. Schmitt input.	
01			EFM data playback bit clock monitoring pin. 4.3218 MHz when phase is locked	
21	PCK	0	during normal speed playback.	
22	ESEO		Sync signal detection output pin. When the sync signal detected from the EFM signal	
22	FSEQ	0	agrees with the internally generated sync signal, "H" output.	
23	TOFF	0	Tracking OFF output pin.	
24	TGL	0	Tracking gain selector output pin. Gain is increased at "L".	
25	THLD	0	Tracking hold output pin.	
26	TEST4	I	Test input pin with built-in pull-down resistor.	
27	VDD	_	Digital system GND.	
			Tracking jump output pin. JP+ "H" occurs at acceleration during jump toward outside	
28, 29	JP+, JP-	0	or decelerator toward inside. JP- "H" occurs at acceleration during jump toward inside	
			or deceleration toward outside.	
30, 31	SLD+, SLD-	0	Sled output pin. Four different level can be set using commands.	
32	ЕМРН	0	Emphasis monitoring output. "H" indicates that emphasis disc is being played back.	
33	P5	I/O	Input/output.	
34	LRCKO	О	Digital filter output. LR clock output pin.	
25	DFLRO		Digital filter output. LR data output pin. DF is turned OFF with the DFOFF	
35	DFLKU	0	command.	
36	DACKO	0	Digital filter output. Bit clock output pin.	
37	CONT1	0	Output port.	

Pin No.	Pin Name	I/O	Description	
38	P0/DFCK	Ι/O	Input/output port. The DF bit clock input pin during the anti-shock mode.	
39	P1/DFIN	I/O	Input/output port. The DF data input pin during the anti-shock mode.	
40	P2	νo	Input/output port. Deemphasis filter ON/OFF selection input pin during the anti-shock mode. Deemphasis filter ON at "H".	
41	P3/DFLR	I/O	Input/output port. The DF LR clock input pin during the anti-shock mode.	
42	LRSY	0	For ROMXA • LR clock output pin.	
43	CK2	0	For ROMXA • Bit clock output pin. Polarity inversion by the CK2CON command.	
44	ROMXA	0	For ROMXA • Interpolation data output pin. The un-interpolated data is output with the ROMXA command.	
45	C2F	0	For ROMXA • C2 flat output pin.	
46	MUTEL	0	For 1-bit DAC • L-channel mute output pin.	
47	LVDD	_	For 1-bit DAC • L-channel power supply.	
48	LCHP	0	For 1-bit DAC • L-channel P output pin.	
49	LCHN	0	For 1-bit DAC • L-channel N output pin.	
50	LVSS	_	For 1-bit DAC • L-channel GND. Normally 0 V.	
51	xvss	 	Crystal oscillator GND. Normally 0 V.	
52	XOUT	0	An external 16.9344 MHz crystal oscillator is connected to this pin.	
53	XIN	I	33.8688 MHz crystal oscillator is connected during 4 time speed playback.	
54	XVDD	 	Crystal oscillator GND.	
55	RVSS		For 1-bit DAC • R-channel GND. Normally 0 V.	
56	RCHN	0	For 1-bit DAC • R-channel N output pin.	
57	RCHP	0	For 1-bit DAC • R-channel P output pin.	
58	RVDD		For 1-bit DAC • R-channel power supply.	
59	MUTER	0	For 1-bit DAC • R-channel mute output pin.	
60	SBSY	0	Subcode block sync signal output pin.	
61	EFLG	0	C1 and C2 error correction monitoring pin.	
62	PW	0	ubcode P, Q, R, S, T, U, V and W output pin.	
63	SFSY	0	Subcode frame sync signal output pin. The level falls down when the subcode is in standby.	
64	SBCK	I	Subcode read clock input pin. Schmitt input. This pin must be connected GND when not used.	
65	DOUT	0	Digital output pin.	
66	FSX	0	7.35 kHz sync signal divided from the crystal oscillator is output to this pin.	
67	WRQ	0	Subcode Q output standby output pin.	
68	RWC	I	Read/write control input pin.	
69	SQOUT	0	Subcode Q output pin.	
70	COIN	I	Microprocessor command input pin.	
71	CQCK	I	Command input read clock or subcode read clock input from SQOUT. Schmitt input.	
72	RES	I	Chip reset input pin. This pin goes to "L" once when the main power is turned on.	
73	TESTF	0	Test output pin.	
74	CONT2	0	Output port.	

Pin No.	Pin Name	I/O	Description	
75	16M	0	16.9344 MHz crystal output pin. 33.8688 MHz is output during 4 times speed playback.	
76	4.2M	0	4.2336 MHz output pin.	
77	TEST5	I	Test input pin with built-in pull-down resistor.	
78	CS	I	Chip select input pin with built-in pull-down resistor.	
79	DEFI	I	Defect detection signal input pin. This pin must be connected GND when not used.	
80	VCOC	I	Vari-pitch VCO control input pin. This pin must be connected GND when not used.	

153

IC, LC865632A-5E67

Pin No.	Pin Name	ľO	Description	
1	IRQ	I	MPEG interrupt request input signal.	
2	I-WRQ	I	CD WRQ input signal.	
3, 4	CDGM, CDG-CS	I	Not used.	
5	O-WRC	0	CD read/write control signal output.	
6	PAL NTSC	.0	MPEG PAL/NTSC mode selection signal output. (L = PAL).	
7, 8	SLED+, SLED-	0	Sled advance signal output.	
9	CD-RST	0	CD reset terminal.	
10	MPFG-RST	0	MPEG reset terminal.	
11	X-BUSY	I/O	Host CPU interface busy signal.	
12	NC	_	Not used.	
13	CE123	0	VCD/CDG mode control signal output. (H = VCD).	
14	VOE	0	Video output enable signal output. (H = VCD).	
15, 16	CDG CE, CDG CLK	0		
17, 18	CDG DATA, GINTI	0		
19, 20	GMUTE, GPAL	0	Not used.	
21, 22	SADJ, XWCDG	I		
23	VSS	_	GND.	
24	VDD	_	Power supply terminal.	
25	XAMUTE	0	Analog audio mute signal output. (L = MUTE).	
26-30	NC	_		
31, 32	PAL60, OSDCS	0	Not used.	
33-40	AD0-AD7	ľO	MPEG data input/output.	
41	CD-DATA	0	CD command data output.	
42	SUBQ-IN	I	Subcode Q signal input.	
43	CD-CLK	0	CD clock signal output.	
44	STATUS	0	Status signal output to host CPU.	
45	COMMAND	I	Command data input from host CPU.	
46	CLK	I	Clock signal input from host CPU.	
47	AS	0	MPEG address/serial data output.	
48	STB	0	MPEG strobe signal output.	
49	TEST	_	Not used.	
50	RESET	_	Reset terminal.	
51, 52	XT1, XT2	_	Not used.	
53	VSS		GND.	
54	CF1	I	6 MHz oscillator input terminal.	
55	CF2	0	6 MHz oscillator output terminal.	
56	VDD	_	Power supply terminal.	
57	SWIL	I	CD pickup inner circumference limit signal input.	
58	DRF-IN	I	"Detect RF" RF level detection signal input.	
59	P/PA/N	I	PAL/PAL or AUTO/NTSC mode selection signal input. (H = PAL/PAL, L = AUTO NTSC).	
60-64	NC		Not used.	

154

IC, LC78011E

Pin No.	Pin Name	I/O			Description			
1-3	RYIN3-RYIN1	I	R/Y data input.	R/Y data input.				
4	RYIN0	I	R/Y data input. (LSB).					
5	DVSS	_	Digital system grou	und.				
					(NTSC: 14.31818 MHz)			
6	CLKI	I	4 fsc clock input.		(PAL: 17.734475 MHz)			
					(PAL-M: 14.3024459 MHz)).		
					(NTSC: 3.589545 MHz)			
7	FSCIN	I	Subcarrier clock in	put.	(PAL: 4.4336187 MHz)			
					(PAL-M: 3.5756114 MHz).			
8	DVDD	_	Digital system grou	und.				
9	GUIN7	I	G/U data input. (M	MSB).				
10-15	GUIN6-GUIN1	I	G/U data input.					
16	GUIN0	I	G/U data input. (L	SB).				
17	BVIN7	I	B/V/UV data input	. (MSB).				
18-23	BVIN6-BVIN1	I	B/V/UV data input					
24	BVIN0	I	B/V/UV data input	. (LSB).				
25	AVDD		Analog system grou	und.				
26	CROUT	0		· · · · · · · · · · · · · · · · · · ·	(analog) output. (8-bit DAC	output).		
27	BIAS	0		Terminal where ripple removal capacitor is connected.				
28	YOUT	0			out. (8-bit DAC output).			
29	AVSS	_	Analog system grou	und.				
30	CCSEL	I	Output signal contro	ol (Chroma :	signal output: 0, Composite vi	deo signal output: 1).		
			1.			7		
31	NPSEL	I		PMSEL	Set signal mode	_		
			0	0	NTSC	4		
					1	0	PAL	_
32	PMSEL	PMSEL	I	0	1	PAL-M	4	
			1	1		_		
33	CDGSEL	I	Video CD/CD-G in	put mode co	ntrol terminal. (V-CD = 0, CI	D-G=1).		
34	TEST	I	Test mode input. To	o be fixed to	L normally.			
35	RESET	I	Reset signal input.					
36	OSBIN	I	OSD (B) signal input terminal.					
37	OSGIN	I	OSD (G) signal input terminal.					
38	OSRIN	I	OSD (R) signal input terminal.					
39	OSBLK	I	OSD selector signal (OSD BLANK) input terminal.					
40	BLANK	I	Composite blanking (H-BLANK/V-BLANK) signal input.					
41	CSYNC	I	CSYNC sync signal	input.		· · · · · · · · · · · · · · · · · · ·		
42	HSYNC	I	HSYNC sync signal	l input.				

Pin No.	Pin Name	ľO	Description			
43	YUVSEL1	I	YUVSEL1	YUVSEL2	Input mode	
43	TUVSELI		0	0	RYIN=R, GUIN=G, BVIN=B	
			1	0	RYIN=Y, GUIN=U, BVIN=V	
44	YUVSEL2	I	0	1	RYIN=Y, BVIN=UV	
44	TUVSEL2		1	1		
45	RYIN7	I	R/Y data input. (MSB).			
46-48	RYIN6-RYIN4	I	R/Y data input.			

IC, LC74201NE

`	
,	
Video signal output (R signal, Y signal).	
Output: 3-state output of DVDD2 (5 V) system.	
System power supply for 5V input/output terminal. $(5.0 \pm 0.5 \text{ V})$.	
em.	
n.	
Blanking signal output. (Vertical and horizontal blanking period signal). 3-state	
ND).	
dress at □).	
put. During	
har nirms	
ւխստ Ի Պ Ե ՄԱ	
During Erial	
١.	

Pin No.	Pin Name	I/O	Description	
			Address/data input/output port during parallel interface mode.	
47-51	AD2-AD6	IVO	The interface mode is set when releasing the system reset.	
	1.22.12.0		Mode is set by the 3-bit setup of AD3, AD4 and AD5.	
			① Serial interface: AD5: AD4: AD3 = 1: *: *. * = Don't care.	
			(2) Parallel interface: AD5: AD4: AD3 = 0: 1: 0.	
52	AD7 (MSB)	1/0	AD7: Address/data input/output port P7 during parallel mode. (MSB).	
			AD0 to AD7 output have the N-ch open drain output circuit.	
53	NC	 	Not connected terminal.	
54	DVSS1	1_	System power supply. (Connected to ground).	
55	XPALIN	I		
56	XPALOUT	0	PAL 4fsc crystal oscillator connection terminal. (4fsc = 17.734475 MHz)	
57	NC		Not connected terminal.	
58	XNTIN	I		
59	XNTOUT	0	NTSC 4fsc crystal oscillator connection terminal. (4fsc = 14.31318 MHz)	
60	DVDD1	+-	System power supply. (3 V system power supply: 3.3 ±0.5 V).	
	DVDDI	I	Input to control selection between 54.0 MHz clock input (CLKIN: pin-62) and	
61	CLKSEL	1	internal VCO oscillator clock. (CLKIN input mode at H).	
		 	54.0 MHz clock input (equipped with internal bias) Perform the terminal processing	
62	2 CLKIN		(DVDD1 or DVSST) when not used.	
63	VCOR	 	Terminal where external resistor for VCO oscillator circuit adjustment is connected.	
64	NC	+ =	Not connected terminal.	
65	AVSS	+=		
66	PLLFIL	+ =	System power supply for VCO and PLL block. (Connected to ground).	
67	AVDD	+ = -	Terminal where external PLL loop filter is connected.	
		+	System power supply for VCO and PLL block. (3 V system power supply: 3.3 ±0.5 V).	
68	CDCK	I	CD-DSP clock input (16.9344 MHz/2.8224 MHz/ 2.1168 MHz).	
69	DVSS1	ļ -	System power supply. (Connected to ground).	
70	CDEMPH	I	Emphasis input.	
71	CDC2P	I	C2 error flag input.	
72	CDSD	I	Serial data input.	
73	CDBCK	I	Serial data bit clock input.	
74	CDLRCK	I	Left/Right clock input.	
75	DVDD1		System power supply. (3 V system power supply: 3.3 ±0.5 V).	
76	DVSS1		System power supply. (Connected to ground).	
77	AULRCK	0	Audio data Left/Right clock output. (N-ch open drain output).	
78	AUEMPH	0	Audio emphasis flat output. (N-ch open drain output).	
79	AUDOUT	0	Audio data serial output. (N-ch open drain output).	
80	AUBCO	0	Audio data bit clock output. (N-ch open drain output).	
81	DVDD1		System power supply. (3 V system power supply: 3.3 ±0.5 V).	
82-86	NC		Not connected terminal.	
87	DD15 (MSB)	I/O	Data input/output to DRAM. 3-state output of DVDD2 (5 V) system.	
88-96	DD14-DD6		2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 -	

Pin No.	Pin Name	I/O	Description	
97, 98	NC	_	Not connected terminal.	
99-103	DD5-DD1	I/O	Date imput/sustant to DDAM Output 2 state output of the DVDD2 (5V) quotem	
104	DD0 (LSB)	ן טע	Data input/output to DRAM. Output: 3-state output of the DVDD2 (5V) system	
105	DVSS1	_	System power supply. (Connected to GND).	
106	RAS1	0	Raw address strobe signal output to expansion 1M-DRAM. 3-state output of the DVDD2 (5V) system.	
107	RAS0	0	Raw address strobe signal output to 4M-DRAM. 3-state output of the DVDD2 (5V) system.	
108	NC	-	Not connected terminal.	
109	WE	0	Write enable signal output to DRAM. 3-state output of the DVDD2 (5V) system.	
110	NC	_	Not connected terminal.	
111	CAS	О	Column address strobe signal output to DRAM. 3-state output of the DVDD2 (5V) system.	
112	DVSS2	_	System power supply for 5V input/output terminal. (Connection to GND).	
113	ŌĒ	0	Output enable signal output to DRAM. 3-state output of the DVDD2 (5V) system.	
114	DVDD2	_	System power supply for 5V input/output terminal. $(5.0 \pm 0.5 \text{ V})$.	
115	AA8 (MSB)			
116-122	AA7-AA1	0	Address output to DRAM. Output: 3-state output of DVDD2 (5 V) system.	
123	AA0 (LSB)]		
124	DVDD1	_	System power supply: $(3 \text{ V system power supply: } 3.3 \pm 0.5 \text{ V}).$	
125	CLKO	0	VCO, PLL block clock output during test.	
126	NC	_	Not connected terminal.	
127	TEST	I	Test mode operation control terminal. (Normally fixed to L).	
128	NC	_	Not connected terminal.	

TEST MODE

- 1. CD テストモードの起動方法 ファンクション CD の釦を押しながら、AC プラグを挿入する。
 - 上記により FL表示管が全て点灯し、テストモードが起動します。
- 2. CDテストモードの解除方法 下記のいずれか1つの操作で解除します。
- ファンクション釦を押す ・ パワーSW 釦を押す。(CD ファンクション釦以外) ・ AC プラグを抜く。

3. CD テストモードの機能説明


テストモード起動後、各操作釦を押す事により次のNo1~No5の各モード機能が使用できます。

Mode/No.	操作	FL 表示	動作	内容
スタートモード	起動	全灯表示	・TEST MODE 起動	・FL 表示確認 (全灯)
No.1			・CD ブロック電源 ON	
サーチモード No.2	■釦	[[/	 LASER DIODE 常時発光 連続フォーカスサーチ (PU レンズがフルスイングを繰り返す) * 10 分以上の連続フォーカスは避けて下さい。 	・APC 回路確認 ・レーザー電流測定 (レーザー電流コントロール、トランジスタのエミッター GND 間の抵抗の両端。) FOCUS SERVO ・フォーカスラッチ波形確認 ・フォーカスエラー波形確認 (サーチモードでは FOK/FZC は監視せず。)
プレイモード No.3	◀▶釦		・通常再生・TOC READ 出来ない場合フォーカスサーチを続行*注1	FOCUS SERVO/TRACKING SERVO CLV SERVO/SLED SERVO DRF 確認
トラバース モード No.4	■■釦	EEL	・DISC 通常再生中 1 回押す トラッキングサーボ OFF 2 回押す トラッキングサーボ ON *注2	TRACKING SERVO ON/OFF トラッキングバランス (トラバース)確認
スレッドモード No.5	₩釦	全灯表示	・ピックアップ外周へ移動・ピックアップ内周へ移動*注3(再生中は通常動作致します)	SLED SERVO SLED メカ動作確認

- *注1 フォーカスサーチを連続して10分以上動作し続けるとドライバーICが発熱し保護回路が働く為、トラッキングサーボがかからない状態となる場合が有ります。この様な場合には、電源を切り約10分間放熱後、再スタートして下さい。
- *注2「III」状態で、「IM」または「IM」 釦を押さない事。「III」状態解除後、再生出来なくなります。「III」状態で、「IM」または「IM」 釦を押した場合には「■」 釦を押しスタートモード(No.1)に戻して下さい。
- *注3 ピックアップが最内周、最外周の位置でも「MJ」または「MJ」釦を押している間はスレッドモータが回転する為、ギヤ破損に注意して下さい。

4. 操作概要

下図の様にスタートモードから、矢印方向の流れで各モードの操作が行えます。モード変更は、下図の流れに従い行って下さい。

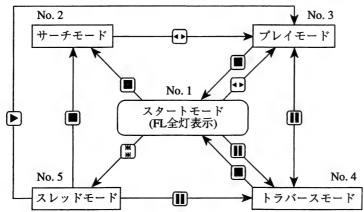


尚、DISC DIRECT PLAY 釦を押した場合には、上図の PLAY 釦を押した時と同様の動作となります。またプレイモード/トラバースモード時に open/close 釦により、トレイを open させた場合には、スタートモードに戻ります。

- How to Activate CD Test Mode
 Insert the AC plug while pressing the function CD button.
 All FL display tubes will light up, and the test mode will be activated.
- How to Cancel CD Test Mode
 Either one of the following operations will cancel the CD test mode.
 - Press the function button.
 Press the power switch button.
 (except CD function button)
 Disconnect the AC plug
- CD Test Mode FunctionsWhen test mode is activated, the following mode functions from No.1 to No.5 can be used by pressing the operation keys.

Mode/No.	Operation	FL display	Operation	Contents
Start mode	Activation	All lamps light	Test mode is activated.	• FL display check (All displays light.)
No.1			CD block power is ON.	
Search mode	■ key	[[]	Laser diode turns always ON. Continual focus search (The pickup lens repeats the full-swing up-down motion.) Avoid continual searches that last for more than 10 minutes.	APC circuit check Laser current measurement (Laser current control. Across a resistor connected between emitter and GND.) FOCUS SERVO Check focus search waveform Check focus error waveform
No.2			* NOTE 1	(FOK/FZC are not monitored in the search mode)
Play mode	◆ ▶ key	<i>[[]]</i>	Normal playback Focus search is continued if TOC	FOCUS SERVO/TRACKING SERVO CLV SERVO/SLED SERVO
No.3		<u> </u>	cannot be read. * NOTE 1	Check DRF
Traverse mode	ll key		During normal disc playback	TRACKING SERVO ON/OFF
			Press once; tracking servo OFF Press twice; tracking servo ON	Tracking balance (traverse) check
No.4			* NOTE 2	
Sled mode	₩ key	All lamps light	Pickup moves to the outermost track	SLED SERVO
	₩		• Pickup moves to the innermost track * NOTE 3	Check SLED mechanism operation
			(During playback, machine operates	
No.5			normally.)	

- * NOTE 1: There are cases when the tracking servo cannot be locked owing to the protection circuit being operated when heat builds up in the driver IC if the focus search is operated continually for more than 10 minutes. In these cases the power supply should be switched off for 10 minutes until heat has been reduced and then re-started.
- * NOTE 2: Do not press the M or M keys when the machine is in the 11 status is active. If they are pressed, playback will notbe possible after the 11 status has been canceled. If the M or M keys are pressed in the 11 status, press the 12 key and return to the start mode (No.1).
- * NOTE 3: When pressing the M or M keys, take care to avoid damage to the gears. Because the sled motor is activated when the M or M keys are pressed, even when the pick-up is at the outermost or innermost track.
- 4. Operation Outline

The operation of each mode is carried out in the direction of the arrows from the start mode as indicated in the following llustration.

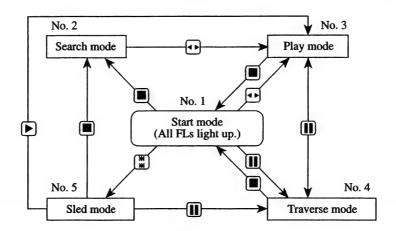

If the DISC DIRECT PLAY button is pressed, the machine performs the same operation as the PLAY button is pressed at hown. If the tray is opened by pressing OPEN/CLOSE button during Play mode or Traverse mode, the machine returns to the Startmode.

USE MODEL LIST

CX-NAVF77	CX-ZR490
CX-NAVF9	CX-ZR500
CX-NAVF99	CX-ZR525
CX-NF15	CX-ZR600
CX-NF9	CX-ZR700
CX-NF98	CX-ZR710
CX-NF99	CX-ZR800
CX-SZ9500	CX-ZVR660
CX-SZR400	CX-ZVR700
CX-SZR800	CX-ZVR950
CX-ZKR800	DX-K9900M
CX-ZKR900	DX-Z9450M
CX-ZR300	GE-SZ9500
CX-ZR325	GE-Z9500
CX-ZR330	XC-K5M
CX-ZR400	

REFERENCE NAME LIST

ELECTRICAL SECTION			
DESCRIPTION	REFERENCE NAME		
ANT	ANTENNAS		
C-	CHIP		
C-CAP	CAP, CHIP		
C-CAP TN	CAP, CHIP TANTALUM		
C-COIL	COIL, CHIP		
C-DI	DIODE, CHIP		
C-DIODE	DIODE, CHIP		
C-FET	FET, CHIP		
C-FOTR	FILTER, CHIP		
C-JACK	JACK, CHIP		
C-LED	LED, CHIP		
C-RES	RES, CHIP		
C-SFR	SFR, CHIP		
C-SLIDE SW	SLIDE SWITCH, CHIP		
C-SW	SWITCH, CHIP		
C-TR	TRANSISTOR, CHIP		
C-VR	VOLUME, CHIP		
C-ZENER	ZENER, CHIP		
CAP, CER	CAP, CERA-SOL		
CAP, E	CAP, ELECT		
CAP, M/F CAP, TC CAP, TC-U CAP, TN CERA FIL	CAP, FILM CAP, CERA-SOL CAP, CERA-SOL SS CAP, TANTALUM FILTER, CERAMIC		
CF	FILTER, CERAMIC		
DL	DELAY LINE		
E/CAP	CAP, ELECT		
FILT	FILTER		
FLTR	FILTER		
FUSE RES	RES, FUSE		
MOT	MOTOR		
P-DIODE	PHOTO DIODE		
P-SNSR	PHOTO SENSER		
P-TR	PHOTO TRANSISTOR		
POLY VARI	VARIABLE CAPACITOR		
PPCAP	CAP, PP		
PT	POWER TRANSFORMER		
PTR, RES	PTR, MELF		
RC	REMOTE CONTROLLER		
RES NF	RES, NON-FLAMMABLE		
RESO	RESONATOR		
SHLD	SHIELD		
SOL	SOLENOID		
SPKR	SPEAKER		
SW, LVR	SWITCH, LEVER		
SW, RTRY	SWITCH, ROTARY		
SW, SL	SWITCH, SLIDE		
TC CAP	CAP, CERA-SOL		
THMS	THERMISTOR		
TR TRIMMER TUN-CAP VIB, CER VIB, XTAL	TRANSISTOR CAP, TRIMMER VARIABLE CAPACITOR RESONATOR, CERAMIC RESONATOR, CRYSTAL		
VR	VOLUME		
ZENER	DIODE, ZENER		

MECHANICAL	
DESCRIPTION ADHESHIVE AZ BAR-ANT BAT	REFERENCE NAME SHEET ADHESHIVE AZIMUTH BAR-ANTENNA BATTERY BATTERY
BATT BRG BTN CAB CASS CHAS	BEARING BUTTON CABINET CASSETTE CHASSIS
CLR CONT CRSR CU CUSH	COLLAR CONTROL CURSOR CUSHION CUSHION
DIR DUBB FL FLY-WHL FR	DIRECTION DUBBING FRONT LOADING FLYWHEEL FRONT
FUN G-CU HDL HIMERON HINGE, BAT	FUNCTION G-CUSHION HANDOL CLOTH HINGE, BATTERY
HLDR HT-SINK IB IDLE IND, L-R	HOLDER HEAT SINK INSTRUCTION BOOKLET IDLER INDICATOR, L-R
KEY, CONT KEY, PRGM KNOB, SL LBL LID, BATT	KEY, CONTROL KEY, PROGRAM KNOB, SLIDE LABEL LID, BATTERY
LID, CASS LVR P-SP PANEL, CONT PANEL, FR	LID, CASSETTE LEVER P-SPRING PANEL, CONTROL PANEL, FRONT
PRGM PULLY, LOAD MO RBN S- SEG	PROGRAM PULLY, LOAD MOTOR RIBBON SPECIAL SEGMENT
SH SHLD-SH SL SP SP-SCREW	SHEET SHIELD-SHEET SLIDE SPRING SPECIAL-SCREW
SPACER, BAT SPR SPR-P SPR-PC-PUSH T-SP	SPACER, BATTERY SPRING P-SPRING P-SPRING, C-PUSH T-SPRING
TERM TRIG TUN VOL W	TERMINAL TRIGGER TUNING VOLUME WASHER
WHL WORM-WHL	WHEEL WORM-WHEEL


alwa



T V TT V

RVICEM

6ZG-1 6ZG-1S 6ZG-1S1 6ZG-1VZ

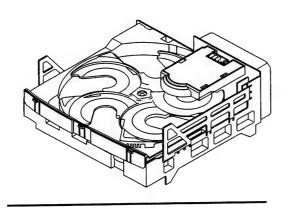

CD MECHANISM

• BASIC CD MECHANISM: 3ZG-2 C4N/C6N

• TYPE: English, Japanese


訂 正 版 CORRECTION

- 6ZG-1/6ZG-1S/6ZG-1S1/6ZG-1VZ (S/M Code No. 09-975-198-00T) の記載に 誤りがありますので訂正致します。
- This Service Manual is the "CORRECTION" and replaces 6ZG-1/6ZG-1S/6ZG-1S1/6ZG-1VZ (S/M Code No. 09-975-198-00T).

BASIC NAME		DERIVATION NAME					
	*1	D	F	-	_	-	_
6ZG-1	*2	D	F	G	_	V1	V2
3_0.	*3	D	F	_	Р	V1	
6ZG-1S		D	F	_		_	
6ZG-1S1		D	F	_		_	_
6ZG-1VZ		D	F	-	_	_	_

- 本体マニュアルはBASIC CD MECHANISMのサフィックがDERIVA-TION NAMEです。組み合わせて使用して下さい。
- This mechanism has various derivation. Derivation name is indicated by the Service Manual for eath model.


CD MAIN C.B (PATTERN SIDE)

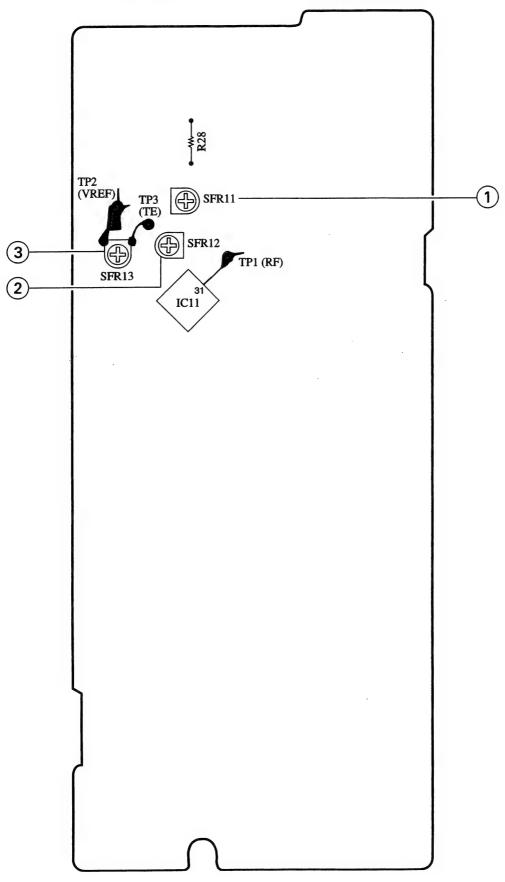


注意: ・(10:1)のプローブを接続して、調整して下さい。

・各調整には、オシロスコープの⊖側をTP2 (VREF)に接続して下さい。

1. フォーカスバイアス調整 この調整は、光学系ブロックを交換修理した場合に調 확すること。

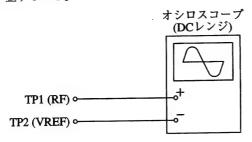

- 1) テストポイントTP1 (RF)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR11を調整する。

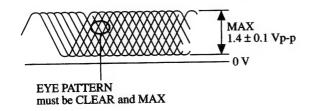


VOLT/DIV: 50mVTIME/DIV: $0.5 \mu \text{S}$

注意: レーザー電流の確認はR28 (10Ω の両端電圧) で行えます。レーザーピックアップの裏側のラベルの電流値に対して ± 6.0 mAに入っていること。




レーザー電流Iop = R28の両端電圧 10Ω

2. トラッキング・バランス調整

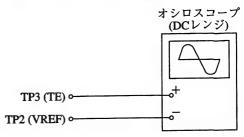

- テストポイントTP3 (TE)、TP2 (VREF) にオシロスコープを接続する。
- 2) CDテストモードを起動する。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) PAUSEキーを押し、トラッキングサーボをOFFにする。
- 5) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR12を調整する。

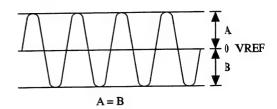

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に課整してあります。

- ゲインを上げると2軸デバイス動作時の維音が増加する。
- ゲインを下げると機械的ショックに弱くなり音飛びを 起こしやすくなる。 そしてゲインの調整がずれていると次頁の様な症状が 出ます。


ゲイン 症状	(フォーカス)	トラッキング
STOP→▶PLAY時,又 は自動選曲時(M, Mボ タンを押したとき)に	低い	低い 又は
演奏が 始まるまでの時 間が長くなる。(通常は 2秒位です。)	拉、	高い
● STOP→▶PLAY 時, 又 は自動選曲時 (M, M ボ タンを押したとき) に 演奏が 始まらないで ディスクが回転を続け る。		低い
● STOP → ▶ PLAY 時, しばらくすると回転が止まる。	低い又は高い	
		低い
● 2軸ディバイス動作時のノイズが多くなる。	高い	高い

なお、簡易調整として下記の方法があります。

--- 簡易調整 ---

注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい。

調整方法:

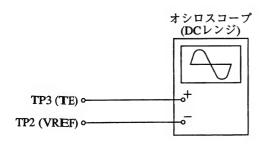


- 1. セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響 を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TE)、TP2 (VREF) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR13を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS


● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)

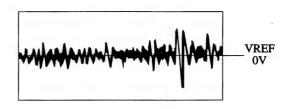

VOLT/DIV: 50mV TIME/DIV: 1mS

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)

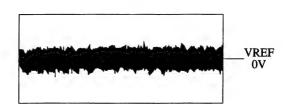

VOLT/DIV: 50mV TIME/DIV: 1mS


CD MAIN C.B (PATTERN SIDE) TP2 (VREF) SFR12 TP1 (RF) SFR13 31 IC11

Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.


• During adjustment, connect (⊖) pin of an oscilloscope to TP2 (VREF).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

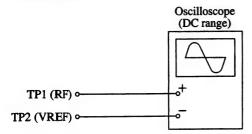


- Connect an oscilloscope to test points TP1 (RF) and TP2 (VREF).
- 2) Turn on the power switch.
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- Adjust SFR11 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.

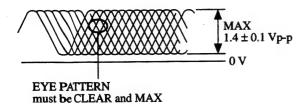


VOLT/DIV: 50mV TIME/DIV: 0.5µS

Note: The current of the laser signal can be checked with the voltages on both sides of R28 (10Ω). The difference for the specified value shown on the lavel must be within±6.0mA.

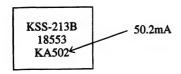


Laser current Iop =
$$\frac{\text{Voltage across R28}}{10\Omega}$$

2. Tracking Balance Adjustment

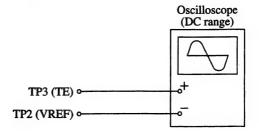

- Connect an oscilloscope to test points TP3 (TE) and TP2 (VRFF)
- 2) Start up the CD TEST mode.
- Insert test disc TCD-782 (YEDS-18) and press the PLAY button.
- 4) Press the PAUSE key and turn OFF the tracking servo.
- Adjust SFR12 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.

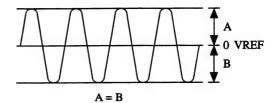

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise increases when the 2-axis device operates.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain adjustment is off, the symptoms below appear.


Gain Symptoms	(Focus)	Tracking	
The time until music starts			
becomes longer for STOP →		low or high	
▶PLAY or automatic	low		
selection (₩, ₩ buttons	IOW		
pressed.) (Normally takes			
about 2 seconds.)			
 Music does not start and 		low	
disc continues to rotate for			
STOP →►PLAY or			
automatic selection (M,)			
buttons pressed.)			
 Disc stops to rotate shortly 	low or high		
after STOP → PLAY.	low or high		
 Sound is interrupted during 			
PLAY. Or time counter		low	
display stops.			
 More noises during the 	Link	high	
2-axis device operation.	high		

The following is simple adjustment method.

- Simple adjustment -

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

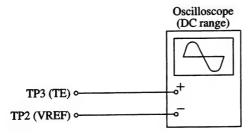


- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TE), TP2 (VREF).
- 4) Adjust SFR13 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example

Low tracking gain (The fundamental wave appears as compared with the waveform adjusted.)

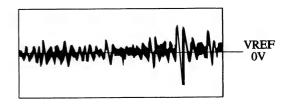


VOLT/DIV: 50mV TIME/DIV: 1mS

High tracking gain (The frequency of the fundamental wave is higher than that in low gain.)



VOLT/DIV: 50mV TIME/DIV: 1mS


VCD MAIN C.B (PATTERN SIDE)

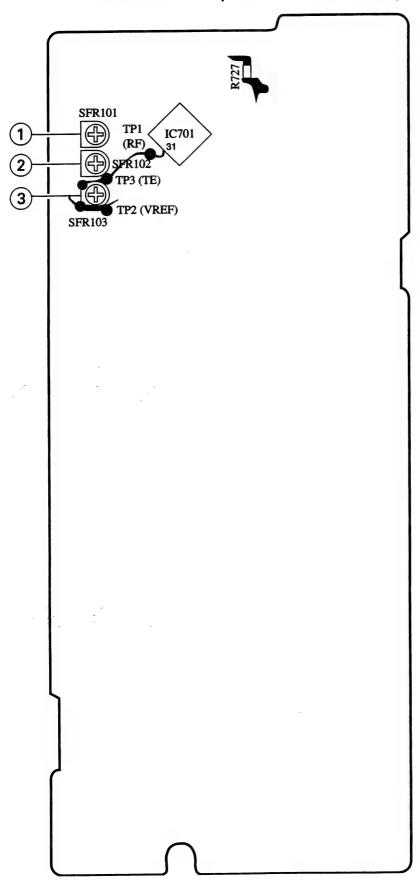


注意: ・ (10:1) のプローブを接続して、調整して下さい。

· 各調整には、オシロスコープの⊝側をTP2 (VREF)に接続して下さい。

1. フォーカスバイアス調整 この調整は、光学系ブロックを交換修理した場合に調 整すること。

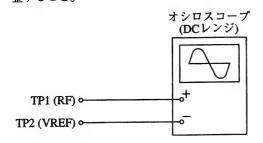

- 1) テストポイントTP1 (RF)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR101を調整する。

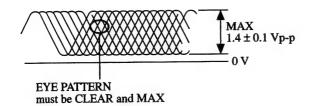


VOLT/DIV: 50mVTIME/DIV: 0.5μ S

注意: レーザー電流の確認はR727 (10Ωの両端電圧) で行 えます。レーザーピックアップの裏側のラベルの電 流値に対して±6.0mAに入っていること。




レーザー電流
$$Iop = \frac{R727$$
の両端電圧 10Ω

2. トラッキング・バランス調整

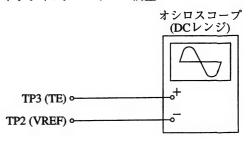

- 1) テストポイントTP3 (TE)、TP2 (VREF) にオシロスコープを接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR102を調整する。

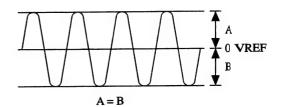

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

出ます。

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に調整してあります。

- ゲインを上げると2軸デバイス動作時の業音が増加する。
- ゲインを下げると機械的ショックに弱くなり音飛びを 起こしやすくなる。 そしてゲインの調整がずれていると次頁の様な症状が


ゲイン 症状	(フォーカス)	トラッキング
● STOP → ▶ PLAY 時, 又 は自動選曲時(M, M ボ タンを押したとき) に 演奏が 始まるまでの時 間が長くなる。(通常は 2秒位です。)	低い	低い 又は 高い
● STOP → ▶ PLAY 時, 又 は自動選曲時 (M, M ボ タンを押したとき) に 演奏が 始まらないで ディスクが回転を続け る。		低い
● STOP → ▶ PLAY 時, しばらくすると回転が止まる。	低い又は高い	
		低い
● 2 軸ディバイス動作時 のノイズが多くなる。	高い	高い

なお、簡易調整として下記の方法があります。

---- 簡易調整 ----

注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい。

調整方法:

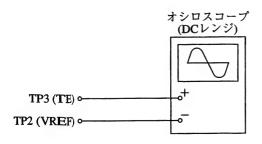

- 1. セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響 を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TE)、TP2 (VREF) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR103を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS

● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)




VOLT/DIV: 50mV TIME/DIV: 1mS

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)



VOLT/DIV: 50mV TIME/DIV: 1mS

VCD MAIN C.B (PATTERN SIDE)

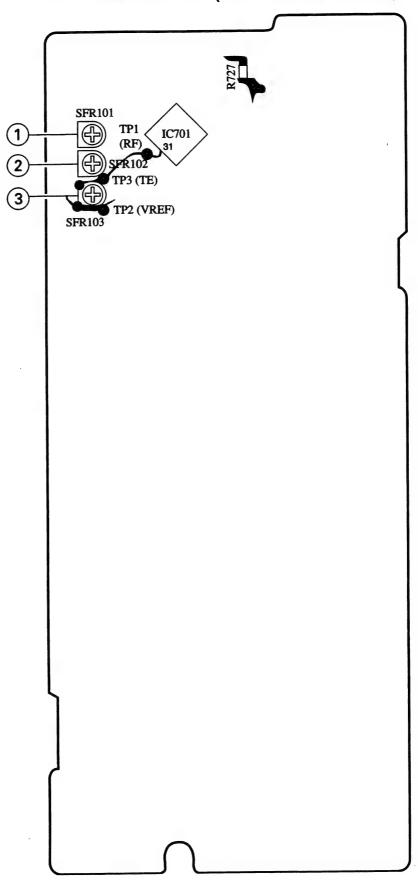


Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.

 During adjustment, connect (⊕) pin of an oscilloscope to TP2 (VREF).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

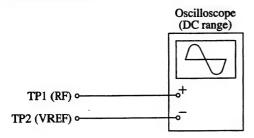

- Connect an oscilloscope to test points TP1 (RF) and TP2 (VREF).
- 2) Turn on the power switch.
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 4) Adjust SFR101 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.




VOLT/DIV: 50mV TIME/DIV: 0.5μS

Note: The current of the laser signal can be checked with the voltages on both sides of R727 (10Ω). The difference for the specified value shown on the lavel must be withint6.0mA.




Laser current Iop =
$$\frac{\text{Voltage across R727}}{10\Omega}$$

2. Tracking Balance Adjustment

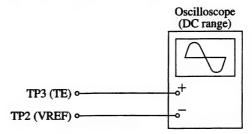

- 1) Connect an oscilloscope to test points TP3 (TE) and TP2 (VRFF)
- 2) Turn on the power switch.
- Insert test disc TCD-782 (YEDS-18) and press the PLAY button.
- 4) Adjust SFR102 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.

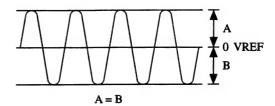

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, a these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise increases when the 2-axis device operates.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain adjustment is off, the symptoms below appear.


Gain	(Focus)	Tracking
● The time until music starts becomes longer for STOP → ▶PLAY or automatic		
selection (M, M buttons pressed.) (Normally takes about 2 seconds.)	low	low or high
 Music does not start and disc continues to rotate for STOP → PLAY or automatic selection (M, M) buttons pressed.) 		low
 Disc stops to rotate shortly after STOP →►PLAY. 	low or high	
 Sound is interrupted during PLAY. Or time counter display stops. 		low
 More noises during the 2-axis device operation. 	high	high

The following is simple adjustment method.

- Simple adjustment -

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

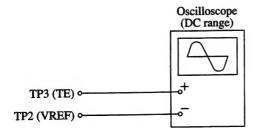

- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TE), TP2 (VREF).
- 4) Adjust SFR103 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example

Low tracking gain


(The fundamental wave appears as compared with the waveform adjusted.)




VOLT/DIV: 50mV TIME/DIV: 1 mS

High tracking gain

(The frequency of the fundamental wave is higherthan that in low gain.)

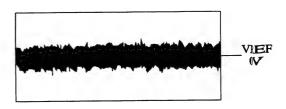

VOLT/DIV:50mV TIME/DIV: 1 mS

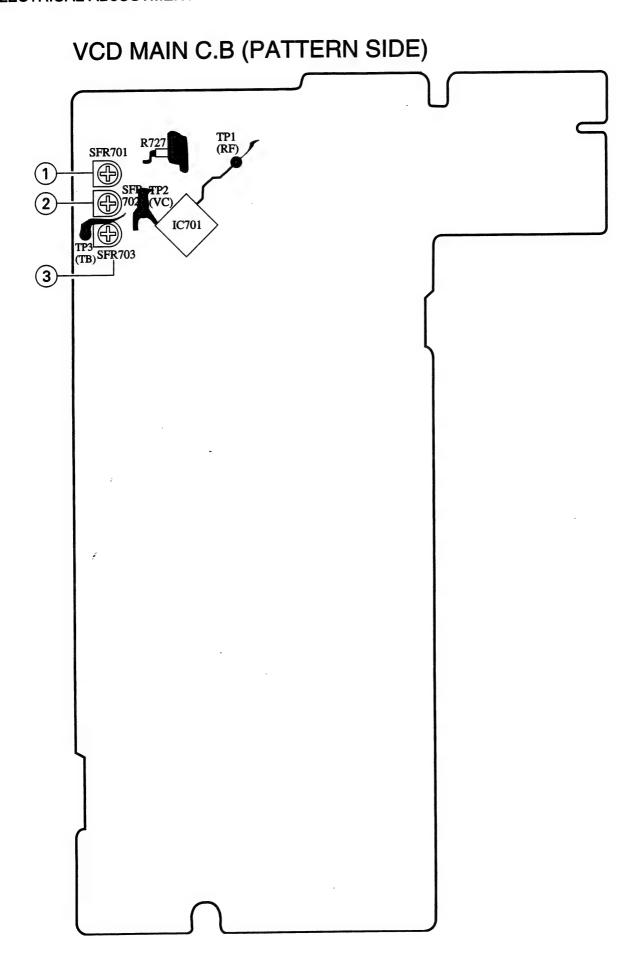


注意: ・ (10:1)のプローブを接続して、調整して下さい。


・各調整には、オシロスコープの⊖側をTP2 (VC) に接続して下さい。

1. フォーカスバイアス調整

この調整は、光学系ブロックを交換修理した場合に調整すること。

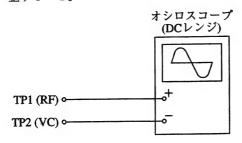

- 1) テストポイントTP1 (RF)、TP2 (VC) にオシロスコープ を接続する。
- 2) POWERスイッチをONにする。
- テストディスクTCD-782 (YEDS-18) を入れて2曲目を PLAYさせる。
- 4) オシロスコープの波形の振幅が最大となり、かつ中央 のひし形が、鮮明になるようにSFR701を調整する。

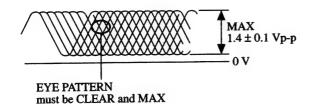


VOLT/DIV: 50mVTIME/DIV: $0.5 \mu\text{S}$

注意: レーザー電流の確認はR727 (10Ωの両端電圧)で行 えます。レーザーピックアップの裏側のラベルの電 流値に対して±6.0mAに入っていること。




レーザー電流Iop = R727の両端電圧 10Ω

2. トラッキング・バランス調整

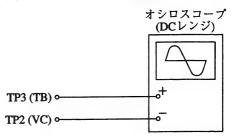

- 1) テストポイントTP3 (TB)、TP2 (VC) にオシロスコープ を接続する。
- 2) POWERスイッチをONにする。
- 3) テストディスクTCD-782 (YEDS-18) を入れて、▶PLAY 状態にする。
- 4) オシロスコープのトラバース波形が、下図のように上 下対称になるようにSFR702を調整する。

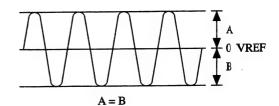

VOLT/DIV: 20mV TIME/DIV: 1mS

3. トラッキングゲイン調整

出ます。

この調整を正確に行うためには、サーボアナライザーが必要です。しかし、このゲインはマージンを持っているため、通常では少し位ずれていてもほとんど問題はありません。したがってこの調整は行わないで下さい。フォーカス/トラッキングゲインは2軸デバイス動作時の機械的雑音と機械的ショックに対するピックアップの追従性を決めています。しかし、これは互いに相反するため、両方を満足する点に調整してあります。

- ゲインを上げると2軸デバイス動作時の雑音が増加する。
- ゲインを下げると機械的ショックに弱くなり音飛びを 起こしやすくなる。 そしてゲインの調整がずれていると次頁の様な症状が


ゲイン 症状	(フォーカス)	トラッキング
● STOP → ▶ PLAY 時, 又 は自動選曲時 (M, M) ボ タンを押したとき) に 演奏が 始まるまでの時 間が長くなる。(通常は 2秒位です。)	低い	低い 又は 高い
● STOP → ▶ PLAY 時, 又 は自動選曲時 (M, M) ボ タンを押したとき) に 演奏が 始まらないで ディスクが回転を続け る。		低い
● STOP → ▶ PLAY 時, しばらくすると回転が止まる。	低い又は高い	
 ● 演奏中に音がとぎれる。又、タイムカウンターの表示が進まなくなる。		低い
● 2軸ディバイス動作時のノイズが多くなる。	高い	高い

なお、簡易調整として下記の方法があります。

---- 簡易調整 ----

注意: 正確には調整できないため、調整を行う前にボリュームの位置を憶えておいて、簡易調整を行った後のボリュームの位置と比較して、そのずれが少ないときは元のボリュームの位置に戻しておいて下さい。

調整方法:

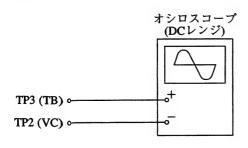

- 1. セットを水平に置く。 (セットを水平に置かないと2軸デバイスが重力の影響 を受け、調整出来ません。)
- 2. テストディスクTCD-782 (YEDS-18)を入れて2曲目を再 生する。
- 3. オシロスコープをTP3 (TB)、TP2 (VC) に接続する。
- 4. オシロスコープの波形が下図の波形になるように SFR703を調整する。(トラッキングゲイン調整)



VOLT/DIV: 50mV TIME/DIV: 1mS

● 悪い例

トラッキングゲインが低い時 (調整されている波形と比べて基本波が表れるようになる。)



VOLT/DIV: 50mV TIME/DIV: 1mS

トラッキングゲインが高い時 (ゲインが低い時と比べて基本波が高い)



VOLT/DIV: 50mV TIME/DIV: 1mS


VCD MAIN C.B (PATTERN SIDE) TP1 (RF) SFR701 1 IC701 TP3 (TB)SFR703

Note: • Connect a probe (10: 1) of the oscilloscope or the frequency counter to a test point.


 During adjustment, connect (Θ) pin of an oscilloscope to TP2 (VC).

1. Focus Bias Adjustment

Make the focus bias adjustment when replacing and repairing the optical block.

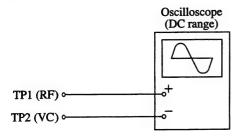


- Connect an oscilloscope to test points TP1 (RF) and TP2 (VC).
- 2) Turn on the power switch.
- Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- Adjust SFR701 so that RF signal of test point TP1 (RF) is MAX and CLEARREST.

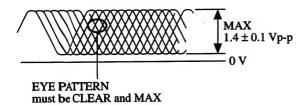


VOLT/DIV: 50mV TIME/DIV: 0.5μS

Note: The current of the laser signal can be checked with the voltages on both sides of R727 (10Ω). The difference for the specified value shown on the lavel must be within±6.0mA.

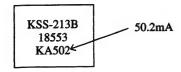


Laser current Iop = $\frac{\text{Voltage across R727}}{10\Omega}$

2. Tracking Balance Adjustment

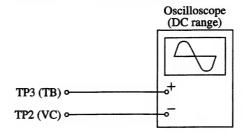

- Connect an oscilloscope to test points TP3 (TB) and TP2 (VC).
- 2) Turn on the power switch.
- 3) Insert test disc TCD-782 (YEDS-18) and press the PLAY
- 4) Adjust SFR702 so that the waveform on the oscilloscope is vertically symmetrical as shown in the figure below.

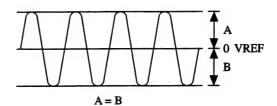

VOLT/DIV: 20mV TIME/DIV: 1mS

3. Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly. However, this gain has a margin, so even if it is slightly off, there is no problem. Therfore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise increases when the 2-axis device operates.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
 When the gain adjustment is off, the symptoms below appear.


Gain Symptoms	(Focus)	Tracking
The time until music starts		
becomes longer for STOP →		
▶PLAY or automatic	low	low or high
selection (₩, ₩ buttons	low	low or high
pressed.) (Normally takes		
about 2 seconds.)		
 Music does not start and 		
disc continues to rotate for		
STOP →►PLAY or		low
automatic selection (M, M		
buttons pressed.)		
 Disc stops to rotate shortly 	lans on bigh	
after STOP →▶PLAY.	low or high	
 Sound is interrupted during 		
PLAY. Or time counter		low
display stops.		
 More noises during the 	hich	high
2-axis device operation.	high	high

The following is simple adjustment method.

- Simple adjustment -

Note: Since the exact adjustment cannot be performed, remember the positions of the controls before the performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

Procedure:

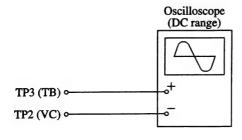


- 1) Keep the set horizontal. (If the set is not kept horizontally, this adjustment cannot be performed due to the gravity against the 2-axis device.)
- 2) Insert test disc TCD-782 (YEDS-18) and play back the second composition.
- 3) Connect an oscilloscope to TP3 (TB), TP2 (VC).
- 4) Adjust SFR703 so that the waveform appears as shown in the figure below. (tracking gain adjustment)



VOLT/DIV: 50mV TIME/DIV: 1mS

Incorrect example


Low tracking gain (The fundamental wave appears as compared with the waveform adjusted.)

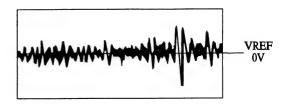

VOLT/DIV: 50mV TIME/DIV: 1mS

High tracking gain

(The frequency of the fundamental wave is higher than that in low gain.)

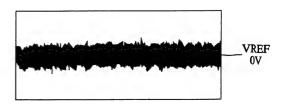

VOLT/DIV: 50mV TIME/DIV: 1mS

MODEL NO. 6ZG-1S/S1 (D, F)

TEST MODE

- CDテストモードの起動方法 CD釦 (CDファンクション) を押しながら、ACプラグを 挿入する。
 - 上記により、FL管が「TEST」表示しテストモードが起動します。
- 2. CDテストモードの解除方法 パワー釦を押す事で解除します。

3. CDテストモードの機能説明


テストモード起動後、各操作釦を押す事により下記の確認が行えます。

Mode	操作	FL表示	動作	内容
スタートモード	起動	TEET	・TEST MODE起動	・CDブロックPOWER ON
		TEST	· LASER DIODE常時発光	·APC回路確認
			(CDブロック電源ON)	・レーザー電流測定
サーチモード	1	ГΠ	・連続フォーカスサーチ	FOCUS SERVO
			(PUレンズがフルスイングを繰り	・フォーカスサーチ波形確認
			返す)	・フォーカスエラー波形確認
			*注2	(DISCの有無、FOKは監視せず。)
プレイモード	▶⊪釦	時間表示	・通常再生	· FOCUS SERVO/TRACKING
			・TOC READ出来ない場合には	SERVO
			フォーカスサーチを連続する。	· CLV SERVO/SLED SERVO
			*注2	・FOK/FZC確認
	CD釦	F ****	・自動調整値表示	・F.B/T.B/T.G調整値確認
トラバース	▶ ⊪釦	時間表示	・トラッキングサーボ OFF/ON	· TRACKING/SLED · SERVO OFF
モード			DISCをPLAY後、「▶III」を押す度	・トラッキングバランス
		•	にOFF/ONを繰り返す。 *注3	(ラジアルバランス) 確認
スレッドモード	◀ 釦	T T	・ピックアップ外周へ移動	· SLED SERVO -
(Sledモード)	▶ 釦	TEST	・ピックアップ内周へ移動	·SLED動作確認
			(CD PLAY中は通常動作) *注1	· INSIDE LIMIT SW確認

- *注1 ピックアップが最内周/最外周の位置でも、「→」または「←」 釦を押している間は、スレッドモータが回転する 為、ギヤ破損に注意して下さい。またTEST MODEでのスレッド動作は、通常動作とは異なり、「←」 釦で外周・ 「→」 釦で内周方向に移動します。
- *注2 フォーカスサーチを連続して10分以上動作し続けるとドライバーIC (IC501) が発熱し保護回路が働く為、トラッキングサーボがかからない状態となる場合があります。この様な場合には、電源を切り約10分間放熱後、再スタートして下さい。
- *注3 トラッキングサーボがOFFの状態で「▶」または「◀」釦を押した場合は、トラッキングサーボをONに戻した時に再生出来ません。この様な操作を行った場合には、「■」釦を押しスタートモードに戻して下さい。

4. 操作概要

右図の様にスタートモードから、矢印方向の流れで各 モードの操作が行えます。モード変更は、右図の流れ に従い行って下さい。

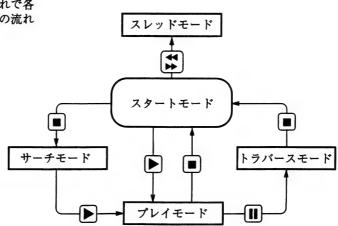


5. 自動調整値表示

当機種は、プレイスタート時にフォーカスバイアス、トラッキングバランス、トラッキングゲインの調整を自動で行いま す。テストモードを使うと、各調整値がFL表示されます。又、マニュアルで調整値を変更できます。

確認方法

- ① プレイモードから、CD釦を押すと、フォーカスバイアスモードに入ります。
- ② プレイ、ストップ、ポーズ釦を押す事により、各モードに切り替わります。
- ③ 各モードで、▶ ≪釦を押すと、調整値を変更できます。
- ④ 各モードからCD釦を押すと、プレイモードに戻ります。
- * マニュアルで変更した調整値は、次にプレイした時に解除されます。

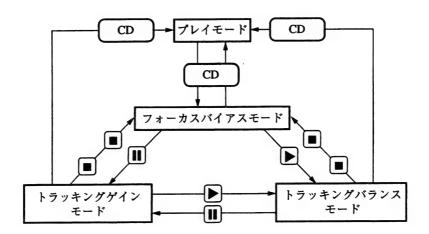

FL表示

下記の様にFLに表示され、切り換えステップは、各モードにより異なります。

- ・ フォーカスバイアス F___*H** (** 0~63、64ステップ)
- ・ トラッキングバランス B_H_H_** (** 0~15、16ステップ) ・トラッキングゲイン G_H_L** (** 0~15、16ステップ)

- How to Activate the CD Test Mode
 While pressing CD button (CD function), insert the AC plug.
 Then the FL display tube indicate "TEST" and the test mode starts up.
- How to Cancel the Test Mode
 Press the POWER button to cancel the Test mode.
- CD Test Mode Functions
 When the test mode is activated, the following mode functions can be used by pressing the respective operation keys.

Mode	Operation	FL display	Operation	Contents
Start mode	Starting up	TEST	The test mode starts up.	CD block power is turned on.
		ובםו	Laser diode turns on all the time.	APC circuit is checked.
			(CD block power is turned on.)	Laser current is measured.
Search mode	button	ГП	Continuous focus search	FOCUS SERVO
		L 11	(The pickup lens repeats the full	Focus search waveform check
			swing.)	Focus error waveform check
				(Presence/absence of disk, and FOK
			* Note 2	are not checked.)
Play mode	▶II button	Time and hours	Normal playback	FOCUS SERVO/TRACKING
		display	• When TOP cannot be read, the focus	SERVO
			search is continued.	 CLV SERVO/SLED SERVO
	L		* Note 2	 FOK/FZC check
	CD button	F ****	Automatic adjustment values are	• F.B/T.B/T.G adjustment values can
			shown.	be checked.
Traverse	▶II button	Time and hours	 Tracking servo OFF/ON 	 TRACKING/SLED • SERVO OFF
mode		display	After playback of disc, tracking servo	• Tracking balanced (radial balanced)
			OFF/ON is repeated whenever ►11 is	check
			pressed. * Note 3	
Sled mode	◄ button	TEST	Pickup moves to outer circumference.	SLED SERVO
	→ button	icbi	Pickup moves to inner circumference.	 SLED operation check
			(Normal operation during CD	 Inside limit switch check
			playback) * Note 1	

- * Note 1 Even when the pickup is located in the innermost or the outer mode position, be careful not to damage the gear because the slid motor rotates while the ▶ button or the ⋠ button is being pressed. The sled operation in the test mode is different from the normal operation that the optical pickup moves to the outer circumference when the ▶ ← ⋠ button is pressed and the optical pickup moves to the inner circumference when the ▶ → ⋠ button is pressed.
- * Note 2 When the focus search is kept operated for 10 minutes or longer continuously, there can be a case that tracking servo cannot lock in because the driver IC (IC501) heats up and the protection circuit is activated. When this trouble occurs, turn off the main power and cool down for about ten minutes, and re-start the machine.
- * Note 3 When the $\Longrightarrow \to \blacktriangleleft$ or the $\Longrightarrow \leftarrow \blacktriangleleft$ button is pressed while the tracking servo is off, the normal playback cannot be performed even the tracking servo is turned on again. When this trouble occurs, press the \blacksquare button to return to the start mode.
- 4. Outline of Operation
 Each mode can be established in the direction of the arrow starting from the START mode as shown in the right.

 SLED MODE

 START MODE

 START MODE

 TRAVERSE MODE


5. Automatic Adjustment Value Indication

All of the focus bias, tracking balance and tracking gain adjustments are automatically performed in this model when the PLAY mode is started

The adjustment values of the respective modes can be shown on the FL display when the test mode is used. These adjustment values can be changed manually too.

Check procedure

- ① Machine enters the focus bias mode when CD button is pressed from the PLAY mode.
- 2 The respective modes can be selected by pressing the PLAY or STOP or PAUSE button.
- ③ The adjustment values can be changed by pressing the → → → or → ← → button in the respective modes.
- 4 Machine returns to the PLAY mode when CD button is pressed in the respective modes.
- * The adjustment values that are changed manually, return to the preset values when the machine enters the PLAY mode next time.

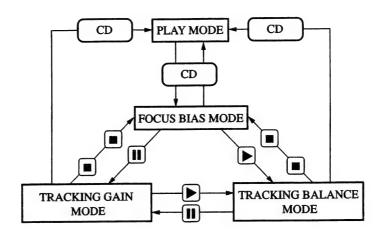

FL Display

The following messages appear on the FL display. The messages are different in each mode.

- Focus bias F___*H** (** 0-63, 64 steps)
- Tracking balance B_H_H_** (** 0-15, 16 steps)
- Tracking gain G_H_L** (** 0-15, 16 steps)

サービス技術ニュース			
番号	連絡内容		
G			
G			
G			


アイワ株式会社 AIWA CO.,LTD.

Tokyo Japan

aiwa



6ZG-1 6ZG-1S 6ZG-1S1 6ZG-1VZ

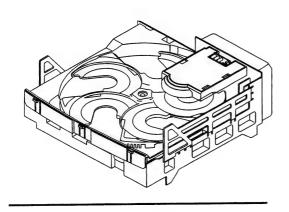

CD MECHANISM

BASIC CD MECHANISM: 3ZG-2 C4N/C6N

•TYPE: English, Japanese

CORRECTION

BASIC NAI	ME	DERIVATION NAME					
	*1	D	F	_	_	_	_
6ZG-1	*2	D	F	G	-	V1	V2
	*3	D	F	_	Р	V1	_
6ZG-1S		D	F	_		_	
6ZG-1S1		D	F	_	_		
6ZG-1VZ		D	F	_	_	_	

- This Service Manual is replaces "CORRECT Manual" (S/M Code No.09-975-198-00T).
- 本体マニュアルは(S/M Code No.09-975-198-00T)の訂正版です。


DISASSEMBLY INSTRUCTIONS

■ "ギヤ、メインカムの位相の合わせ方"は記載の誤りですので訂正します。この調整は不用です。(p.10)

ギヤ、メインカムの位相の合わせ方

- 1) CHAS, MECHのツメを下側に押し、TRAYを外す。
- 2) 下図の様にGEAR, MAIN CAMの矢印とCHAS, MECHA の点印を合わせる。
- 3) SLIDE, MECH CAMが右側の位置にある事を確認し、 TRAYをゆっくり挿し込んで下さい。

注意: GEAR, MAIN CAMの位相がズレている場合、 チャッキング及びトレーが誤動作を起こしまった。

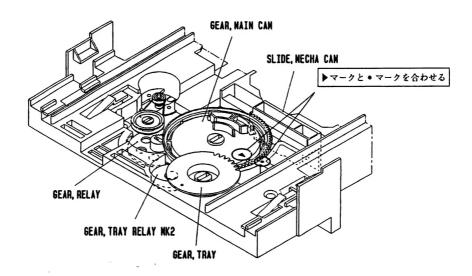


There are errors in "How to Adjust the Rotating Phase of the Gear, Main Cam", and are corrected that this adjustment is no longer necessary. (p.13)

How to Adjust the Rotating Phase of the Gear, Main Cam

- Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
- Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS, MECHA as shown below.
- Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

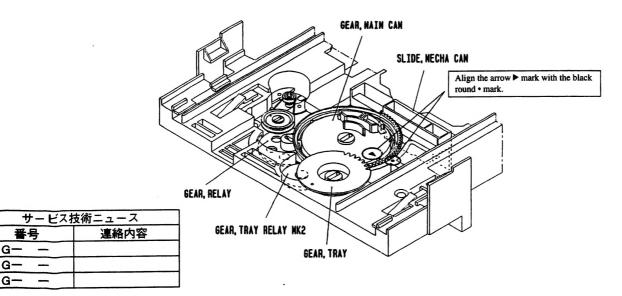

アイワ株式会社 AIWA CO.,LTD. 9121 62

Tokyo Japan





Service Information SI-97-020-025

Hürth,den 22.08.1997

Modell:

6ZG-2 Mechanik (MD-Mechanik)

Problem:

Disc Error wird angezeigt, oder es ist ein schleifendes Geräusch zu hören

(im MD-Betrieb).

Symptom:

Bei Geräten mit genannter Mechanik können folgende Probleme auftreten:

- Nach Einlegen der Disc wird "Disc-Error" angezeigt und die Disc wird ausgeworfen.

- Beim Einlesen oder bei Wiedergebe berührt die Disc die Mechanik und ein

schleifendes Geräusch ist hörbar.

Werden diese Symptome vom Kunden beanstandet, muß folgende Modifikation

durchgeführt werden.

Abhilfe:

Prüfen Sie bitte Folgendes:

1.) Hebt sich die Disc nach dem einlegen vom Referenz Pin

2.) Arbeitet die Lademechanik weiter, auch wenn keine Disc eingelegt ist?

3.) Ist der HLDR ASSY CTRG 1mm oder mehr oberhalb des Chassis?

In diesen Fällen muß unten aufgeführtes Teil gewechselt werden.


Normalerweise beträgt der Abstand zwischen HLDR ASSY CTRG und der Mechanik ca. 0,2 mm. Der Abstand kann allerdings bis zu 0,5 mm betragen, ohne das Fehlfunktionen auftreten.

A.) Wird obengenanntes Teil erneuert, muß der SPR- E Lever Shutter nicht beigefügt

B.) Die Höhe des beweglichen Hebels (tritt oben durch den HLDR ASSY CTRG hervor) ist zwischen altem und neuem Teil unterschiedlich. Deshalb kommt der Knopf in Kontakt mit HLDR ASSY LOADING und der HLDR ASSY Loading kann nicht befestigt werden. Wird HLDR ASSY erneuert, muß der HLDR ASSY LOADING ebenfalls erneuert werden, wenn er nicht, wie beschrieben, ein rechteckiges Loch an Punkt A besitzt.

ET Nr. 86-ZG2-202-910 86-ZG2-250-410

ET Name HLDR ASSY CTRG HLDR ASSY LOADING

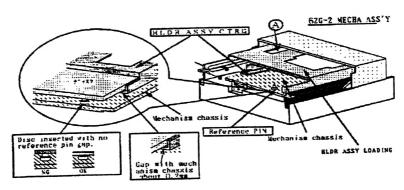

AIWA DEUTSCHLAND GMBH Aiwa-Platz 1 50354 Hürth

Tel.: 02233/9678433 Fax.: 02233/9678490





Service Information SI-97-031-029

Hürth,den 07.10.1997

Modell:

Mechanik 6 ZG-1

Problem:

5 CD Mechanik, Lever Load bricht.


Inhalt:

Ist der Lever Load beschädigt muß folgende Abhilfe durchgeführt werden.

Abhilfe:

Der Slider Load muß muß zusammen mit dem Lever Load erneuert werden. Der neue Lever Load ist mechanisch anders aufgebaut, so daß beide Teile getauscht werden müssen. Die Endnummern der beiden Teile unterscheiden sich, so daß auf die richtige

Nummer geachtet werden muß!!!

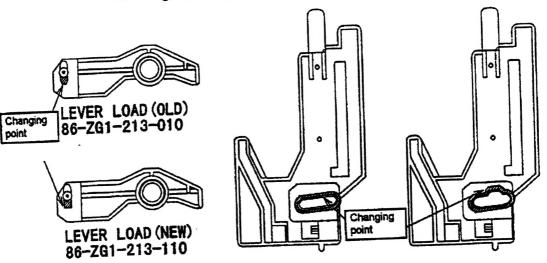

SLIDER LOAD (OLD) 86-ZG1-212-210 SLIDER LOAD (NEW) 86-ZG1-212-310

G1-212- 21 0	86-ZG1-212- <u>310</u>
ia	nein
ia	ja
	ja ja

ET- Name Lever Load Slider Load ET- Nr. 86-ZG1-213-110 86-ZG1-212-310

> AIWA DEUTSCHLAND GMBH Aiwa-Platz 1 50354 Hürth

Tel.: 02233/9678433 Fax.: 02233/9678490





Service Information SI-97-049-044

Hürth, den 08.01.1998

Modell:

6ZG-1SDFNM (CD Mechanik) z.B. Z-VR750/ 950/ Z-R800

Problrm:

Unerwartetes stoppen bei CD Random Wiederholfunktion.


Abhilfe:

Ändern Sie den Widerstand R117 auf der CD Platine von $100 \mathrm{K}\Omega$ auf $68 \mathrm{K}\Omega$.

Ref. Nr. R117


ET Name C-Res, S68K- 1/10W J

ET Nr. 88-118-683-010

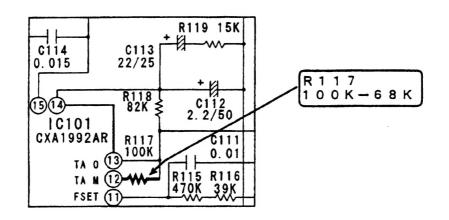

R117

Pattern diagram

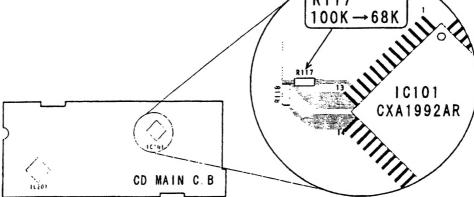

AIWA DEUTSCHLAND GNBH Aiwa-Platz 1 50354 Hürth

Tel.: 02233/9678433 Fax.: 02233/9678490